



STARTING AND IGNITION

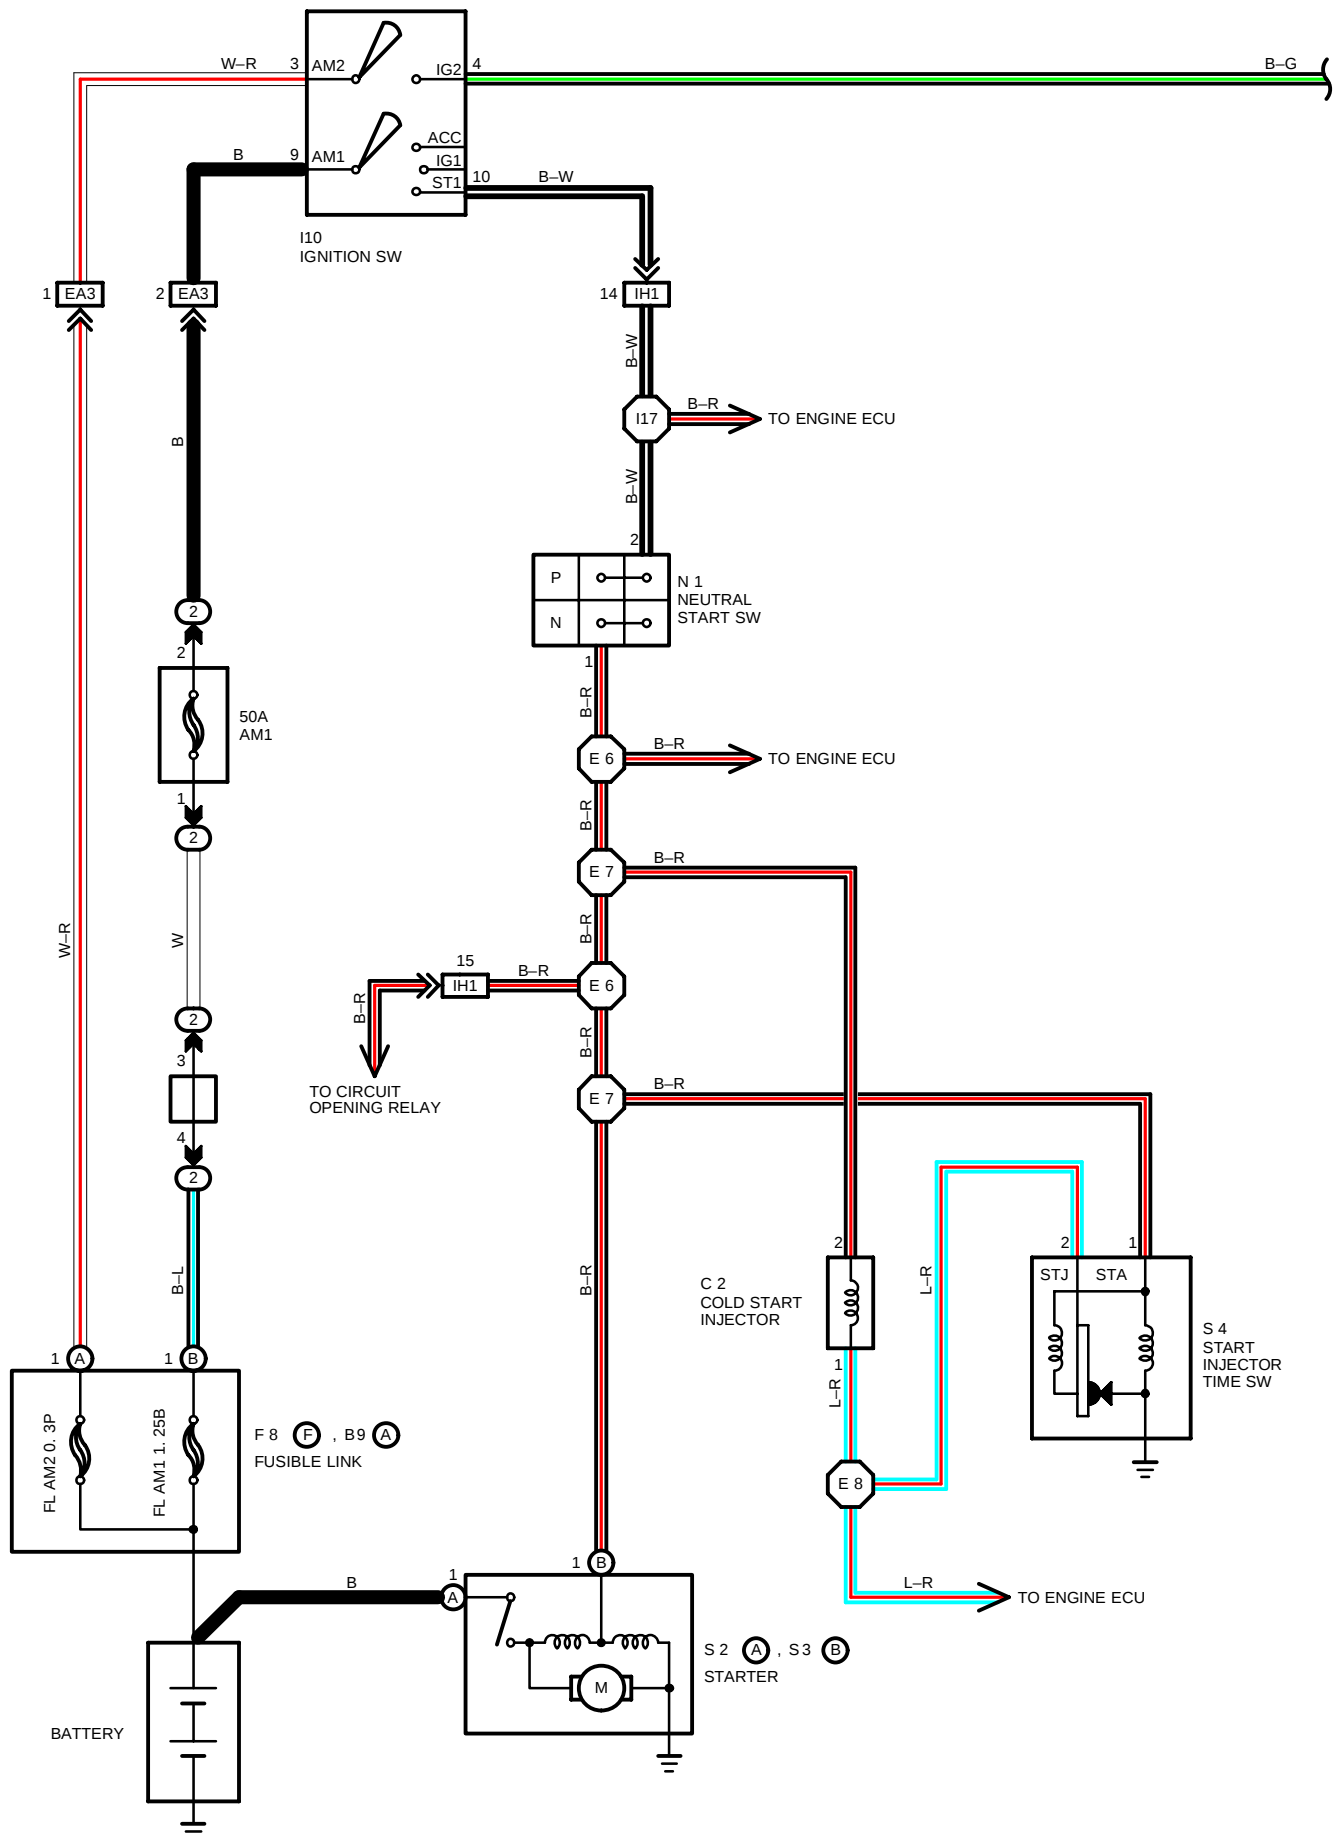

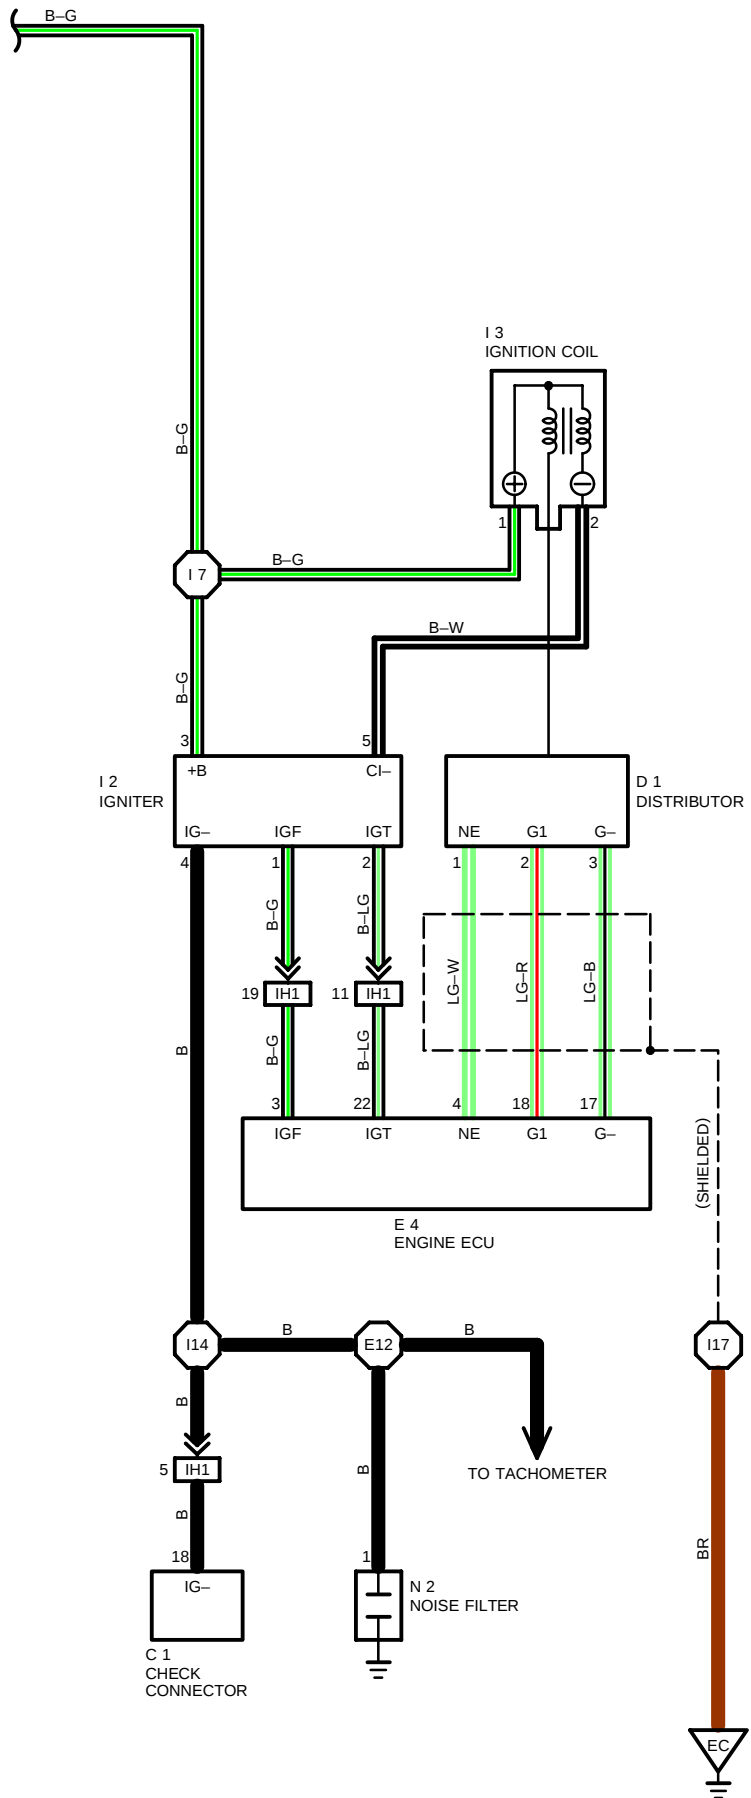

STARTING AND IGNITION

SERVICE HINTS

I10 IGNITION SW

9-10 : CLOSED WITH IGNITION SW AT **ST** POSITION

3-4 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

STARTER

POINTS CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT **ST** POSITION

N 1 NEUTRAL START SW

1-2 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

C 2 COLD START INJECTOR

1-2 : APPROX. **12** VOLTS WHILE START INJECTOR TIME SW IS CLOSED AND STARTER CRANKING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 1	21	F 9 A	21	N 2	21
C 2	21	I 2	21	S 2 A	21
D 1	21	I 3	21	S 3 B	21
E 4	22	I10	22	S 4	21
F 8 B	21	N 1	21		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	24	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IH1	26	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	24	AIR INTAKE CHAMBER


⬡ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6			I 7		
E 7	24	ENGINE WIRE	I14	26	COWL WIRE
E 8			I17	26	ENGINE WIRE
E12	24	COWL WIRE			

C 1 DARK GRAY

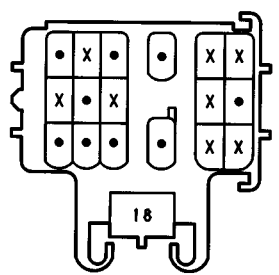


C 2 BLACK

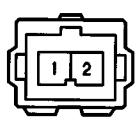


D 1 DARK GRAY



E 4 DARK GRAY

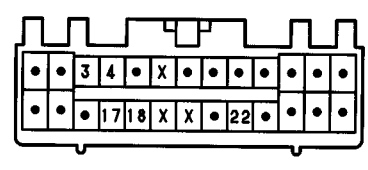


F 8 (B)

 

F 9 (A) GRAY




I 2 BLACK

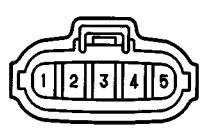

I 3 BLACK



I10 GRAY

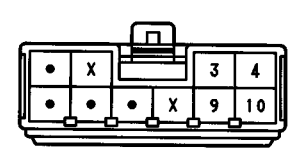


N 1 GRAY



N 2



 S 2 (A)



S 3 (B) GRAY



S 4 BLACK

