


STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

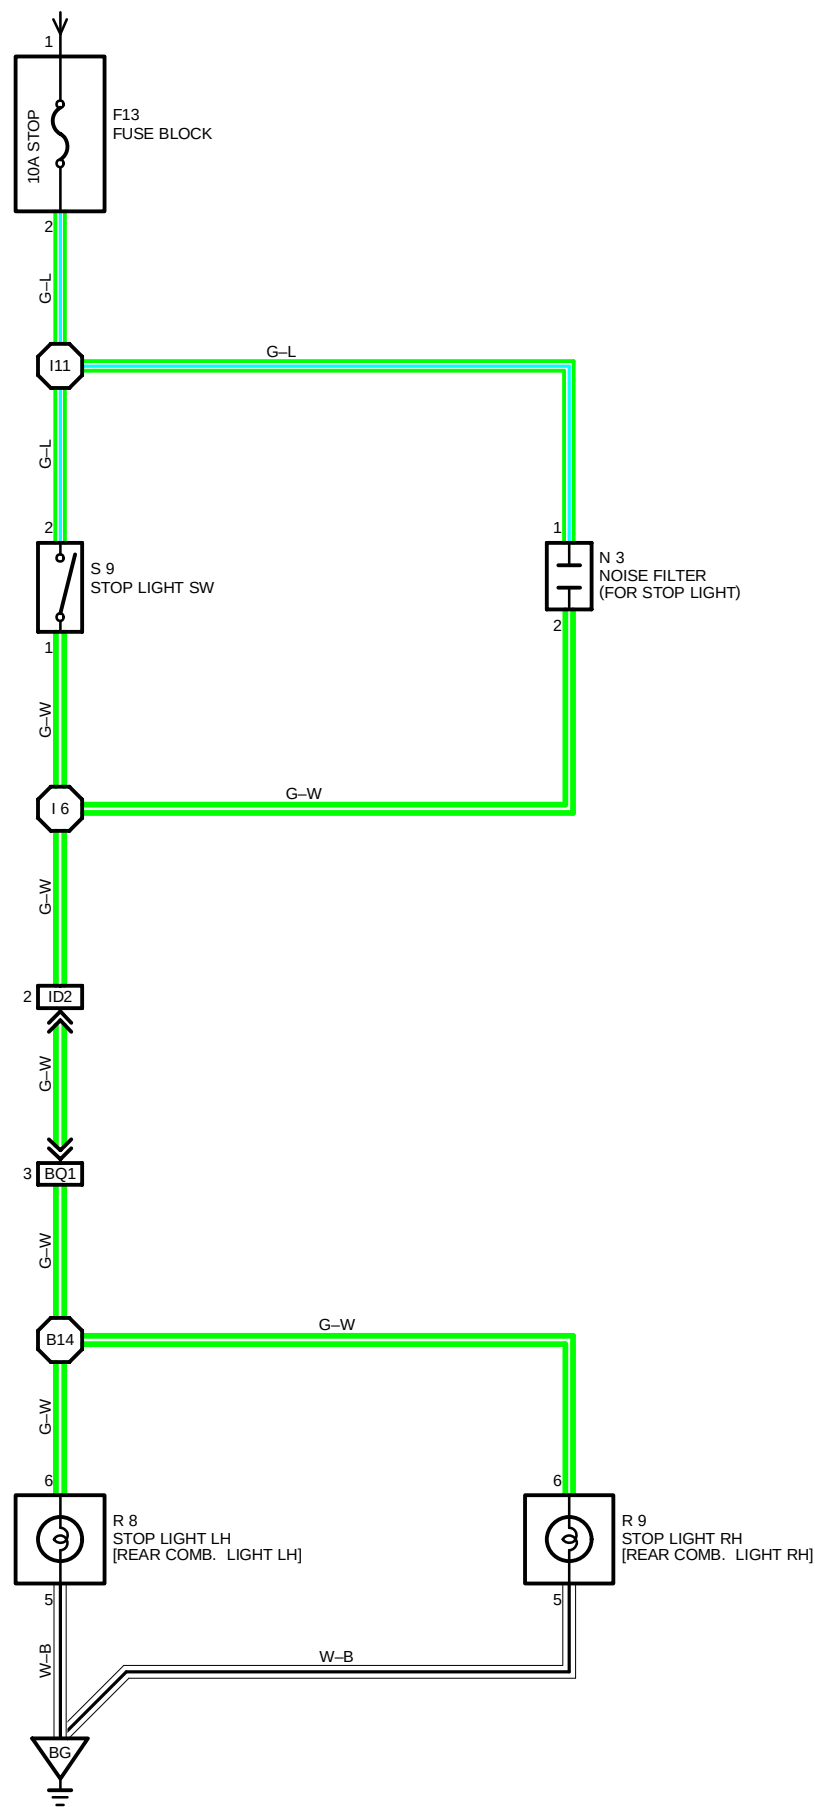

SERVICE HINTS

S 9 STOP LIGHT SW

1-2: CLOSED WITH BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F13	23	R 8	23	S 9	22
N 3	22	R 9	23		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	26	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BQ1	28	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	28	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 6	26	COWL WIRE	B14	30	FLOOR NO. 3 WIRE
I11					

F13

N 3 BLACK

R 8, R 9

S 9 BLACK

(SEE PAGE 20)

