


TAILLIGHT

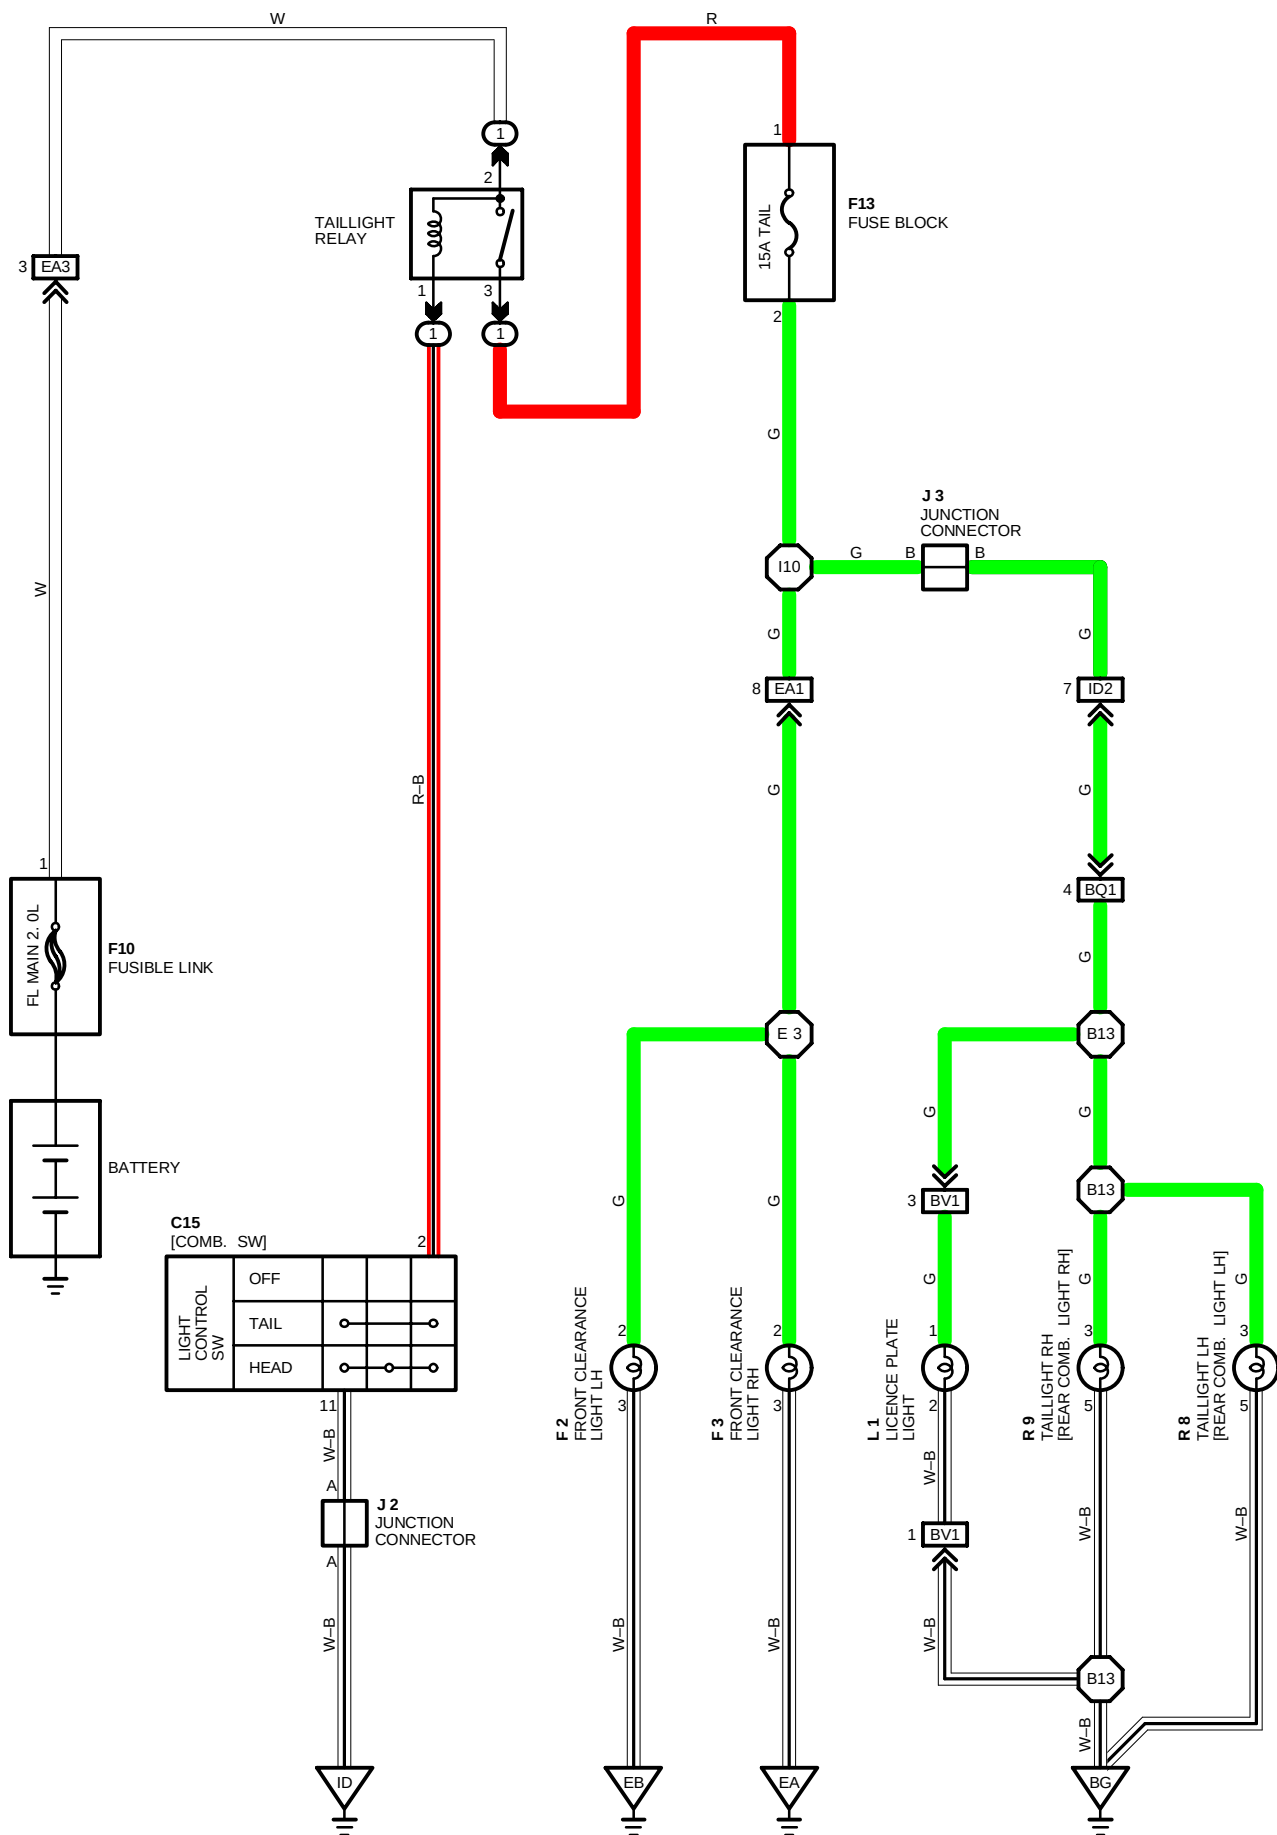

SERVICE HINTS

TAILLIGHT RELAY

(1) 2– (1) 3: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C15	22	F13	22	R 8	23
F 2	21	J 2	22	R 9	23
F 3	21	J 3	22		
F10	21	L 1	23		

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS




CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	24	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		
ID2	26	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BQ1	28	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BV1	30	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)

▽ : GROUND POINTS





CODE	SEE PAGE	GROUND POINTS LOCATION
EA	24	FRONT SIDE OF RIGHT FENDER
EB	24	FRONT SIDE OF LEFT FENDER
ID	26	LEFT KICK PANEL
BG	28	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 3	24	ENGINE ROOM MAIN WIRE	B13	30	FLOOR NO. 3 WIRE
I10	26	COWL WIRE			

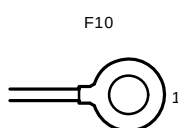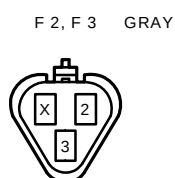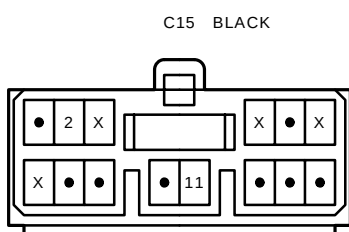

F13
(SEE PAGE 20)

  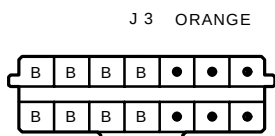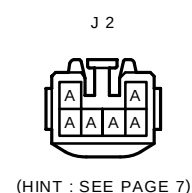

(HINT : SEE PAGE 7)