


TURN SIGNAL AND HAZARD WARNING LIGHT

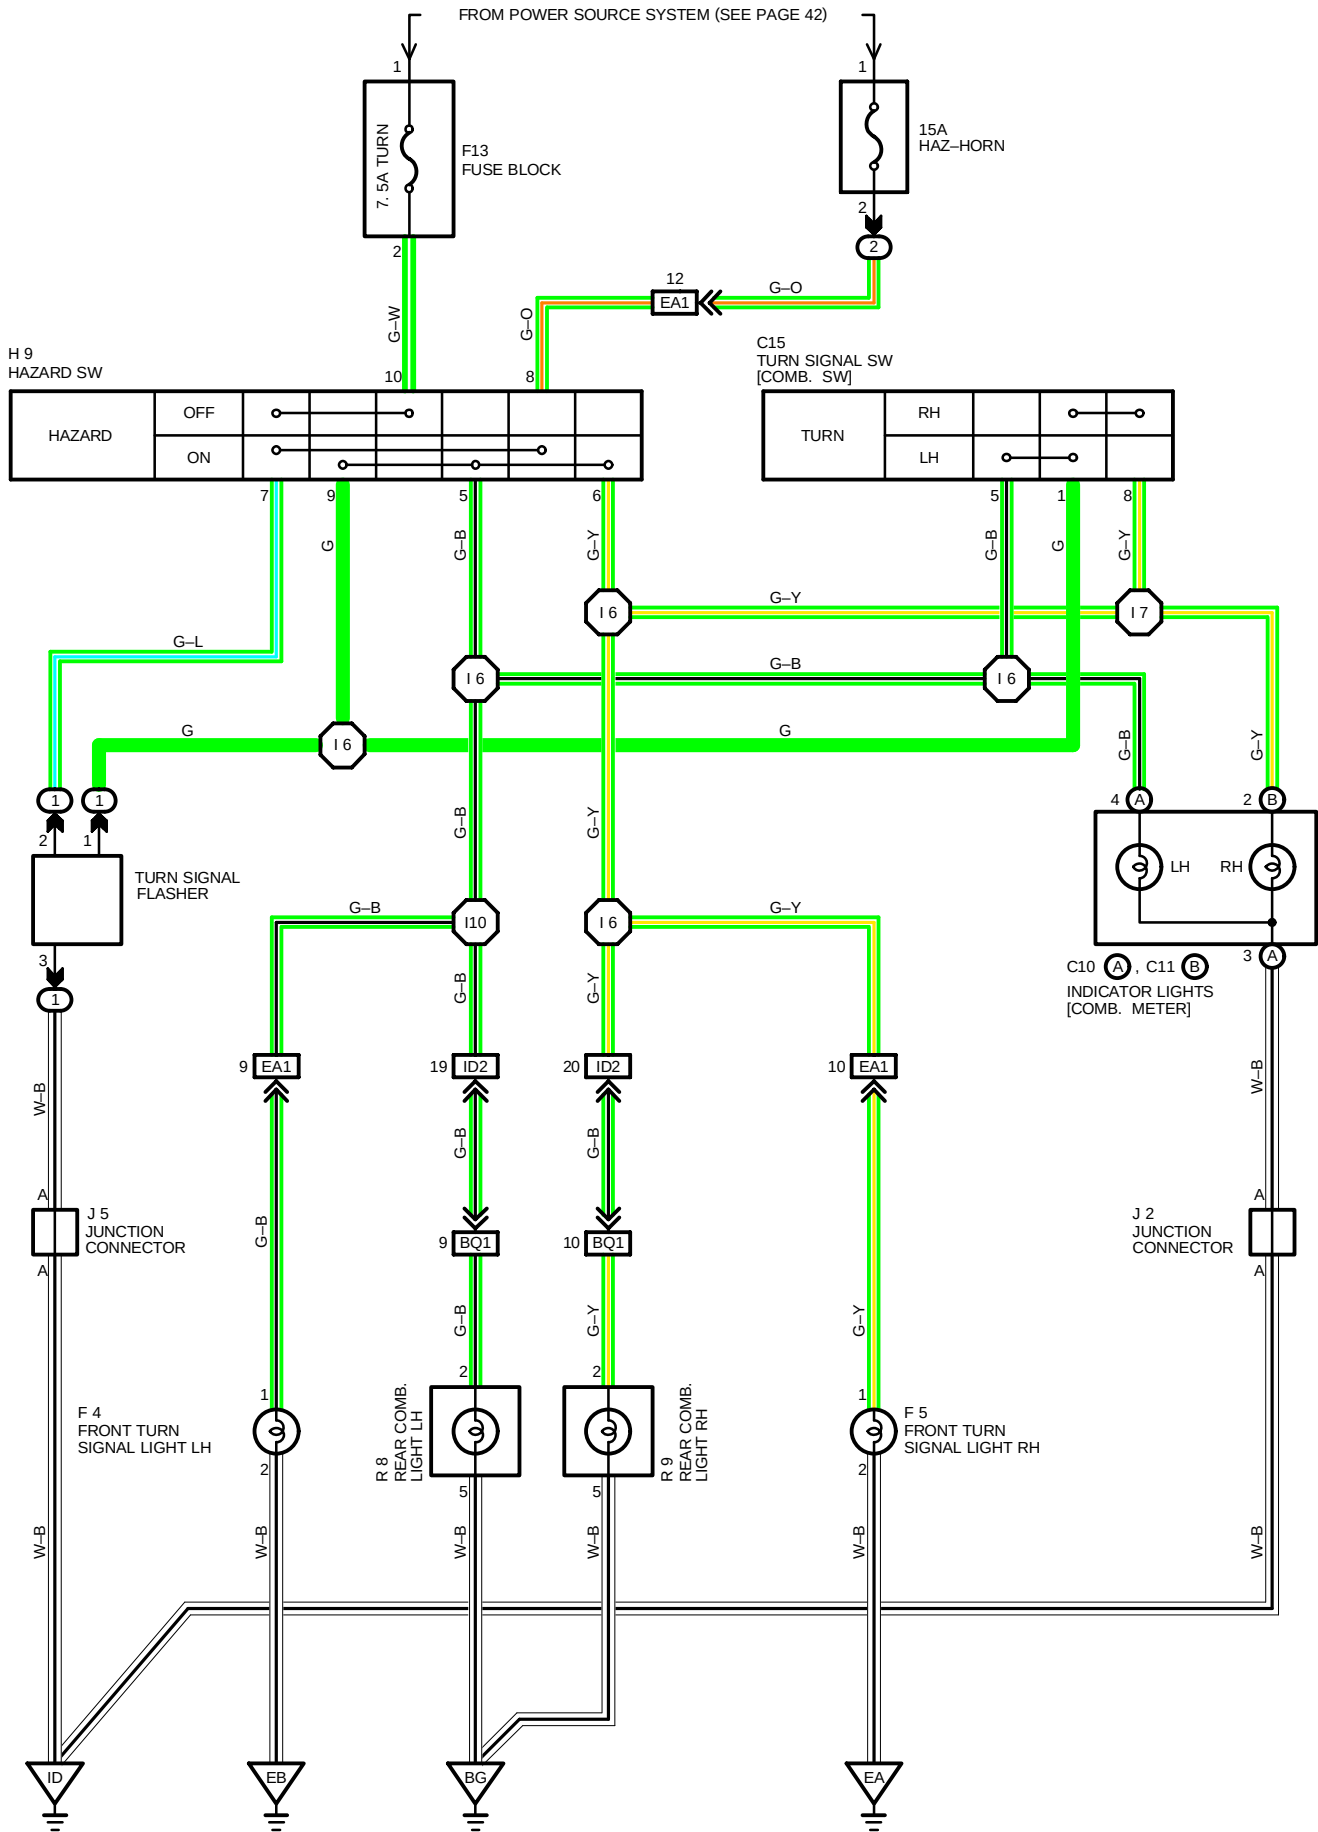

SERVICE HINTS

TURN SIGNAL FLASHER

- (1) 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON
 (1) 1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, OR WITH HAZARD SW ON
 (1) 3-GROUND: ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C10	A	22	F 5	21	J 5	22
C11	B	22	F13	22	R 8	21
C15		22	H 9	22	R 9	21
F 4		21	J 2	22		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	24	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID2	26	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BQ1	28	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	24	FRONT SIDE OF RIGHT FENDER
EB	24	FRONT SIDE OF LEFT FENDER
ID	26	LEFT KICK PANEL
BG	28	LOWER BACK PANEL CENTER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 6	26	COWL WIRE	I10	26	COWL WIRE
I 7					

 
C10 (A) BROWN



C11 (B) GRAY

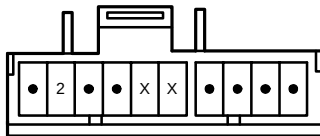

C15 BLACK

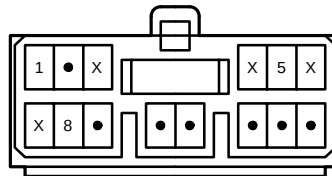


F 4, F 5 GRAY



F13

(SEE PAGE 20)

 H 9



J 2, J 5



R 8, R 9



(HINT : SEE PAGE 7)