


AIR OUTLET SERVOMOTOR


AIR OUTLET SERVOMOTOR REMOVAL

AC09K-03

- 1. DISCONNECT NEGATIVE CABLE FROM BATTERY
- 2. REMOVE INSTRUMENT LOWER FINISH PANEL
- 3. REMOVE DUCT HEATER TO REGISTER NO. 2

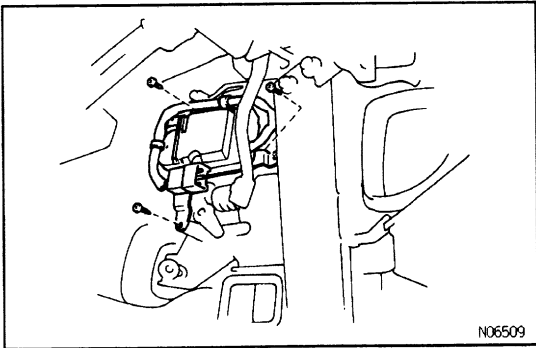

- 4. REMOVE AIR OUTLET SERVOMOTOR
 - (a) Disconnect the servomotor connector.
 - (b) Remove the three screws and the servomotor.

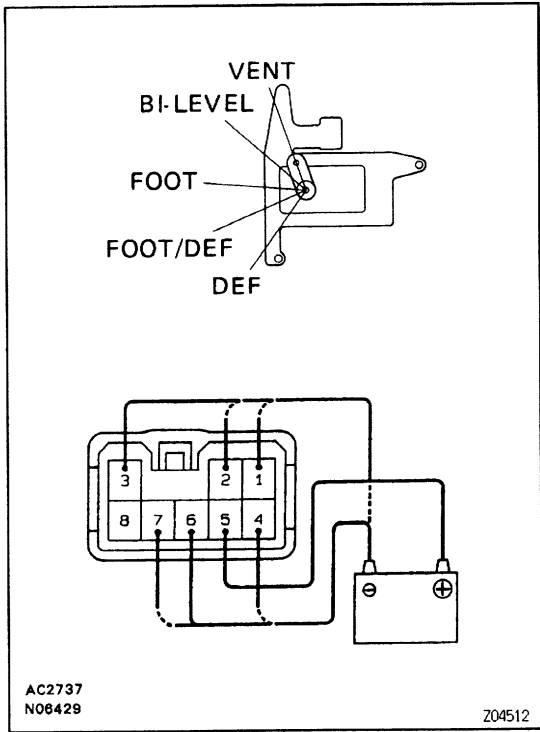

AIR OUTLET SERVOMOTOR INSPECTION

INSPECT SERVOMOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 6.
- (b) Connect the negative (-) lead from the battery to each terminal and check that the arm rotates to each position as shown.

Connected terminal	Position
1	VENT
2	Bi-Level
3	FOOT
4	FOOT/DEF
7	DEF

If operation is not as specified, replace the servomotor.

AC09M-02

AIR OUTLET SERVOMOTOR INSTALLATION

INSTALL AIR OUTLET SERVOMOTOR

Install by following the removal procedure in reverse order.