


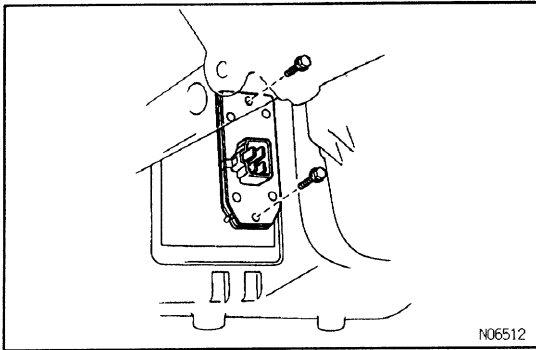

BLOWER RESISTOR

BLOWER RESISTOR REMOVAL

ACOMC-01

1. DISCONNECT NEGATIVE CABLE FROM BATTERY
2. REMOVE GLOVE COMPARTMENT DOOR
3. REMOVE BLOWER RESISTOR
 - (a) Disconnect connector from the blower resistor.
 - (b) Remove two screws and the blower resistor.

ACOMD-01


BLOWER RESISTOR INSPECTION

INSPECT BLOWER RESISTOR CONTINUITY

H-4-2	Terminal	1	3	2	4
	Condition				
	Constant				

V00190

If continuity is not as specified, replace the blower resistor.

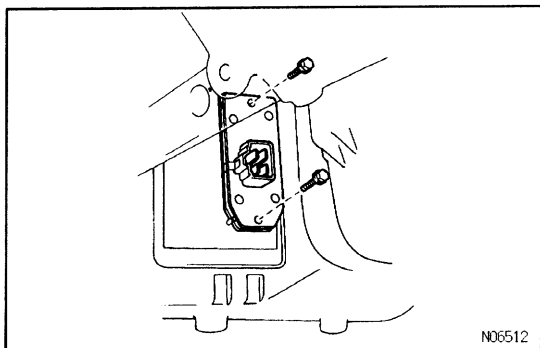

BLOWER RESISTOR INSTALLATION

ACOME-01

1. INSTALL BLOWER RESISTOR
 - (a) Install blower resistor with two screws.
 - (b) Connect the connector to the blower resistor.
2. INSTALL GLOVE COMPARTMENT DOOR
3. CONNECT NEGATIVE CABLE TO BATTERY