


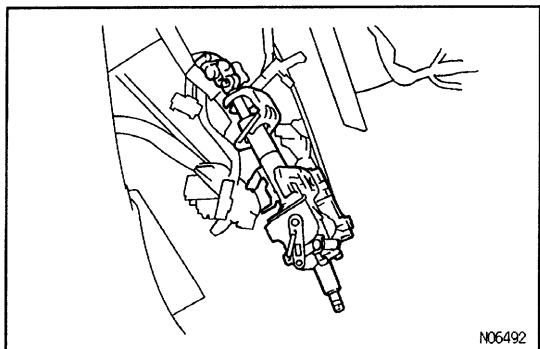


N06492

BLOWER UNIT

BLOWER UNIT REMOVAL

AC08L-01

1. DISCONNECT NEGATIVE CABLE FROM BATTERY
2. REMOVE INSTRUMENT PANEL
3. DISCONNECT CONNECTORS AND REMOVE BOLTS AND NUTS, THEN PLACE STEERING COLUMN ON FLOOR

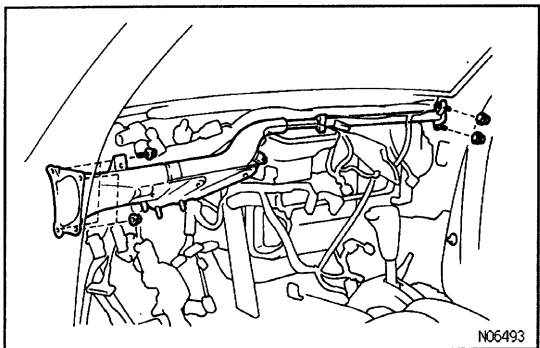


N06493

4. REMOVE INSTRUMENT PANEL REINFORCEMENT

Remove the four nuts and two bolts, then remove the instrument panel reinforcement.

5. REMOVE COOLING UNIT

(See page [AC-30](#))

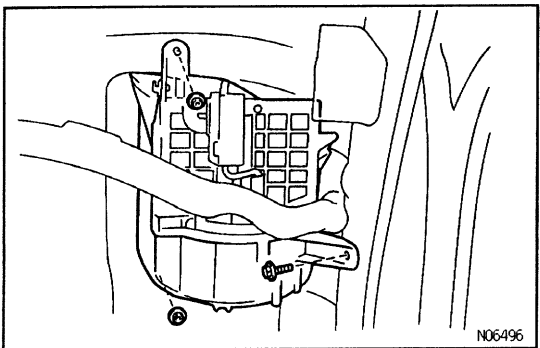

N06496

6. REMOVE BLOWER UNIT

- (a) Disconnect the connector from the blower motor.
- (b) Disconnect the connector from the air inlet servo-motor.
- (c) Remove the bolt and two nuts, then remove the blower unit.

BLOWER UNIT INSTALLATION

AC08W-03

1. INSTALL BLOWER UNIT

- (a) Install the blower unit with the two nuts and a bolt.
- (b) Connect the connector to the air inlet servomotor.
- (c) Connect the connector to the blower motor.

2. INSTALL COOLING UNIT

(See page [AC-32](#))

3. INSTALL INSTRUMENT PANEL REINFORCEMENT

Install the instrument panel reinforcement with the four nuts and two bolts.

4. INSTALL STEERING COLUMN

5. INSTALL INSTRUMENT PANEL

6. CONNECT NEGATIVE CABLE TO BATTERY