


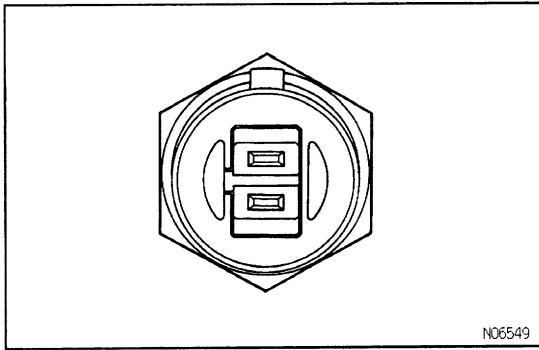


ENGINE COOLANT TEMPERATURE CUT SWITCH

ENGINE COOLANT TEMPERATURE CUT SWITCH INSPECTION

INSPECT SWITCH CONTINUITY

Check the continuity between terminals of the switch shown below.

If continuity is not as specified, replace the switch.

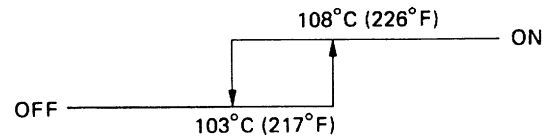

V02084