



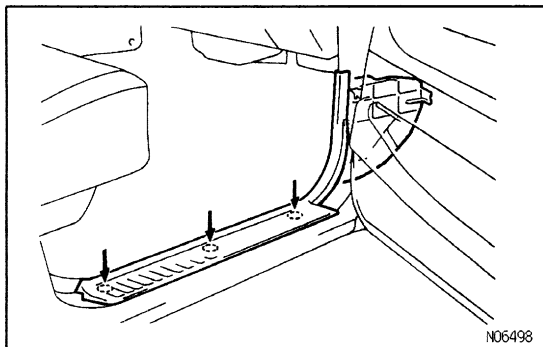

FRONT BLOWER MOTOR BLOWER MOTOR REMOVAL


ACOM3-01

1. DISCONNECT NEGATIVE (-) CABLE FROM BATTERY
2. REMOVE RH SCUFF PLATE

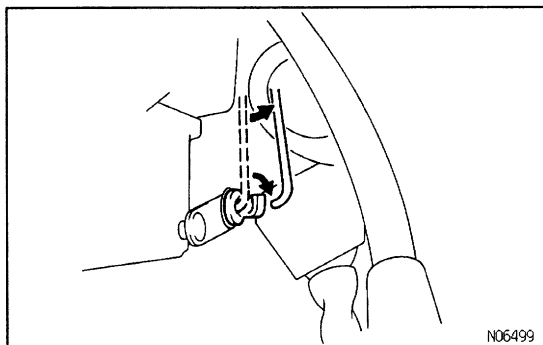


3. REMOVE BLOWER MOTOR

- (a) Disconnect the link from the lower cover.

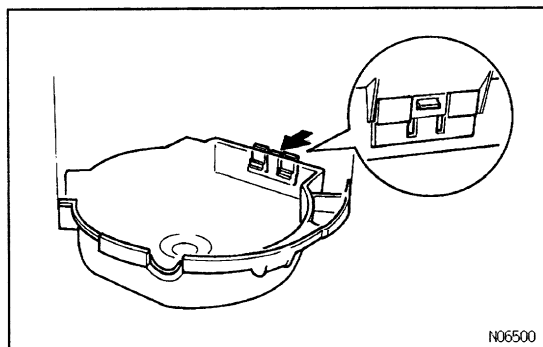

- (b) Remove the two screws, then remove the lower cover while pushing the locking protrusion as shown.
- (c) Disconnect the connector from the blower motor.
- (d) Remove the three screws and the blower motor.

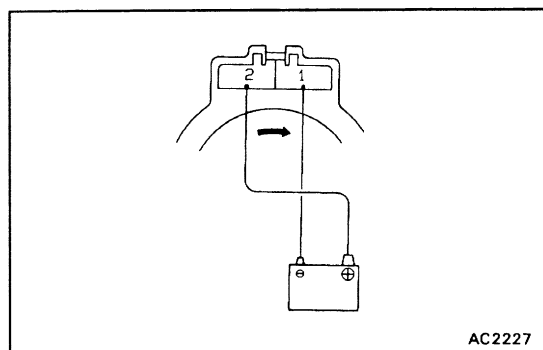


BLOWER MOTOR INSPECTION

AC09D-03

INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the motor operation is smooth.

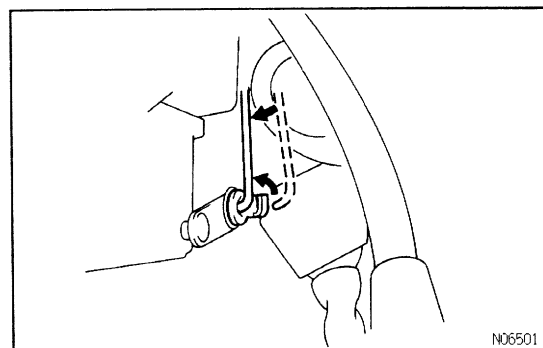

BLOWER MOTOR INSTALLATION

ACOM4-01

1. INSTALL BLOWER MOTOR

- (a) Install the blower motor with the three screws.
- (b) Connect the connector to blower motor.
- (c) Install the lower cover with the two screws.
- (d) Connect the link to the damper.

2. INSTALL SCUFF PLATE

3. CONNECT NEGATIVE (-) CABLE TO BATTERY