

HEATER UNIT


HEATER UNIT REMOVAL

1. REMOVE COOLING UNIT

(See page [AC-30](#))

2. DRAIN ENGINE COOLANT FROM RADIATOR

HINT: It is not necessary to drain out all the coolant.

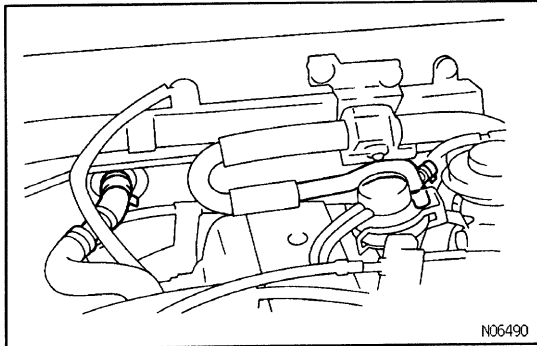


3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

(a) Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.


(b) Disconnect the water hoses.

4. REMOVE PIPE GROMMETS


5. REMOVE INSTRUMENT PANEL

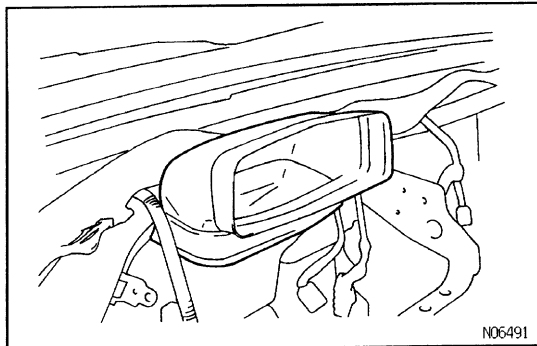

6. REMOVE DUCT HEATER TO REGISTER NO. 3

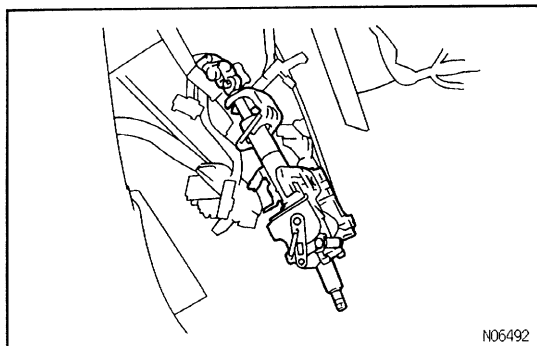


7. DISCONNECT CONNECTORS AND REMOVE BOLTS AND NUTS, THEN PLACE STEERING COLUMN ON FLOOR

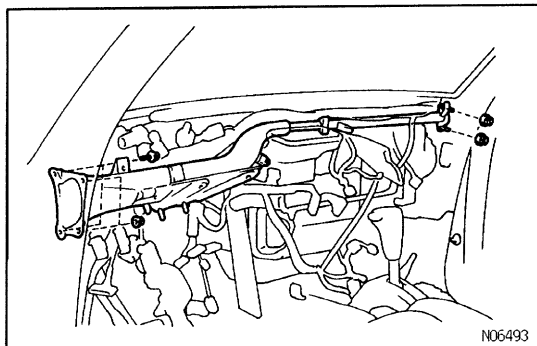


8. REMOVE INSTRUMENT PANEL REINFORCEMENT

Remove the four nuts and two bolts, then remove the instrument panel reinforcement.

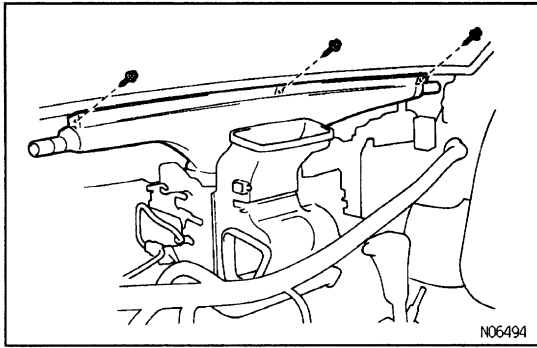


9. REMOVE CENTER DEFROSTER NOZZLE

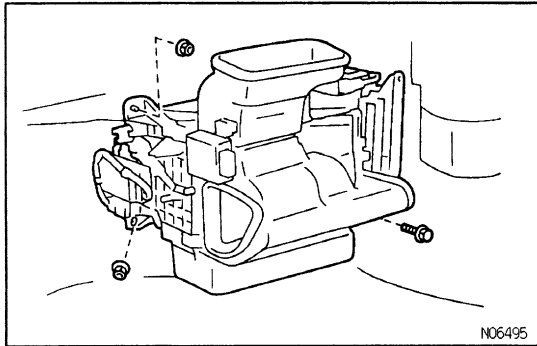

10. REMOVE HEATER UNIT

Remove the two nuts and a screw, then remove heater unit.

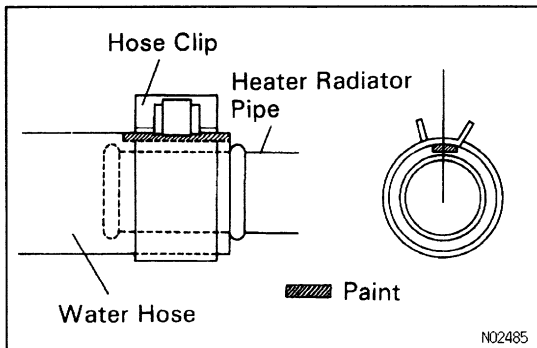

HEATER UNIT INSTALLATION

ACOLR-01

Install by following the removal procedure in reverse order.

HINT:

- Push the water hose onto the heater radiator pipe as far as the ridge on the pipe.
- Install the hose clip in a position as shown to the left.