



REAR BLOWER MOTOR BLOWER MOTOR REMOVAL

1. DISCONNECT NEGATIVE (-) CABLE FROM BATTERY
2. REMOVE FRONT RH SEAT

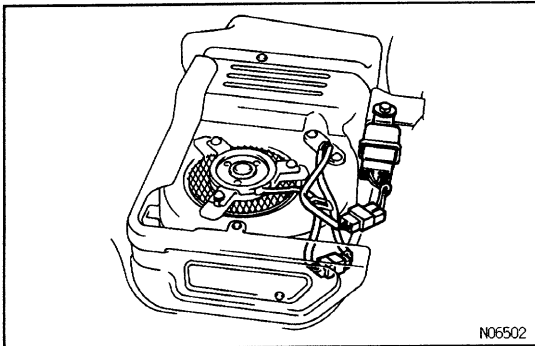


3. REMOVE BLOWER MOTOR


- (a) Disconnect the connectors from the blower motor and rear heater relay.
- (b) Remove the bolt and rear heater relay.

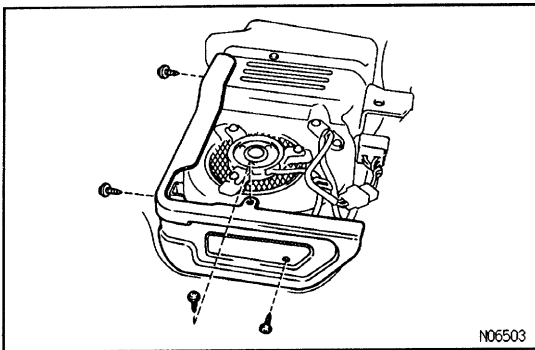

- (c) Remove the four screws and side cover.

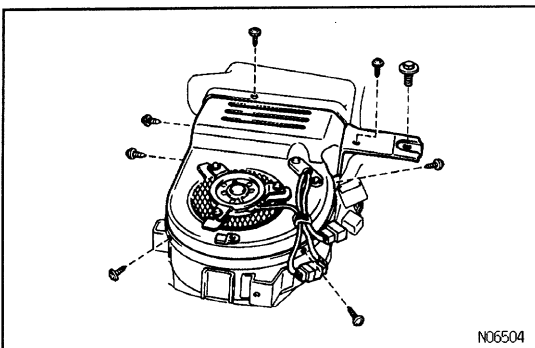

- (d) Remove the bolt and seven screws, then remove the upper cover with the blower motor.
- (e) Remove the three screws and the blower motor.

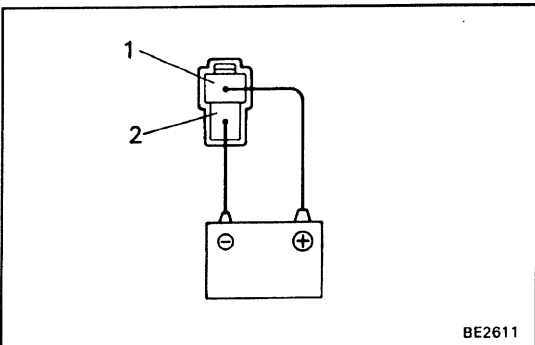

BLOWER MOTOR INSPECTION


INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operation is smooth.


BLOWER MOTOR INSTALLATION

1. INSTALL BLOWER MOTOR


- (a) Install the blower motor to the upper cover with the three screws.

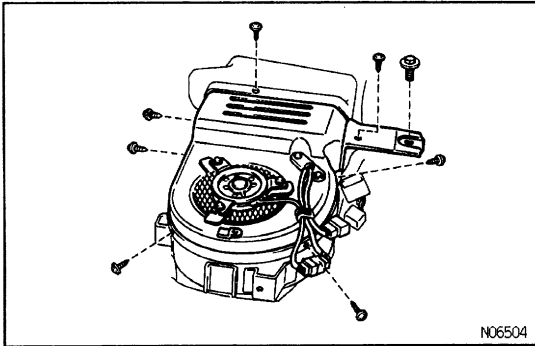

- (b) Install the upper cover to the rear heater assembly with the bolt and seven screws.

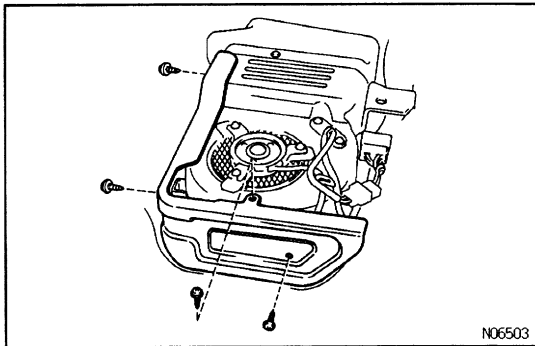

- (c) Install the side cover with the four screws.

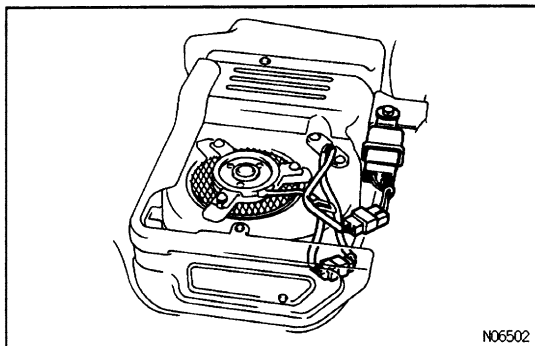

- (d) Install the rear heater relay with a bolt.
(e) Connect the connectors to blower motor and relay.

2. INSTALL FRONT RH SEAT

3. CONNECT NEGATIVE (-) CABLE TO BATTERY