


REAR HEATER BLOWER RESISTOR BLOWER RESISTOR REMOVAL

1. DISCONNECT NEGATIVE CABLE FROM BATTERY
2. REMOVE FRONT RH SEAT

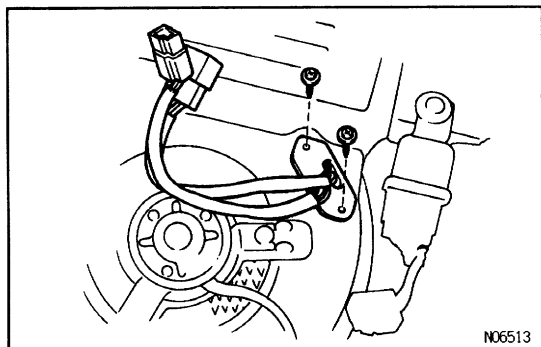

3. REMOVE BLOWER RESISTOR

- (a) Disconnect two connectors from the blower resistor.
- (b) Remove two screws and the blower resistor.

BLOWER RESISTOR INSPECTION

ACOMG-01


INSPECT BLOWER RESISTOR CONTINUITY

Connector "A"		Connector "B"		Terminal Condition	A-1	A-2	A-3	B-1	B-2
				Constant	○	○	○	○	○

H-3-2 H-2-2

V02041

If continuity is not as specified, replace the blower resistor.

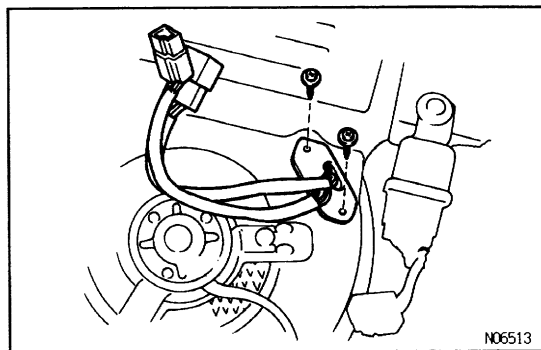

BLOWER RESISTOR INSTALLATION

ACOMH-01

1. INSTALL BLOWER RESISTOR

- (a) Install blower resistor with two screws.
- (b) Connect the connectors to the blower resistor.

2. INSTALL FRONT RH SEAT

3. CONNECT NEGATIVE CABLE TO BATTERY