


REAR HEATER SWITCH

REAR HEATER SWITCH REMOVAL

ACOMV-01

- 1. DISCONNECT NEGATIVE CABLE FROM BATTERY
- 2. REMOVE INSTRUMENT CLUSTER FINISH CENTER PANEL WITH A/C CONTROL ASSEMBLY
- 3. REMOVE REAR HEATER SWITCH

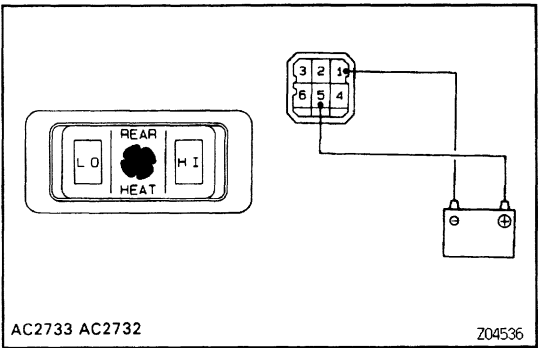

REAR HEATER SWITCH INSPECTION

ACOMW-01

- 1. INSPECT INDICATOR
 - (a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 1.
 - (b) Push each of the rear heater switch knob in and check that their indicators lights up.
If indicator operation is not as specified, replace the switch.

- 2. INSPECT SWITCH CONTINUITY
If continuity is not as specified, replace the switch.

Terminal Switch position	1	2	4	5	Illumination	
					3	6
HI	○	—	○			
OFF						
LO	○	○				

AC2733 S-6-2-B

V02052

REAR HEATER SWITCH INSTALLATION

- INSTALL REAR HEATER SWITCH
Install by following the removal procedure in reverse order.