


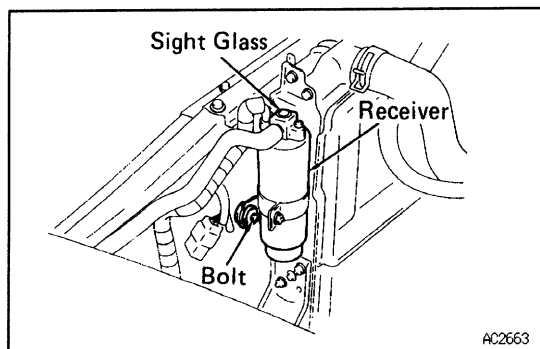

RECEIVER

ACOLX-01

ON-VEHICLE INSPECTION

INSPECT FITTINGS FOR LEAKAGE

Using a gas leak tester, check for leakage.

If there is leakage, check the tightening torque at the joints.


RECEIVER REMOVAL

ACOHX-02

1. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM
2. DISCONNECT NEGATIVE CABLE FROM BATTERY
3. DISCONNECT TWO LIQUID TUBES FROM RECEIVER

HINT: Cap the open fittings immediately to keep moisture out of the system.

4. REMOVE RECEIVER FROM RECEIVER HOLDER

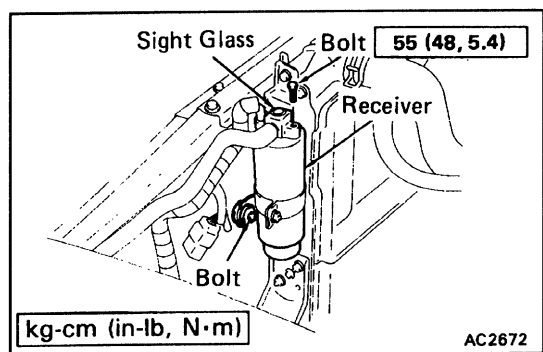

ACOLY-01

RECEIVER INSTALLATION

1. INSTALL RECEIVER IN RECEIVER HOLDER

HINT: Do not remove the blind plugs until ready for connection.

2. CONNECT TWO LIQUID TUBES TO RECEIVER

Torque: 5.4 N·m (55 kgf-cm, 48 in.-lbf)

3. CONNECT NEGATIVE CABLE TO BATTERY

4. IF RECEIVER WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR

Add 20 cc (0.71 fl.oz.)

Compressor oil: ND-OIL 6 or equivalent

5. EVACUATE AIR FROM REFRIGERATION SYSTEM

6. CHARGE SYSTEM WITH REFRIGERANT AND INSPECT FOR LEAKAGE OF REFRIGERANT

Specified amount: 900 ± 50 g (31.74 ± 1.76 oz.)