


REFRIGERANT LINES

TIGHTENING TORQUE OF REFRIGERATION LINES

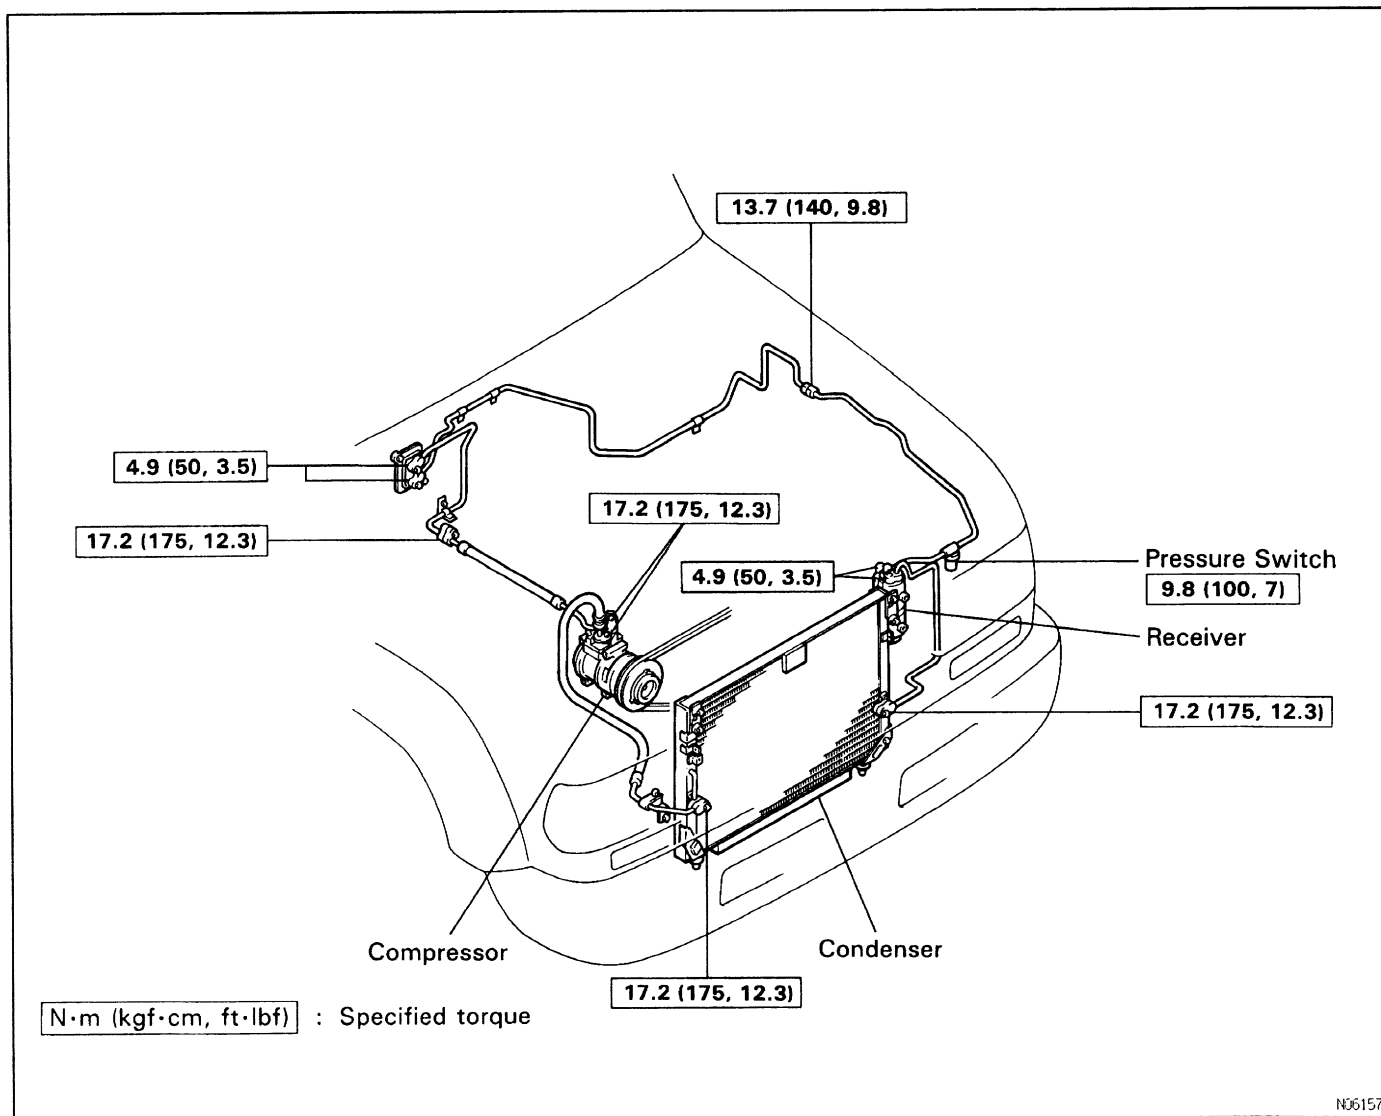

AC00M-04

ON-VEHICLE INSPECTION

1. INSPECTION HOSE AND TUBE CONNECTIONS FOR LOOSENESS

2. INSPECT HOSES AND TUBES FOR LEAKAGE

Using a gas leak tester, check for leakage of refrigerant.

REFRIGERANT LINES REPLACEMENT

1. RECOVER REFRIGERANT IN REFRIGERATION SYSTEM

2. REPLACE FAULTY TUBE OR HOSE

HINT: Cap the open fittings immediately to keep moisture or dirt out of the system.

3. TORQUE CONNECTIONS TO SPECIFIED TORQUE

NOTICE: Connections should not be torqued tighter than the specified torque.

4. EVACUATE AIR IN REFRIGERATION SYSTEM AND CHARGE WITH REFRIGERANT

Specified amount:

900 ± 50 g (31.74 ± 1.76 oz.)

5. INSPECT FOR LEAKAGE OF REFRIGERANT

Using a gas leak tester, check for leakage of refrigerant.

6. INSPECT AIR CONDITIONER OPERATION