


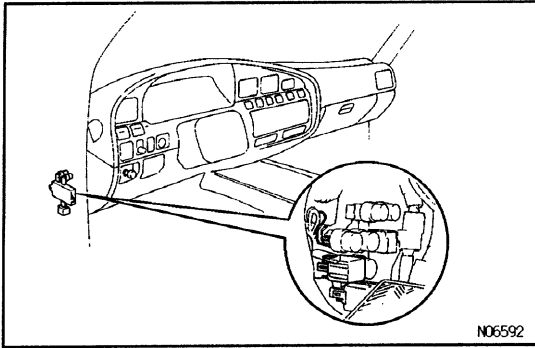

RELAY RELAYS REMOVAL

AC02F-05

1. DISCONNECT NEGATIVE (-) CABLE FROM BATTERY
2. REMOVE RELAYS
(See page AC-7)

RELAYS INSPECTION

AC02E-05

1. INSPECT ENGINE COOLANT TEMPERATURE CUT RELAY

If continuity is not as specified, replace the relay.

BE1647 BE1641	Terminal	1	2	3	4
	Condition				
	Constant	○	—	○	
Apply battery voltage to terminals 1 and 3.			○		○

V00198

2. INSPECT HEATER MAIN RELAY CONTINUITY

If continuity is not as specified, replace the relay.

BE1850 BE1844	Terminal	1	2	3	4	5
	Condition					
	Constant	○	—	○	○	
Apply battery voltage to terminals 1 and 3.					○	○

V00612

3. INSPECT BLOWER SPEED CONTROL RELAY CONTINUITY

If continuity is not as specified, replace the relay.

H-8-2
AC2145

Terminal Condition	1	2	3	4	5	6	7	8
Constant								
Apply battery voltage to terminals 5 and 6								
Apply battery voltage to terminals 5 and 7								
Apply battery voltage to terminals 5 and 8								

V02042

4. INSPECT REAR HEATER RELAY CONTINUITY

If continuity is not as specified, replace the relay.

H-6-2 BE1844

Terminal Condition	1	2	3	4	6
Constant					
Apply battery voltage to terminals 2 and 6.					

V02043

RELAYS INSTALLATION

AC022 - 02

- 1. INSTALL RELAYS
- 2. CONNECT NEGATIVE (-) CABLE TO BATTERY