


WATER VALVE

WATER VALVE REMOVAL

ACOM9-01

1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT: It is not necessary to drain out all the coolant.

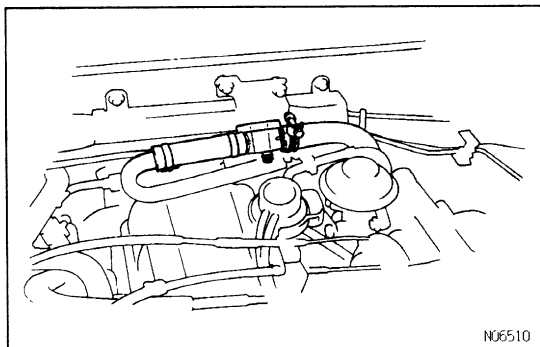


2. DISCONNECT WATER VALVE CONTROL CABLE

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPE AND WATER VALVE

- Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.
- Disconnect the water hoses.

4. REMOVE WATER VALVE

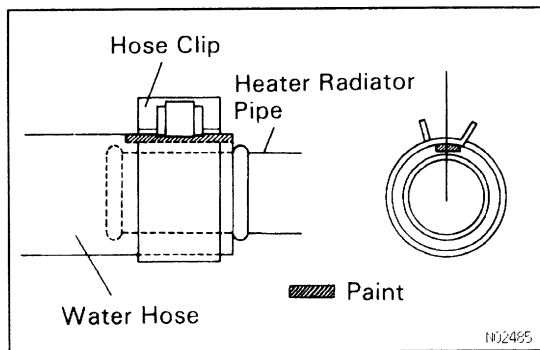

WATER VALVE INSTALLATION

ACOMA-01

Install by following the removal procedure in reverse order.

HINT:

- Push the water hose onto the heater radiator pipe as far as the ridge on the pipe.
- Install the hose clip in a position as shown to the left.
- For installing the control cable, refer to "A/C CONTROL CABLES ADJUSTMENT".

A/C CONTROL CABLE ADJUSTMENT

ACOM9-01

ADJUST WATER VALVE CONTROL CABLE

- Set the vehicle in following condition.
 - Ignition switch on.
 - Blower speed control switch on.
 - Temperature control switch to "COOL" position.
- Set the water valve to "COOL" position, install the control cable and lock the clamp.

