


BACK-UP LIGHT SYSTEM PARTS LOCATION

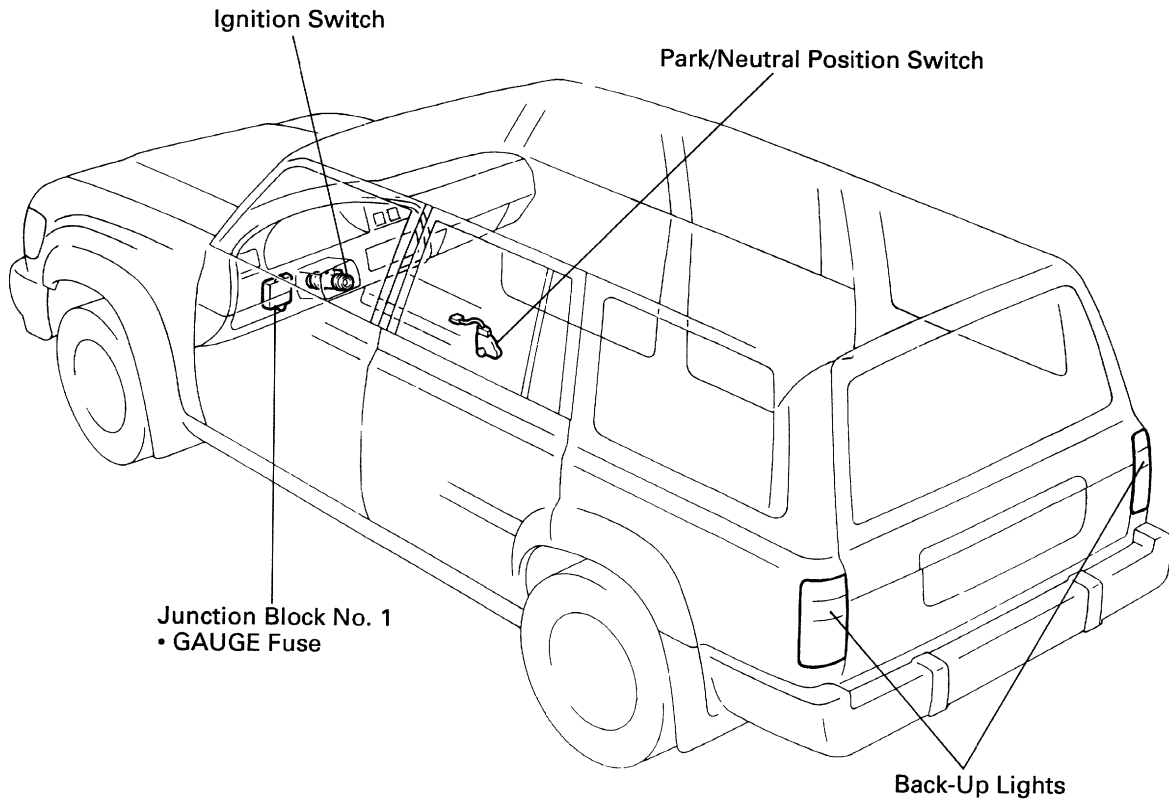

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Part name	See page
Back-up light does not light up.	1. GAUGE Fuse 2. Ignition Switch 3. Park/Neutral Position Switch 4. Wire Harness 5. Bulb	BE-6, BE-10 BE-12 AT-40 – –
Back-up light remains always on.	1. Wire Harness	–
Only one light does not light up.	1. Wire Harness 2. Bulb	– –

PARK/NEUTRAL POSITION SWITCH

PARK/NEUTRAL POSITION SWITCH INSPECTION

See page [AT-40](#)