


CLOCK

TROUBLESHOOTING


HINT: Troubleshoot the clock according to the table below.

Clock will operate	1
Clock loses or gains time	2


± 1.5 seconds/day

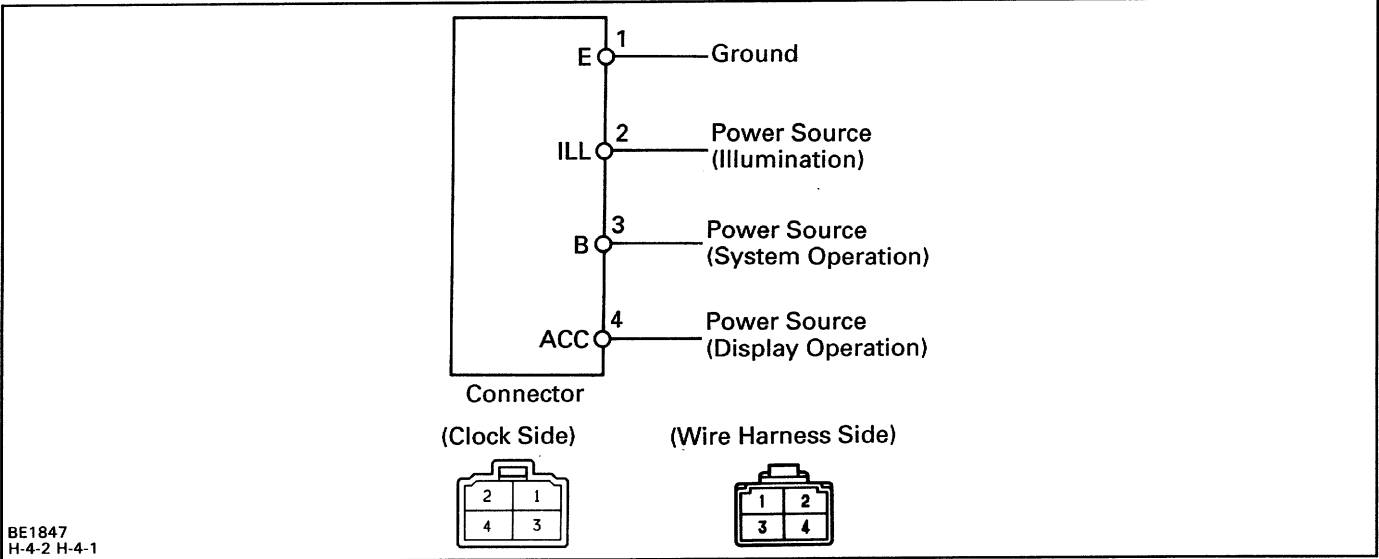

1 CLOCK WILL NOT OPERATE

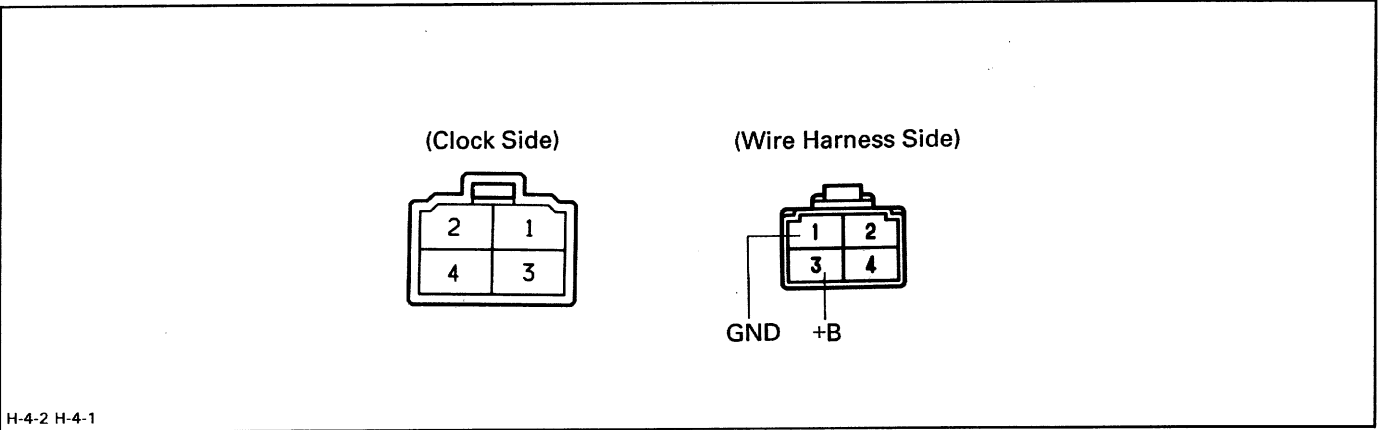

- (a) Check that the battery voltage is 10 – 16 V.
If voltage is not as specified, replace the battery.
 - (b) Check that the DOME fuse is not blown.
If the fuse is blown, replace the fuse and check for short.
 - (c) Troubleshoot the clock as follows.
- HINT: Inspect the connector on the wire harness side.

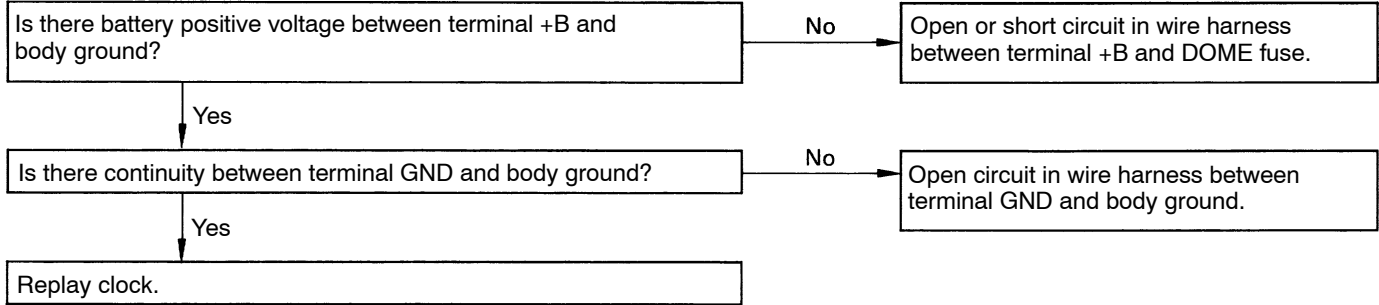

2

CLOCK LOSES OR GAINS TIME

(a) Check that the battery positive voltage is 10 – 16 V.

If voltage is not as specified, replace the battery.

(b) Inspect the error of the clock.

Allowable error (per day): ± 1.5 seconds

If the error exceeds the allowable error, replace the clock.

(c) Check that the clock adjusting button is sticking in position and has failed to return.

If the button is not returned, repair or replace the clock.

(d) Troubleshoot the clock as follows.

HINT: Inspect the connector on the wire harness side.

