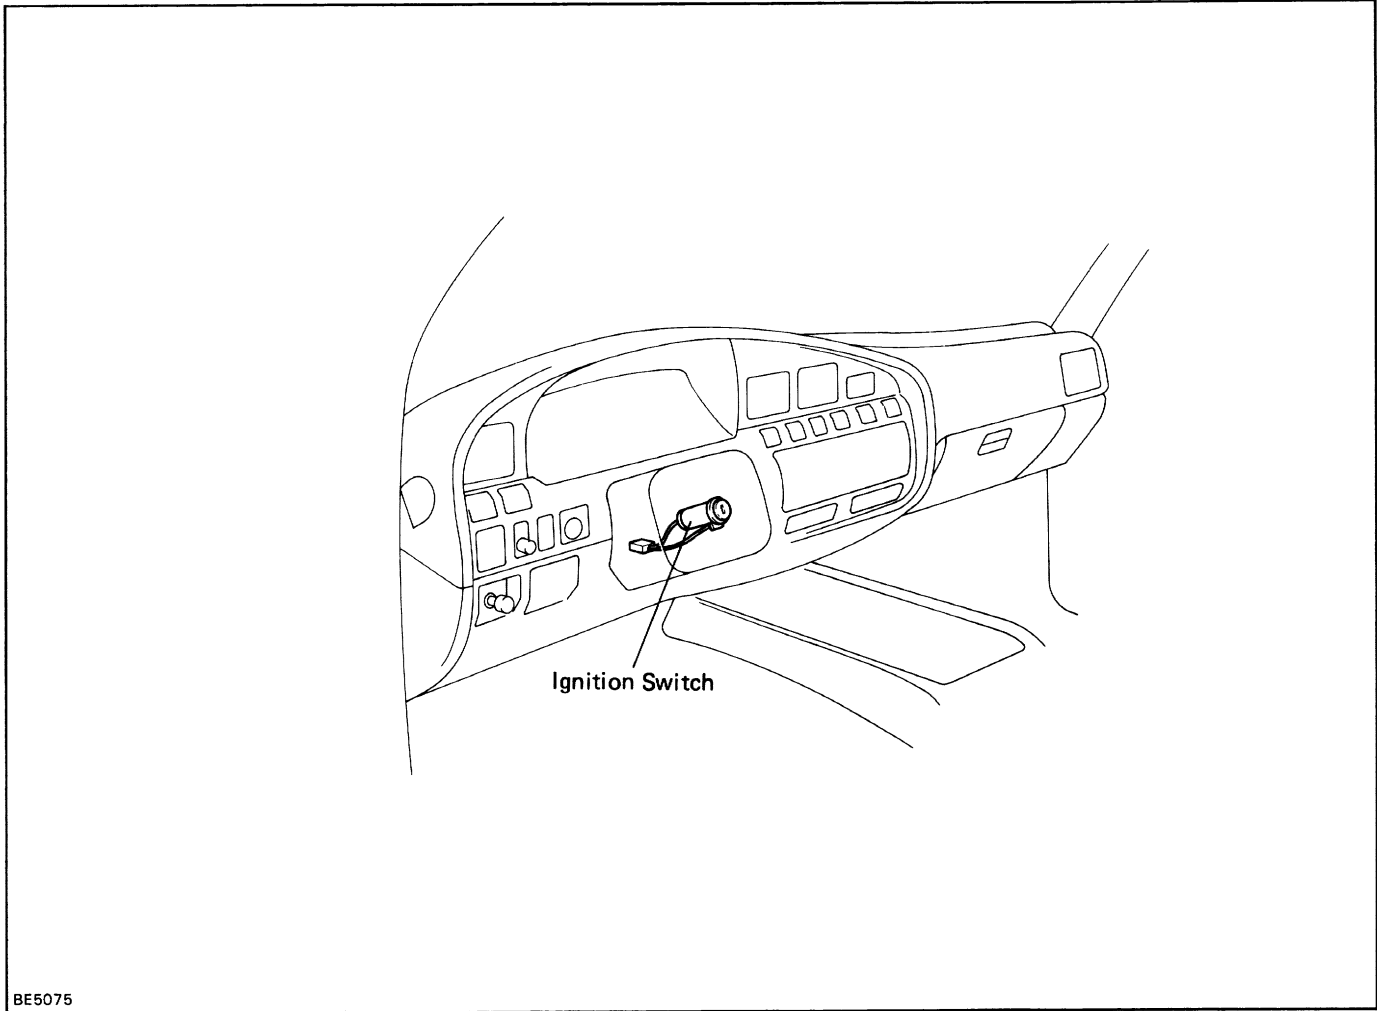
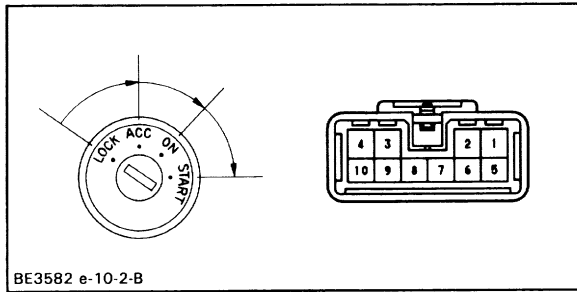


IGNITION SWITCH
PARTS LOCATION



BE5075

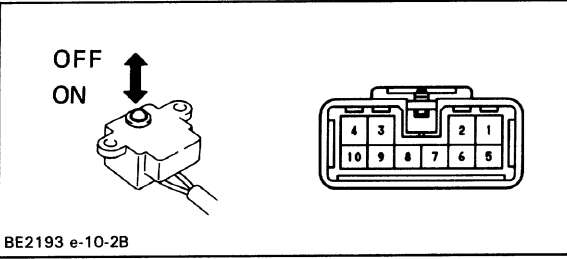
 
 
IGNITION SWITCH
IGNITION SWITCH INSPECTION
CONTINUITY

	Terminal	2	3	4	6	7	9	10
	Switch position							
	LOCK							
	ACC					○	○	
	ON		○	○	○	○	○	
	START	○	○	○	○		○	○

BE3582 e-10-2-B

If continuity is not as specified, replace the switch.

KEY CONFINE PREVENTION SYSTEM
KEY UNLOCK WARNING SWITCH INSPECTION
CONTINUITY

 BE2193 e-10-2B	Terminal	1	5
	Switch position		
	OFF (Ignition Key removed)		
	ON (Ignition Key set)		

If continuity is not as specified, replace the switch.

DOOR COURTESY SWITCH
DOOR COURTESY SWITCH INSPECTION
See page [BE-28](#).

SEAT BELT WARNING RELAY
SEAT BELT WARNING RELAY INSPECTION
See page [BE-57](#).