



INTERIOR LIGHT SYSTEM PARTS LOCATION

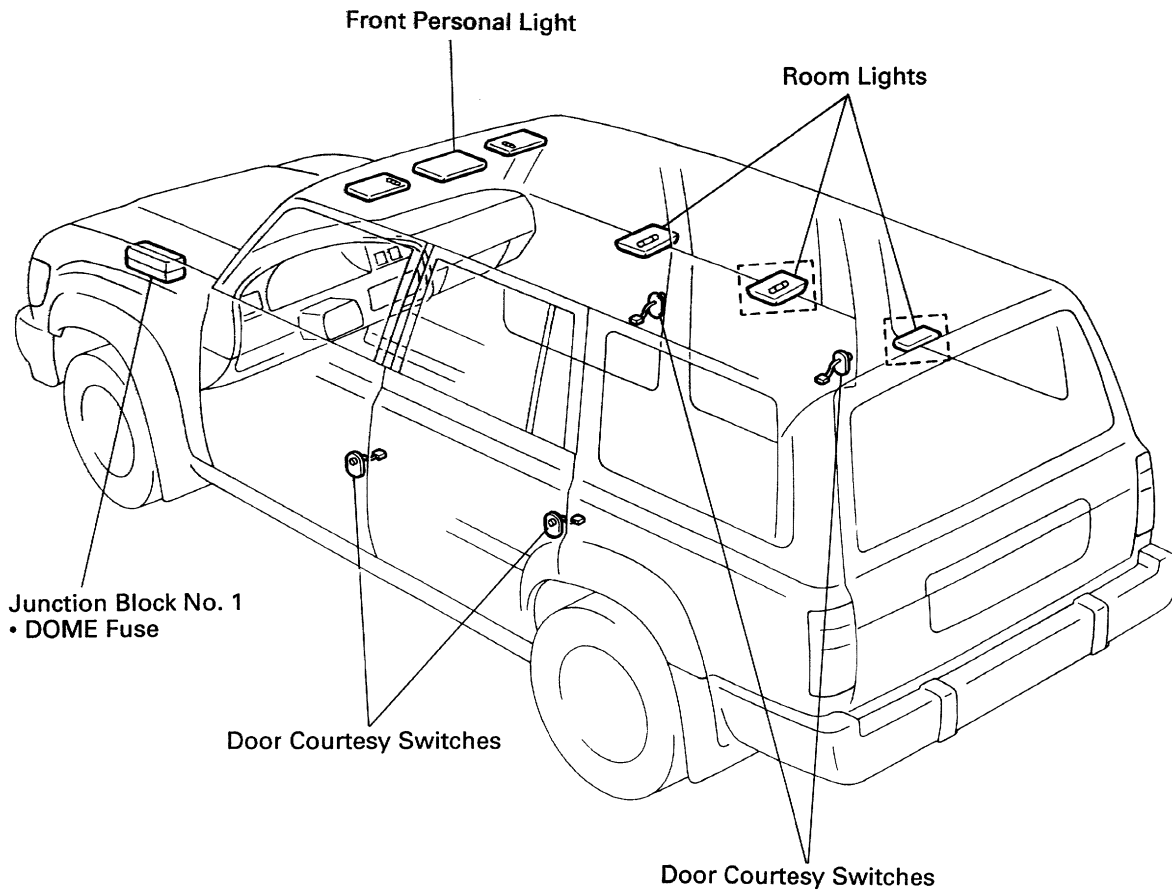

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Part name	See page
Room light does not light up.	1. DOME Fuse 2. Door Courtesy Switch 3. Front Personal Light 4. Room Light 5. Wire Harness 6. Bulb	BE-6, BE-10 BE-28 BE-28 BE-28 - -
Room light remains always on.	1. Door Courtesy Switch 2. Wire Harness	BE-28

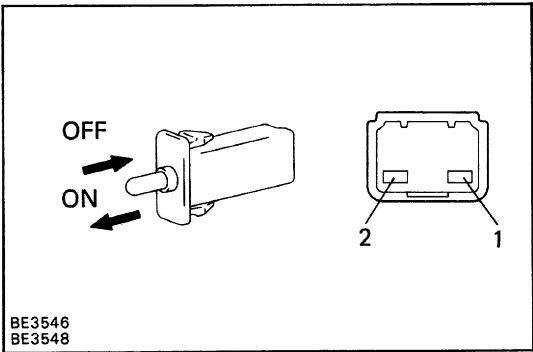


GLOVE BOX LIGHT SWITCH

GLOVE BOX LIGHT SWITCH INSPECTION

○ — ○ Continuity Inspection

Terminal	1	2
Switch position		
OFF (Closed)		
ON (Opened)	○ — ○	○ — ○

If continuity is not as specified, replace the switch.

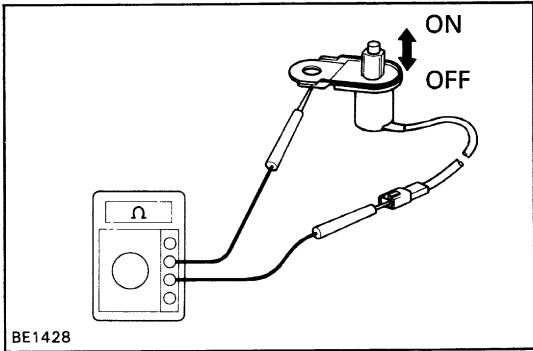

DOOR COURTESY SWITCH

DOOR COURTESY SWITCH INSPECTION

- (a) Check that there is continuity between terminal and the switch body with the ON (switch pin released: opened door).
- (b) Check that there is no continuity between terminal and the switch body with the OFF (switch pin pushed in: closed door).

If operation is not as specified, replace the switch.

FRONT PERSONAL LIGHT


FRONT PERSONAL LIGHT INSPECTION

CONTINUITY

(w/ SLIDING ROOF)

Terminal	5	6
Switch position		
OFF		
ON	○ — ○	○ — ○


If continuity is not as specified, replace the personal light.

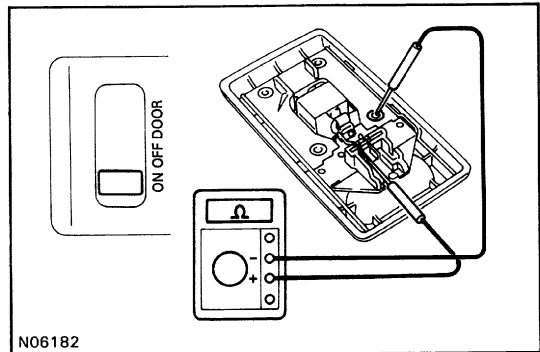

ROOM LIGHT ASSEMBLY

ROOM LIGHT ASSEMBLY INSPECTION

- (a) Disconnect the connector from room light assembly.
- (b) Turn the room light switch ON, check that there is continuity between terminal 2 and body ground.

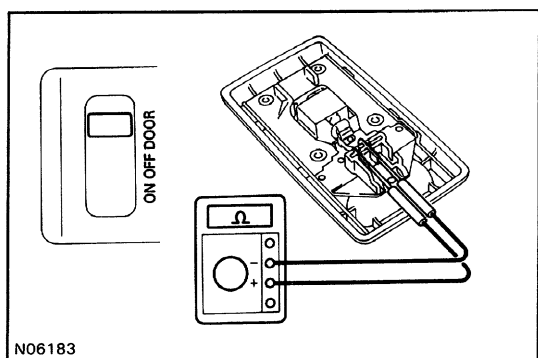

- (c) Turn the room light switch DOOR, check that there is continuity between terminal 1 and 2.
If operation is not as specified, replace the switch.