
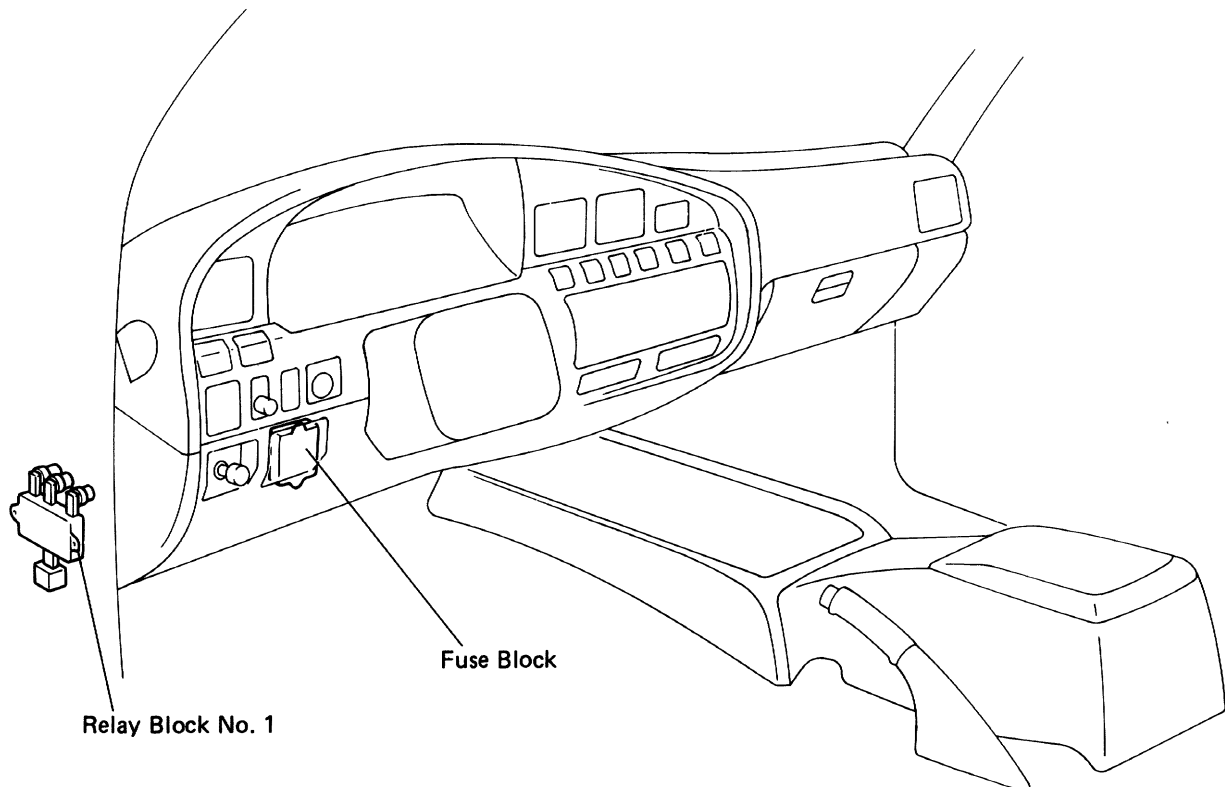
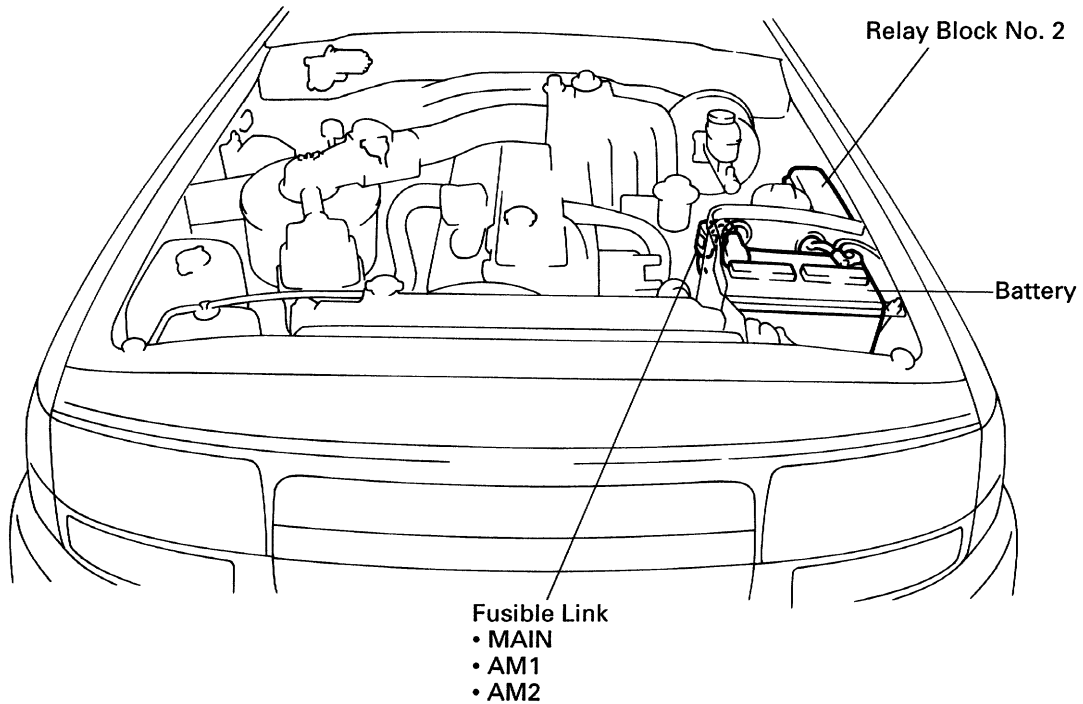


POWER SOURCE PARTS LOCATION

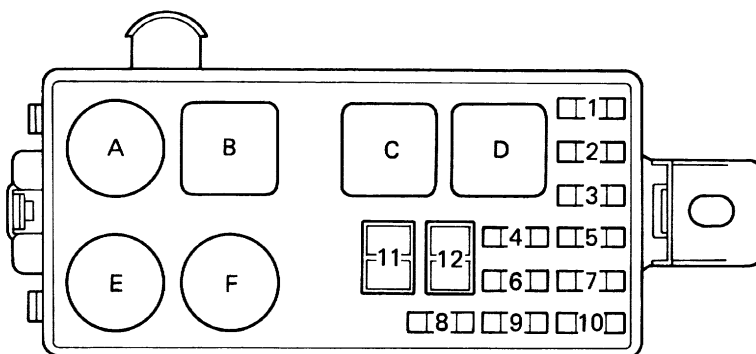


Relay Block No. 2 (Engine Room)**Fuse and High Current Fuses**


1. HEAD (RH)	15 A	7. HAZ-HORN	15 A
2. HEAD (LH)	15 A	8. -	
3. -		9. CDS FAN	20 A
4. CHARGE	7.5 A	10. DOME	10 A
5. -		11. AM1	50 A
6. EFI	15 A	12. ABS	60 A

Relays

A. EFI Main Relay
B. Charge Light Relay
C. Headlight Control Relay
D. -
E. Horn Relay
F. Condenser Fan Relay

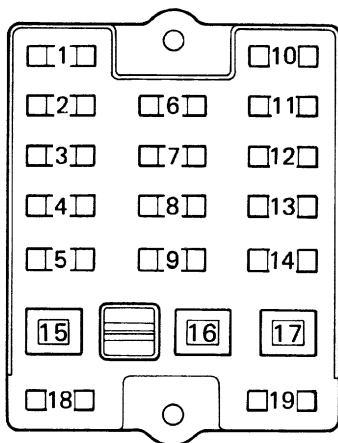Fuse Block (Instrument Panel)**Fuse and Medium Current Fuse**

1. CIG	15 A	10. ECU-B	15 A
2. TAIL	15 A	11. REAR-HTR	20 A
3. -		12. IGN	7.5 A
4. STOP	10 A	13. A/C	10 A
5. DEFOG	20 A	14. DIFF	20 A
6. WIPER	20 A	15. -	
7. GAUGE	10 A	16. HEATER	30 A
8. TURN	7.5 A	17. POWER	30 A
9. ECU-IG	15 A	18. Spear	
		19. Spear	

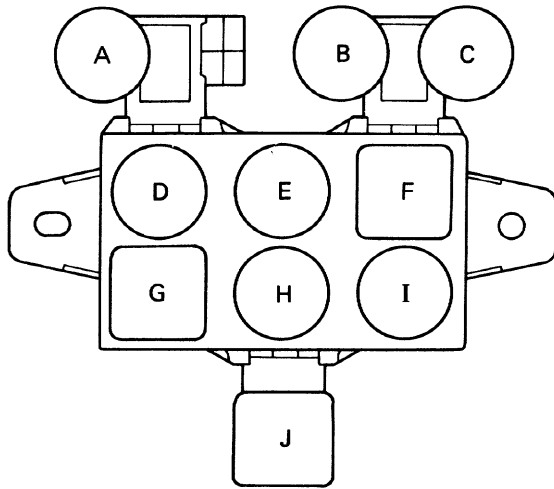Relay Block No. 1 (Cowl Side)**Relay**

- A. Cooling Fan Relay
- B. Blower Hi Relay
- C. —
- D. Defogger Relay
- E. Power Main Relay
- F. Turn Signal Flasher
- G. Heater Relay
- H. Taillight Control Relay
- I. —
- J. Circuit Opening Relay