


STOP LIGHT SYSTEM


PARTS LOCATION

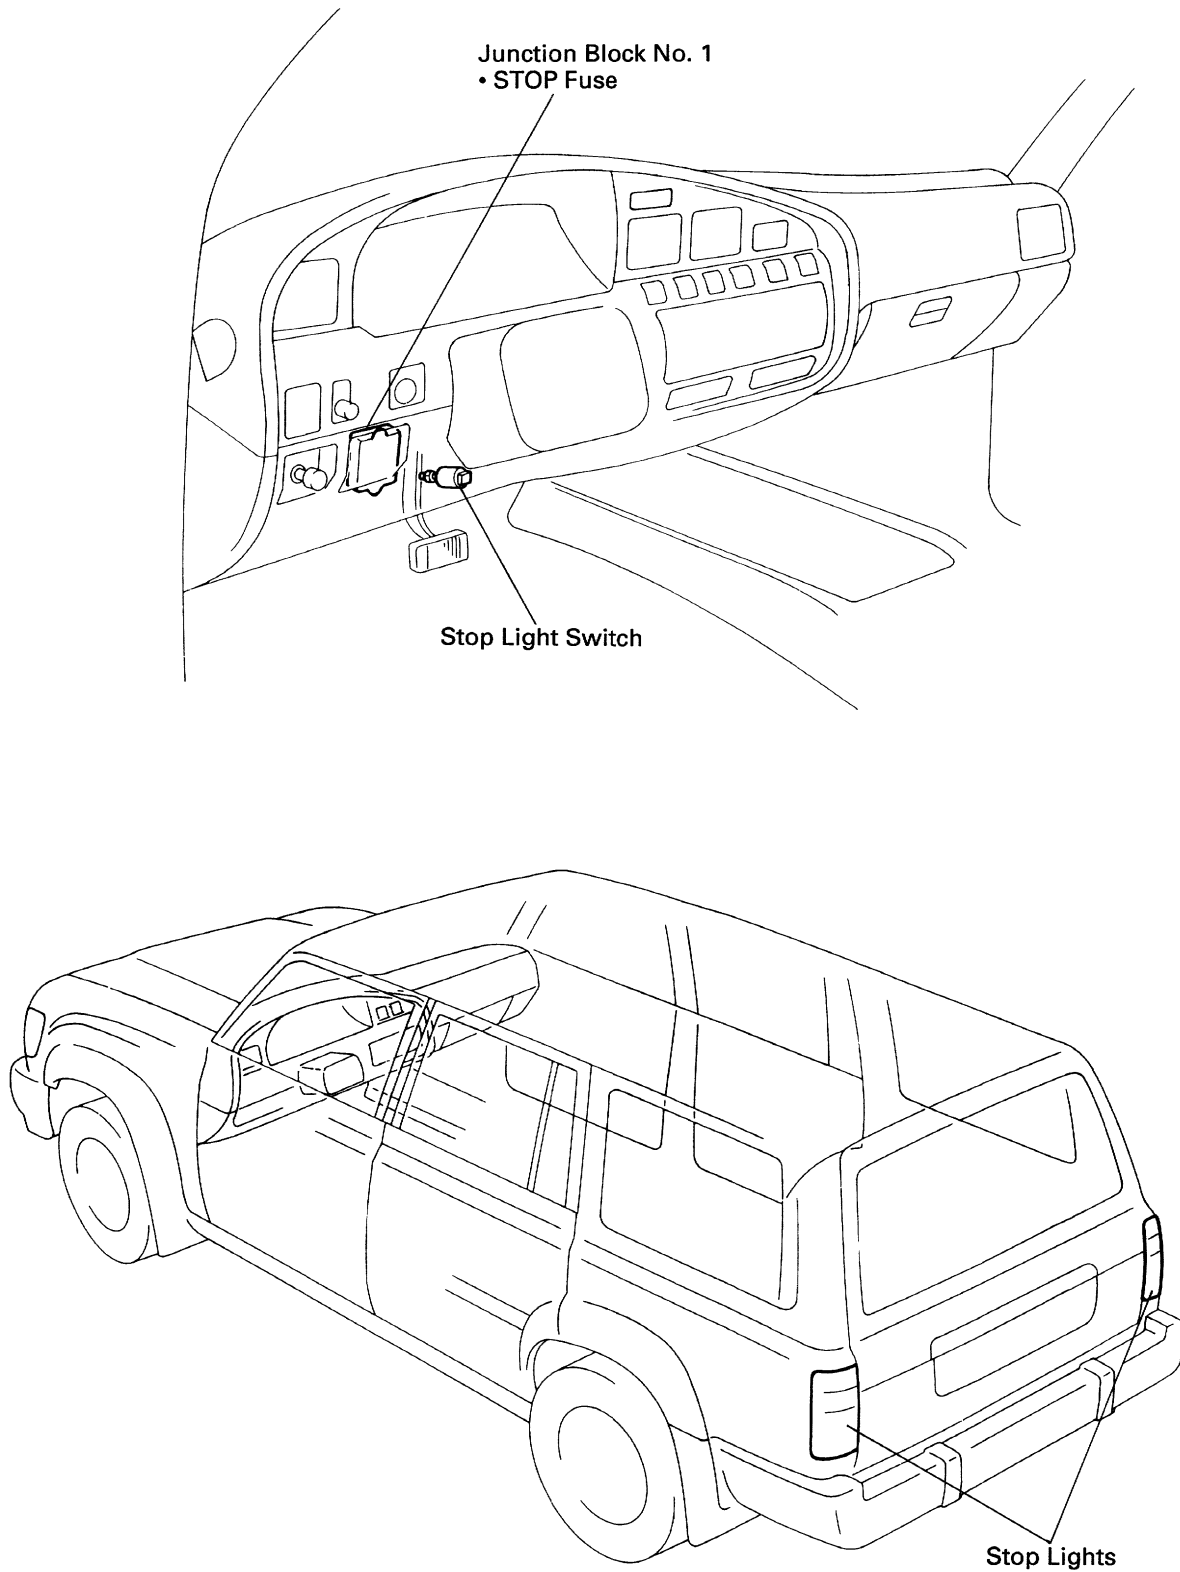

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely cause of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Part name	See page
Stop light does not light up.	1. STOP Fuse 2. Stop Light Switch 3. Wire Harness 4. Bulb	BE-6, BE-10 BE-34 — —
Stop light remains always on.	1. Stop Light Switch 2. Wire Harness	BE-34 —
Only one light does not light up.	1. Wire Harness 2. Bulb	— —

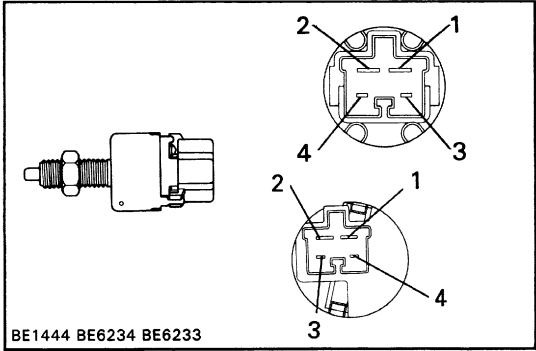

STOP LIGHT SWITCH
STOP LIGHT SWITCH INSPECTION

○ — ○ CONTINUITY INSPECTION

Terminal Switch position	1	2
Switch pin free (Brake pedal depressed)	○ —	— ○
Switch pin pushed in (Brake pedal released)		

If continuity is not as specified, replace the switch.