
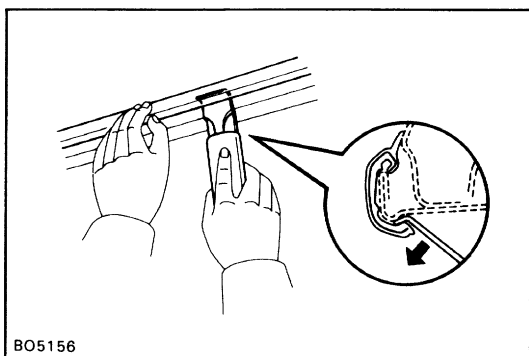


MOULDING

Body Outside Moulding

COMPONENTS

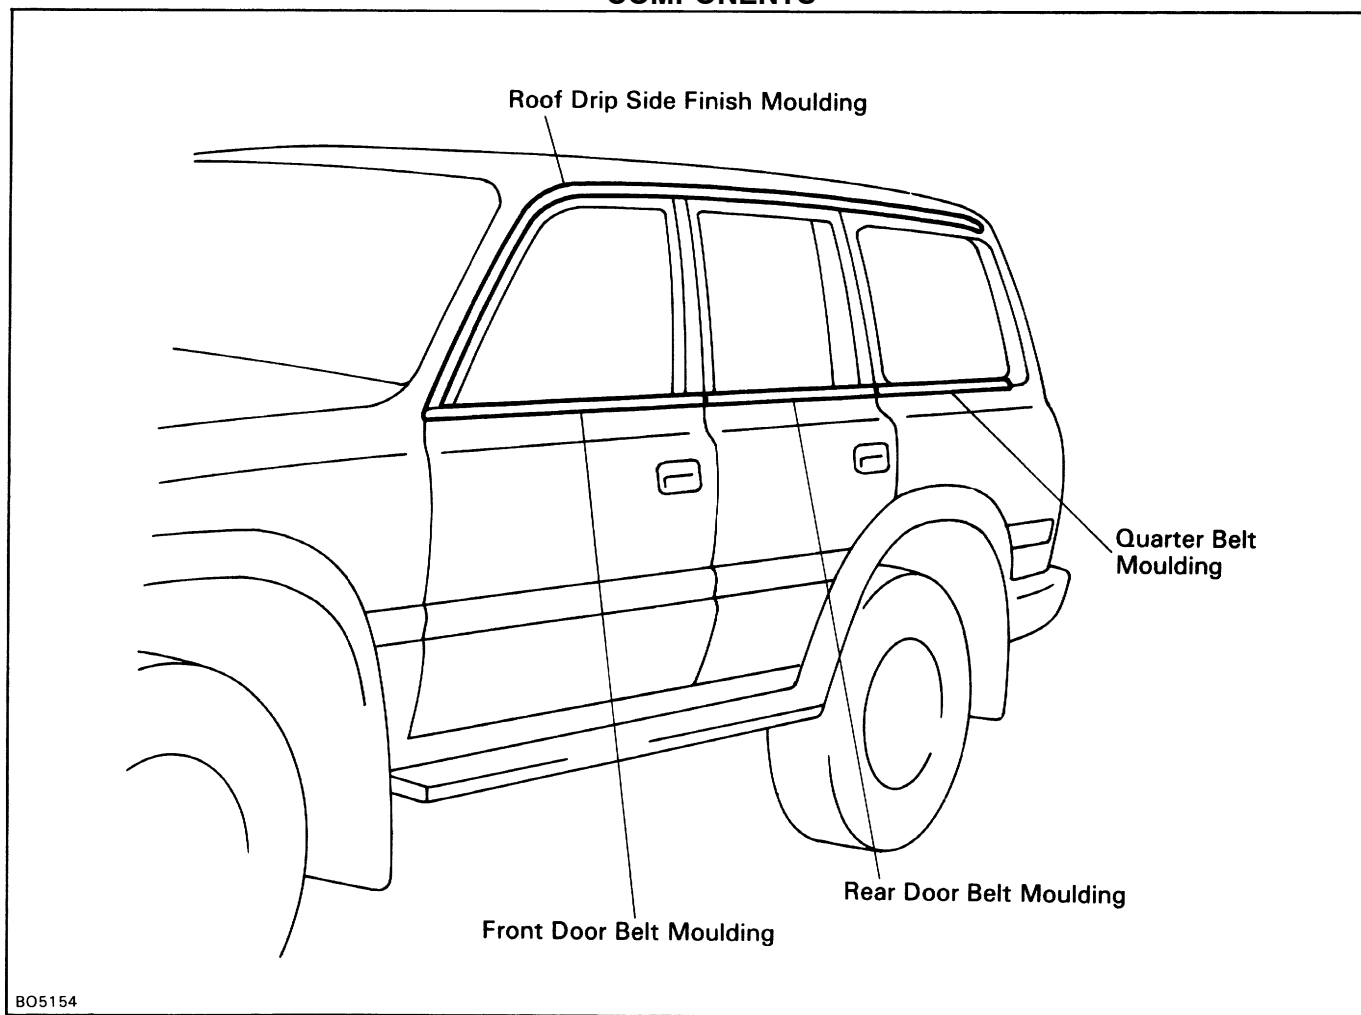


Roof Drip Side Finish Moulding

REMOVAL OF ROOF DRIP SIDE FINISH MOULDING

REMOVE ROOF DRIP MOULDING

Using SST, pull off the roof drip moulding from front ends.


SST 09806-30010

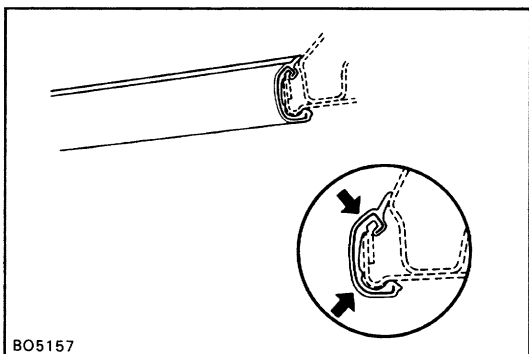

INSTALLATION OF ROOF DRIP SIDE FINISH MOULDING

INSTALL ROOF DRIP MOULDING


Attach the upper edge of the moulding to the body flange. Tap on the moulding by hand.

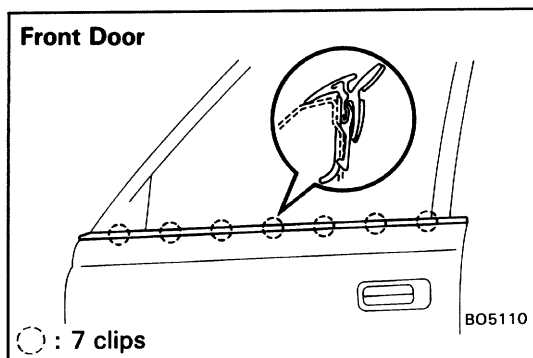

Door Belt Moulding

REMOVAL OF DOOR BELT MOULDING


1. REMOVE FRONT DOOR BELT MOULDING
(See step 7 on page [BO-10](#))

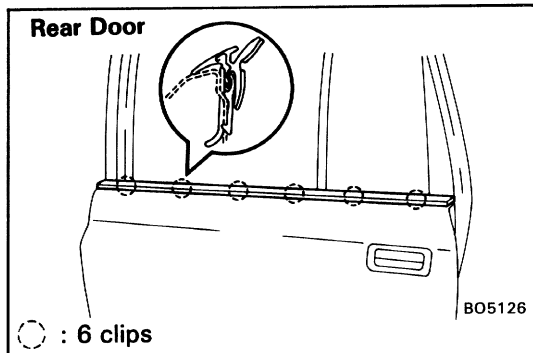

2. REMOVE REAR DOOR BELT MOULDING
(See step 10 on page [BO-21](#))

INSTALLATION OF DOOR BELT MOULDING

1. INSTALL FRONT DOOR BELT MOULDING
(See step 16 on page [BO-16](#))
2. INSTALL REAR DOOR BELT MOULDING
(See step 11 on page [BO-25](#))

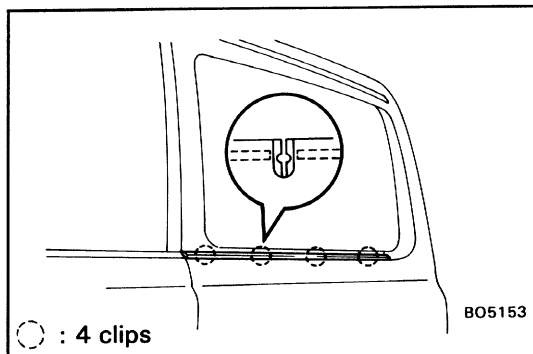

Quarter Belt Moulding

REMOVAL OF QUARTER BELT MOULDING

REMOVE QUARTER BELT MOULDING

Pry out the clips from the edge of the panel, and remove the moulding.

INSTALLATION OF QUARTER BELT MOULDING

INSTALL QUARTER BELT MOULDING

Insert the claw of the clips into the upper panel slit and push the moulding onto the panel.