


Wheel Opening Extension COMPONENTS

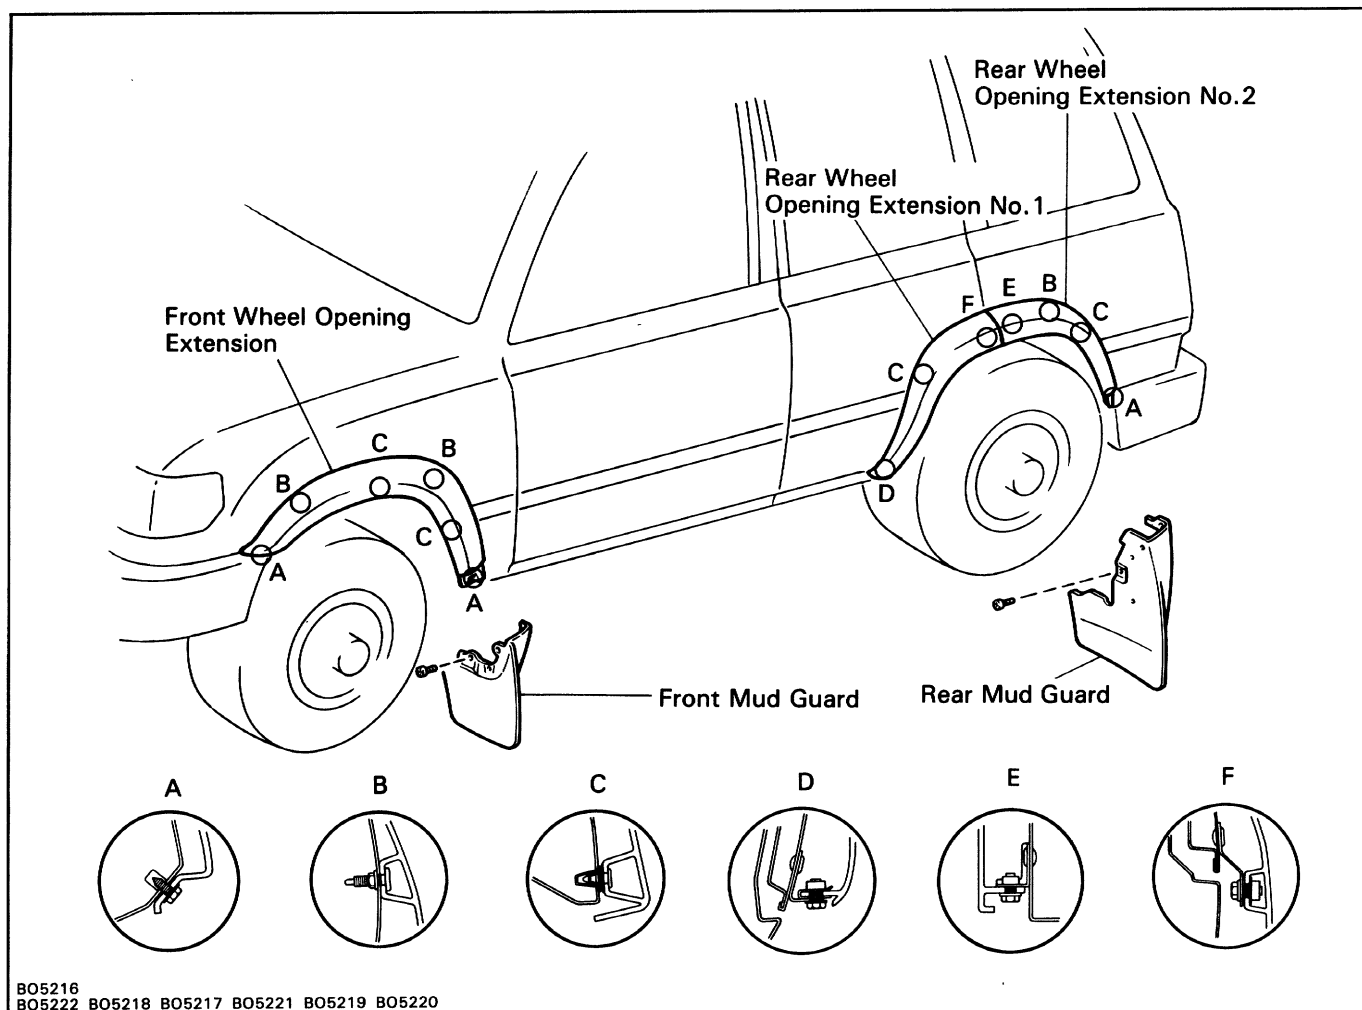

REMOVAL OF FRONT WHEEL OPENING EXTENSION

1. REMOVE FRONT MUD GUARD

Remove six screws and the mud guard.

2. REMOVE FRONT WHEEL OPENING EXTENSION

- (a) Remove two bolts and two nuts.
- (b) Remove the extension by pulling.

REMOVAL OF REAR WHEEL OPENING EXTENSION NO. 1

REMOVE REAR WHEEL OPENING EXTENSION

- (a) Remove two bolts.
- (b) Remove the extension by pulling.

REMOVAL OF REAR WHEEL OPENING EXTENSION NO.2

(See page [BO-41](#))

1. REMOVE REAR MUD GUARD

Remove eight screws and the mud guard.

2. REMOVE REAR WHEEL OPENING EXTENSION NO.2

- (a) Remove two bolts and the nut.
- (b) Remove the extension by pullings.

INSTALL OF FRONT WHEEL OPENING EXTENSION

(See page [BO-41](#))

1. INSTALL FRONT WHEEL OPENING EXTENSION

- (a) Tap the extension to install it.
- (b) Install two bolts and two nuts.

2. INSTALL FRONT MUD GUARD

Install the mud guard with six screws.

INSTALL OF REAR WHEEL OPENING EXTENSION

(See page [BO-41](#))

INSTALL REAR WHEEL OPENING EXTENSION NO. 1

- (a) Tap the extension to install it.
- (b) Install two bolts.

INSTALL OF REAR WHEEL OPENING EXTENSION NO.2

(See page [BO-41](#))

1. INSTALL REAR WHEEL OPENING EXTENSION NO.2

- (a) Tap the extension to install it.
- (b) Install two bolt, and the nut.

2. INSTALL THE MUD GUARD

Install the mud guard with eight screws.