

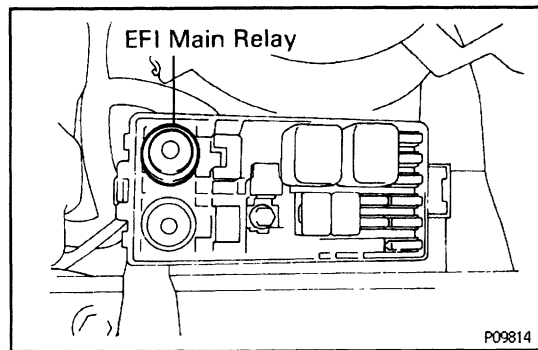


EFI MAIN RELAY

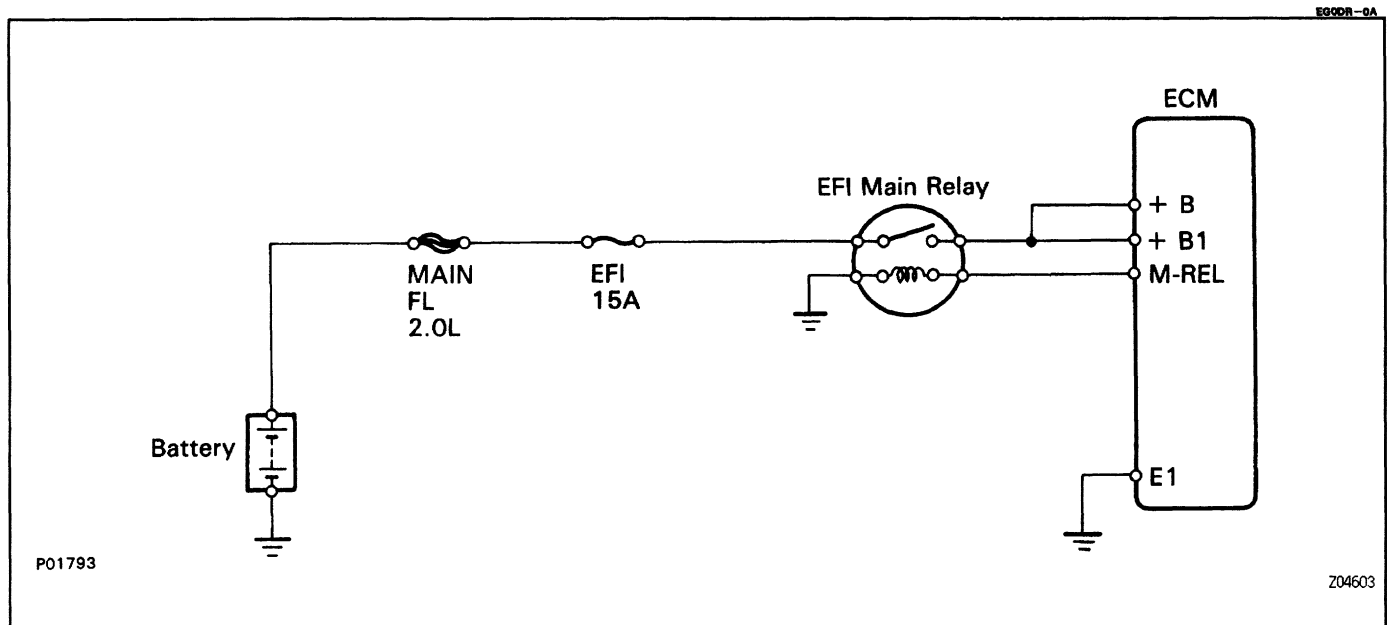

EFI MAIN RELAY INSPECTION

1. REMOVE EFI MAIN RELAY

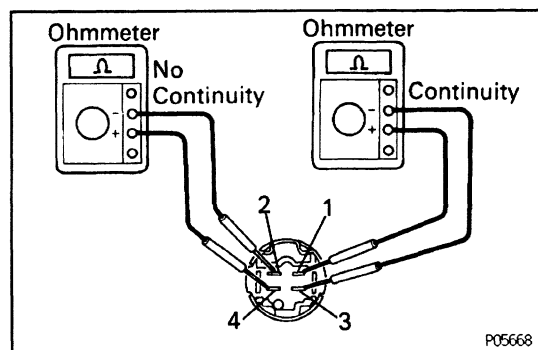


2. INSPECT EFI MAIN RELAY

A. Inspect relay continuity

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- (b) Check that there is no continuity between terminals 2 and 4.

If continuity is not as specified, replace the relay.

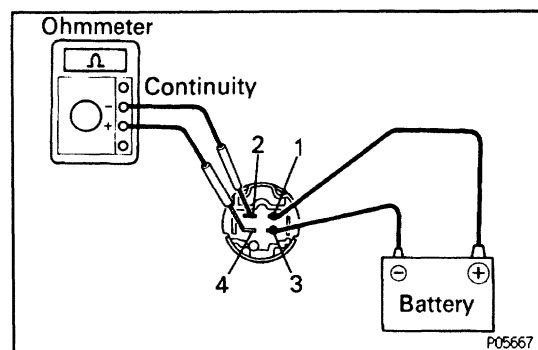

B. Inspect relay operation

- (a) Apply battery voltage across terminals 1 and 3.
- (b) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.

3. REINSTALL EFI MAIN RELAY