


FUEL TANK AND LINE COMPONENTS

EG00C-05

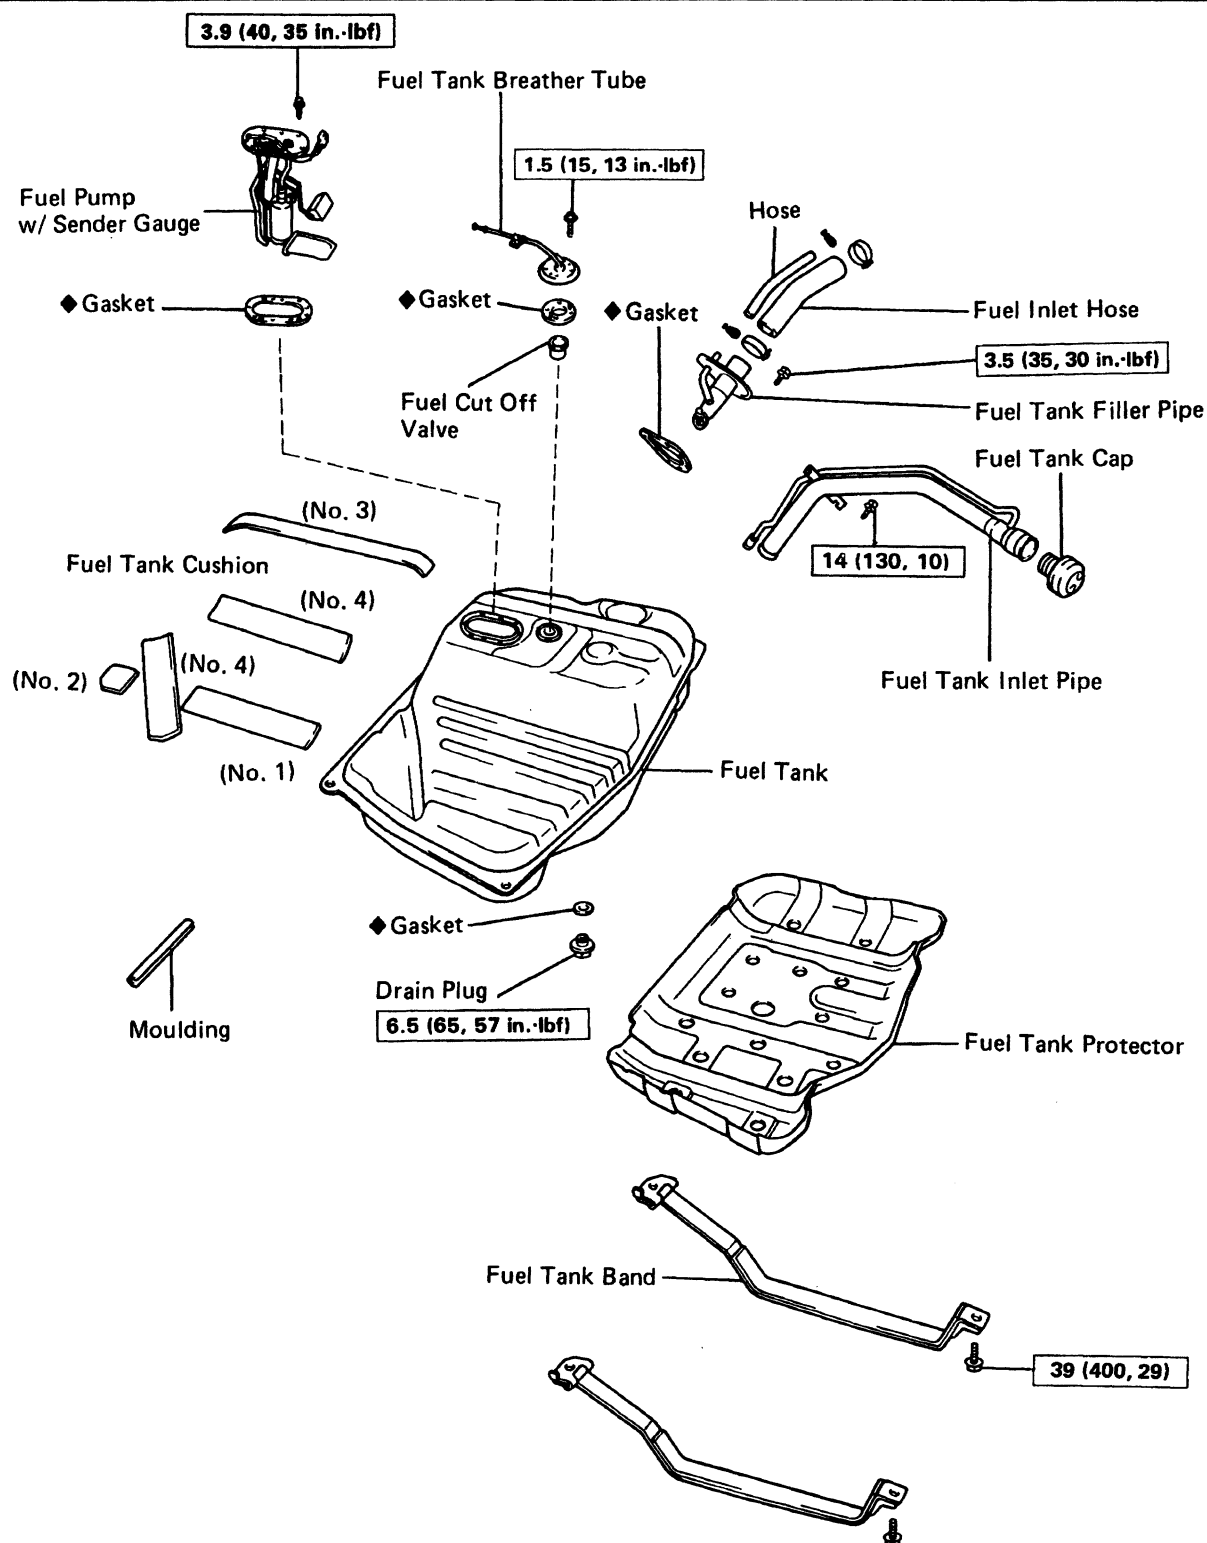


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

PRECAUTIONS

1. Always use new gaskets when replacing the fuel tank or component parts.
2. Apply the proper torque to all parts tightened.

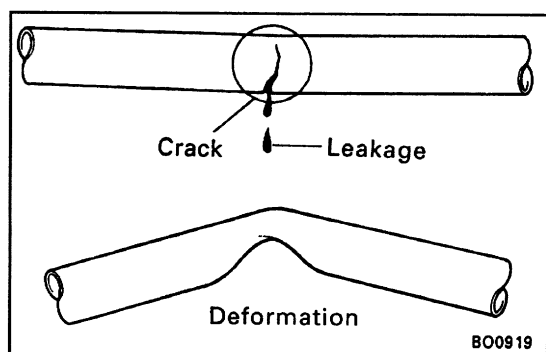

FUEL LINES AND CONNECTIONS INSPECTION

EG00E-02

- (a) Check the fuel lines for cracks or leakage, and all connections for deformation.
- (b) Check the fuel tank vapor vent system hoses and connections for looseness, sharp bends or damage.
- (c) Check the fuel tank for deformation, cracks fuel leakage or tank band looseness.
- (d) Check the filler neck for damage or fuel leakage.
- (e) Hose and tube connections are as shown in the illustration.

If a problem is found, repair or replace the part as necessary.

