



KNOCK SENSOR

EG0TU-02

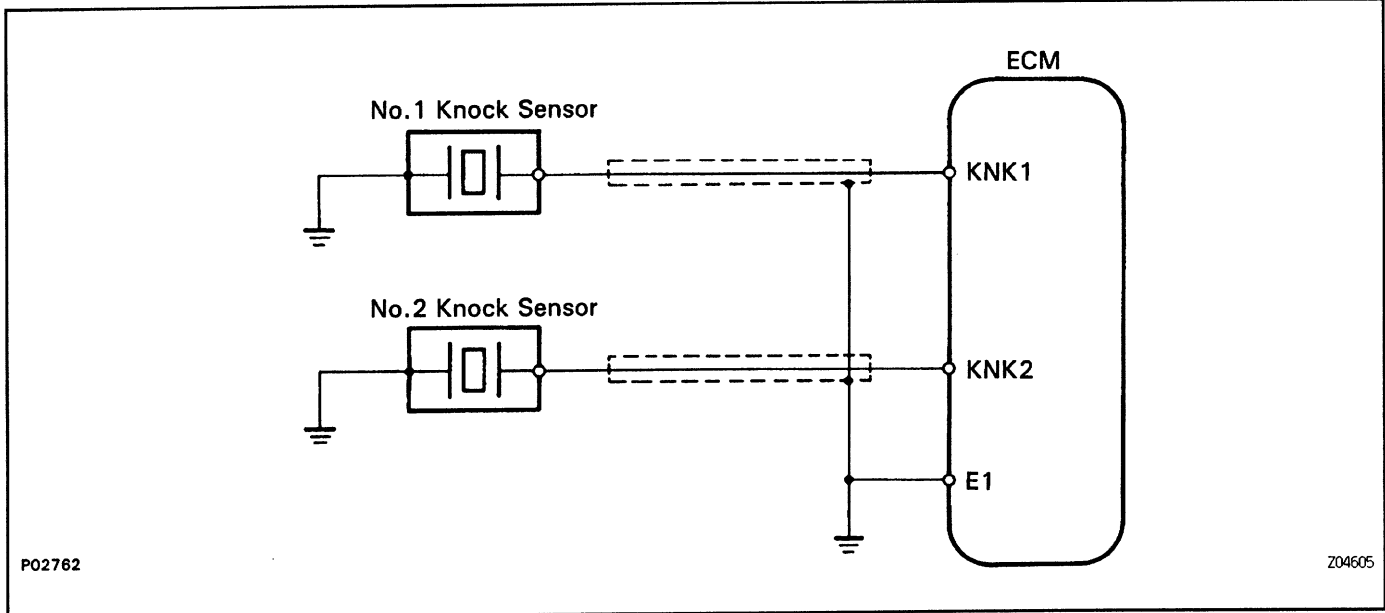


EG0TV-02

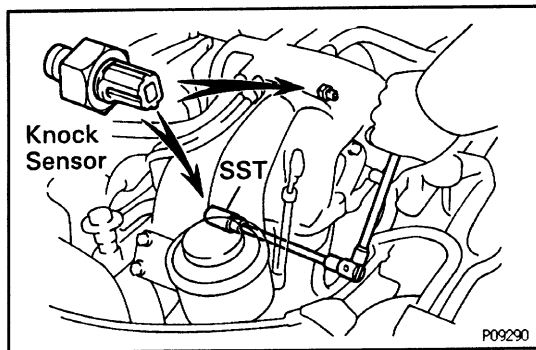

KNOCK SENSORS INSPECTION


1. REMOVE KNOCK SENSOR

- Disconnect the knock sensor connector.
- Using SST, remove the knock sensor.
SST 09816-30010

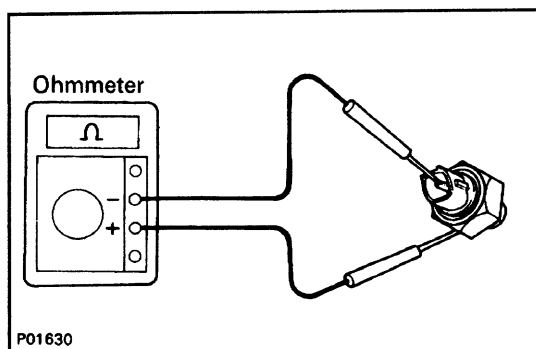

2. INSPECT KNOCK SENSOR

Using an ohmmeter, check that there is no continuity between the terminal and body.
If there is continuity, replace the sensor.

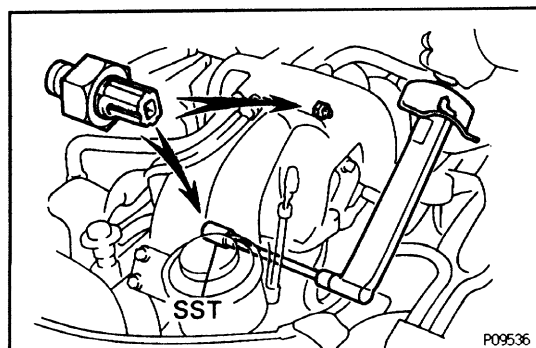

3. REINSTALL KNOCK SENSOR

- Using SST, install the knock sensor.
SST 09816 - 30010
Torque: 44 N-m (450 kgf-cm, 33 ft-lbf)
- Connect the knock sensor connector.