

ABBREVIATIONS USED IN THIS MANUAL

ASV	Air Switching Valve
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
A.T.P.	Automatic Transmission Parking
BTDC	Before Top Dead Center
Calif.	California
CB	Circuit Breaker
CD	Compact Disc
CRS	Child Restraint System
CVJ	Constant Velocity Joint
DP	Dash Pot
ECU	Electronic Control Unit
ELR	Emergency Locking Retractor
ESA	Electronic Spark Advance
EX	Exhaust (Manifold, Valve)
Ex.	Except
Fed.	Vehicle Sold in USA except California
FIPG	Formed in Place Gasket
FL	Fusible Link
Fr	Front
IG	Ignition
IN	Intake (Manifold, Valve)
J/B	Junction Block
LED	Light Emitting Diode
LH	Left – Hand
LSP & BV	Load Sensing Proportioning and By-Pass Valve
Max.	Maximum
Min.	Minimum
MP	Multipurpose
O/D, OD	Overdrive
OHC	Over Head Camshaft
O/S	Oversize
OVCV	Outer Vent Control Valve
PCV	Positive Crankcase Ventilation
PS	Power Steering
RH	Right – Hand
Rr	Rear
SRS	Supplemental Restraint System
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard
SW	Switch

TCCS	Toyota Computer Controlled System
TDC	Top Dead Center
TEMP.	Temperature
T/M	Transmission
U/S	Undersize
VCV	Vacuum Control Valve
VSV	Vacuum Switching Valve
VTV	Vacuum Transmitting Valve
w/	With
w/o	Without
4WD	Four Wheel Drive Vehicle (4x4)