
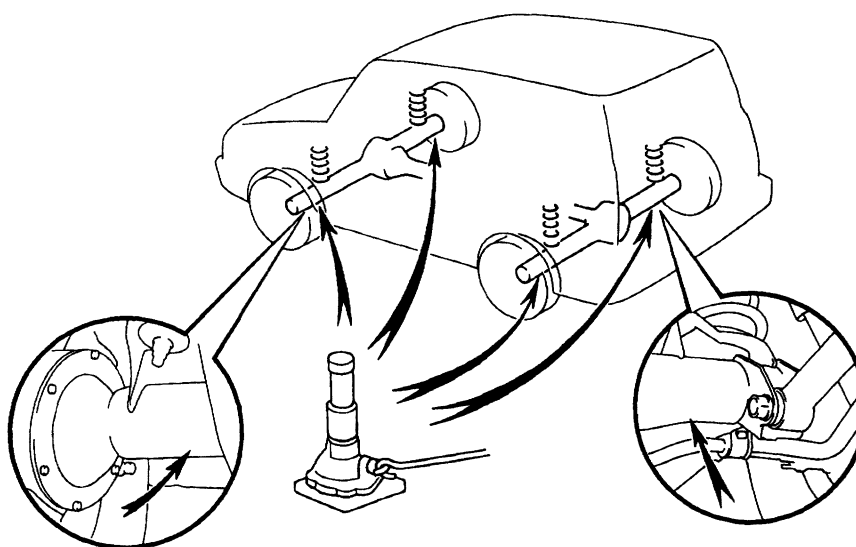


VEHICLE LIFT AND SUPPORT LOCATIONS

IN007-01

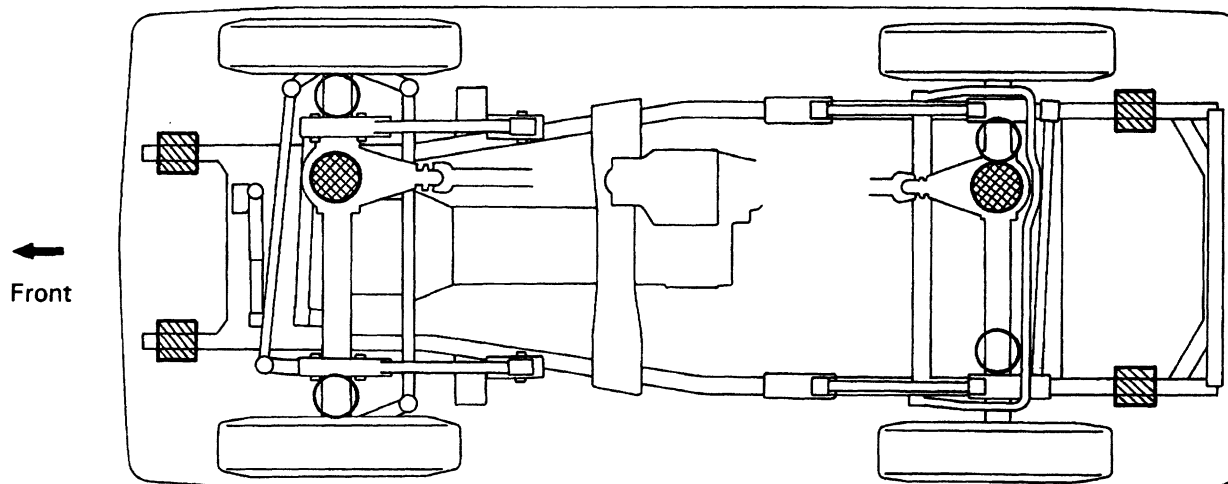

- JACK POSITION** _____ ●
- Front Under the front differential
- Rear Under the rear differential
- SCREW TYPE JACK POSITION** _____ ○
- SUPPORT POSITION**
- Safety stand ▨