

MAINTENANCE

GENERAL NOTES:

- There are two separate maintenance schedules, namely A and B, which apply to different driving conditions. Find out how the vehicle is driven, and select the appropriate schedule.
- Every service item in the periodic maintenance list must be performed.
- Next to the columns of periods in the schedule, reference pages have been added for easy access to service data and procedures necessary for each operation.
- Periodic maintenance service must be performed according to whichever interval occurs first, the miles or months.
- Maintenance services after the last period should be performed at the same interval as before unless otherwise noted.
- Skipping even one item in the list can cause the engine to run poorly and increase exhaust emissions.

MAINTENANCE SCHEDULE

SCHEDULE A

Conditions:

- Towing a trailer, using a camper or car top carrier.
- Repeated short trips of less than 8 km (5 miles) with outside temperatures remain below freezing.
- Extensive idling and/or low speed driving for long distances, such as police, taxi or door-to-door delivery use.
- Operating on dusty, rough, muddy or salt spread roads.

Maintenance operations: A = Check and adjust if necessary;
R = Replace, change or lubricate;
I = Inspect and correct or replace if necessary

System	Service interval (Odometer reading or months, whichever comes first) Maintenance items	Maintenance services beyond 96,000 km (60,000 miles) should continue to be performed at the same intervals shown in each maintenance schedule.																		See page (item No.)
		km x 1,000	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	Months	
		Miles x 1,000	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60		
ENGINE	Valve clearance*																	A	A: Every 72 months	MA-8 (item 12)
	Drive belts ⁽¹⁾								I									I	I : 36 months, 72 months	MA-5 (item 1)
	Engine oil and oil filter*		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R: Every 6 months	MA-6 (item 5)
	Engine coolant ⁽²⁾													R					R: 36 months	MA-6 (item 6)
	Exhaust pipes and mountings					I				I					I			I	I : Every 24 months	MA-8 (item 10)
	Air Filter ⁽³⁾		I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I : Every 6 months R: Every 36 months	MA-5 (item 2, 3)
FUEL	Fuel lines and connections ⁽⁴⁾									I								I	I : Every 36 months	MA-7 (item 9)
	Fuel tank cap gasket																	R	R: Every 72 months	MA-7 (item 8)
	Spark plugs**									R								R	R: Every 36 months	MA-6 (item 4)
IGNITION	Spark plugs**									R								R	R: Every 36 months	MA-6 (item 4)
EVAP	Charcoal canister	California only																I	I : Every 72 months	MA-7 (item 7)
EXHAUST	Heated oxygen sensors*	Except California	R: 128,000 km (80,000 miles) only.																MA-8 (item 11)	
BRAKES	Brake linings and drums ⁽⁵⁾			I		I		I		I		I		I		I		I	I : Every 12 months	MA-9 (item 15)
	Brake pads and discs			I		I		I		I		I		I		I		I	I : Every 12 months	MA-9 (item 14)
	Brake line pipes and hoses					I				I				I				I	I : Every 24 months	MA-8 (item 13)
CHASSIS	Steering linkage			I		I		I		I		I		I		I		I	I : Every 12 months	MA-10 (item 16)
	Ball joints and dust covers			I		I		I		I		I		I		I		I	I : Every 12 months	MA-10 (item 16)
	Automatic transmission					R				R				R				R	R: Every 24 months	MA-11 (item 19)
	Transfer and differential					R				R				R				R	R: Every 24 months	MA-11 (item 20)
	Steering gear box oils ⁽⁶⁾					I				I				I				I	I : Every 24 months	MA-10 (item 17)
	Front wheel bearing and thrust bush grease									R								R	R: Every 36 months	MA-12 (item 21)
	Steering knuckle and chassis grease ⁽⁷⁾			R		R		R		R		R		R		R		R	R: Every 12 months	MA-13 (item 22)
	Propeller shaft grease ⁽⁷⁾			R		R		R		R		R		R		R		R	R: Every 12 months	MA-13 (item 22)
Bolts and nuts on chassis and body ⁽⁸⁾			I		I		I		I		I		I		I		I	I : Every 12 months	MA-14 (item 23)	

Maintenance services indicated by a star (*) or asterisk (**) are required under the terms of the Emission Control Systems Warranty (ECW). See Owners Guide or Warranty Booklet for complete warranty information.

★ For vehicle sold in California * For vehicle sold outside California

HINT:

- (1) After 96,000 km (60,000 miles) or 72 months, inspect every 12,000 km (7,500 miles) or 12 months.
- (2) After 72,000 km (45,000 miles) or 36 months, replace every 48,000 km (30,000 miles) or 24 months.
- (3) Applicable when operating mainly on dusty roads. If not, follow schedule B.
- (4) Includes inspection of fuel tank band and vapor vent system.
- (5) Also applicable to lining drum for parking brake.
- (6) Inspect the steering gear box for oil leakage only.

- (7) If the propeller shaft has been immersed in water, it should be re-greased within a day.
 - (8) Applicable only when operating mainly on rough, muddy roads. The applicable parts are listed below. For other usage conditions, refer to SCHEDULE B.
- Bolts for sheet installation.

SCHEDULE B

Maintenance operations: A = Check and adjust if necessary;
R = Replace, change or lubricate;
I = Inspect and correct or replace if necessary

Conditions: Conditions other than those listed for SCHEDULE A.

System	Service interval (Odometer reading or months, whichever comes first)	Maintenance service beyond 96,000 km (60,000 miles) should be performed at the same intervals shown in each maintenance schedule.										See page (item No.)
		km x 1,000	12	24	36	48	60	72	84	96	Months	
		Miles x 1,000	7.5	15	22.5	30	37.5	45	52.5	60		
ENGINE	Valve clearance*									A	A: Every 72 months	MA-8 (item 12)
	Drive belts ⁽¹⁾					I				I	I : 36 months, 72 months	MA-5 (item 1)
	Engine oil and oil filter*	R	R	R	R	R	R	R	R	R	R: Every 12 months	MA-6 (item 5)
	Engine coolant ⁽²⁾							R			R: 36 months	MA-6 (item 6)
	Exhaust pipes and mountings					I				I	I : Every 36 months	MA-8 (item 10)
FUEL	Air Filter*					R				R	R: Every 36 months	MA-5 (item 3)
	Fuel lines and connections ⁽³⁾					I				I	I : Every 36 months	MA-7 (item 9)
	Fuel tank cap gasket									R	R: Every 72 months	MA-7 (item 8)
IGNITION	Spark plugs**					R				R	R: Every 36 months	MA-6 (item 4)
EVAP	Charcoal canister	California only								I	I : Every 72 months	MA-7 (item 7)
EXHAUST	Heated oxygen sensors	Except california	R: 128,000 km (80,000 miles) only.								_____	MA-8 (item 11)
BRAKES	Brake linings and drums ⁽⁴⁾			I		I		I		I	I : Every 24 months	MA-9 (item 15)
	Brake pads discs (Front and rear)			I		I		I		I	I : Every 24 months	MA-9 (item 14)
	Brake line pipes and hoses			I		I		I		I	I : Every 24 months	MA-8 (item 13)
CHASSIS	Steering linkage			I		I		I		I	I : Every 24 months	MA-10 (item 16)
	Ball joints and dust covers			I		I		I		I	I : Every 24 months	MA-10 (item 16)
	Front wheel bearing and thrust bush grease					R				R	R: Every 36 months	MA-12 (item 21)
	Steering knuckle and chassis grease ⁽⁵⁾			R		R		R		R	R: Every 24 months	MA-13 (item 22)
	Propeller shaft grease ⁽⁵⁾			R		R		R		R	R: Every 24 months	MA-13 (item 22)
	Automatic transmission			I		I		I		I	I : Every 24 months	MA-10 (item 18)
	Transfer, differential and steering gear box oil ⁽⁷⁾			I		I		I		I	I : Every 24 months	MA-10 (item 17,18)
	Bolt and nuts on chassis and body ⁽⁸⁾			I		I		I		I	I : Every 24 months	MA-14 (item 23)

Maintenance service indicated by a star (*) or asterisk (**) are required under the terms of the Emission Control Systems Warranty (ECSW). See Owner's Guide or Warranty Booklet for complete warranty information.

* For vehicle sold in California * For vehicle sold outside California.

HINT:

- (1) After 96,000 km (60,000 miles) or 72 months, inspect every 12,000 km (7,500 miles) or 12 months.
- (2) After 72,000 km (45,000 miles) or 36 months, replace every 48,000 km (30,000 miles) or 24 months.
- (3) Includes inspection of fuel tank band vapor vent system.
- (4) Also applicable to lining drum for parking brake.
- (5) If the propeller shaft has been immersed in water, it should be re-greased within a day.
- (6) Inspect the steering gear box for oil leakage only.

- (7) The applicable parts are listed below.
- Bolts for sheet installation.