

PRECAUTIONS

When with FIPG material, you must observe the following.

TR01H-01

Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces.

Thoroughly clean all components to remove all the loose material.

Clean both sealing surfaces with a non-residue solvent.

Apply the seal packing in approx. 1 mm (0.04 in.) bead along the sealing surface.

Parts must be assembled within 10 minutes of application. Otherwise, the packing (FIPG) material must be removed and reapplied.