


ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

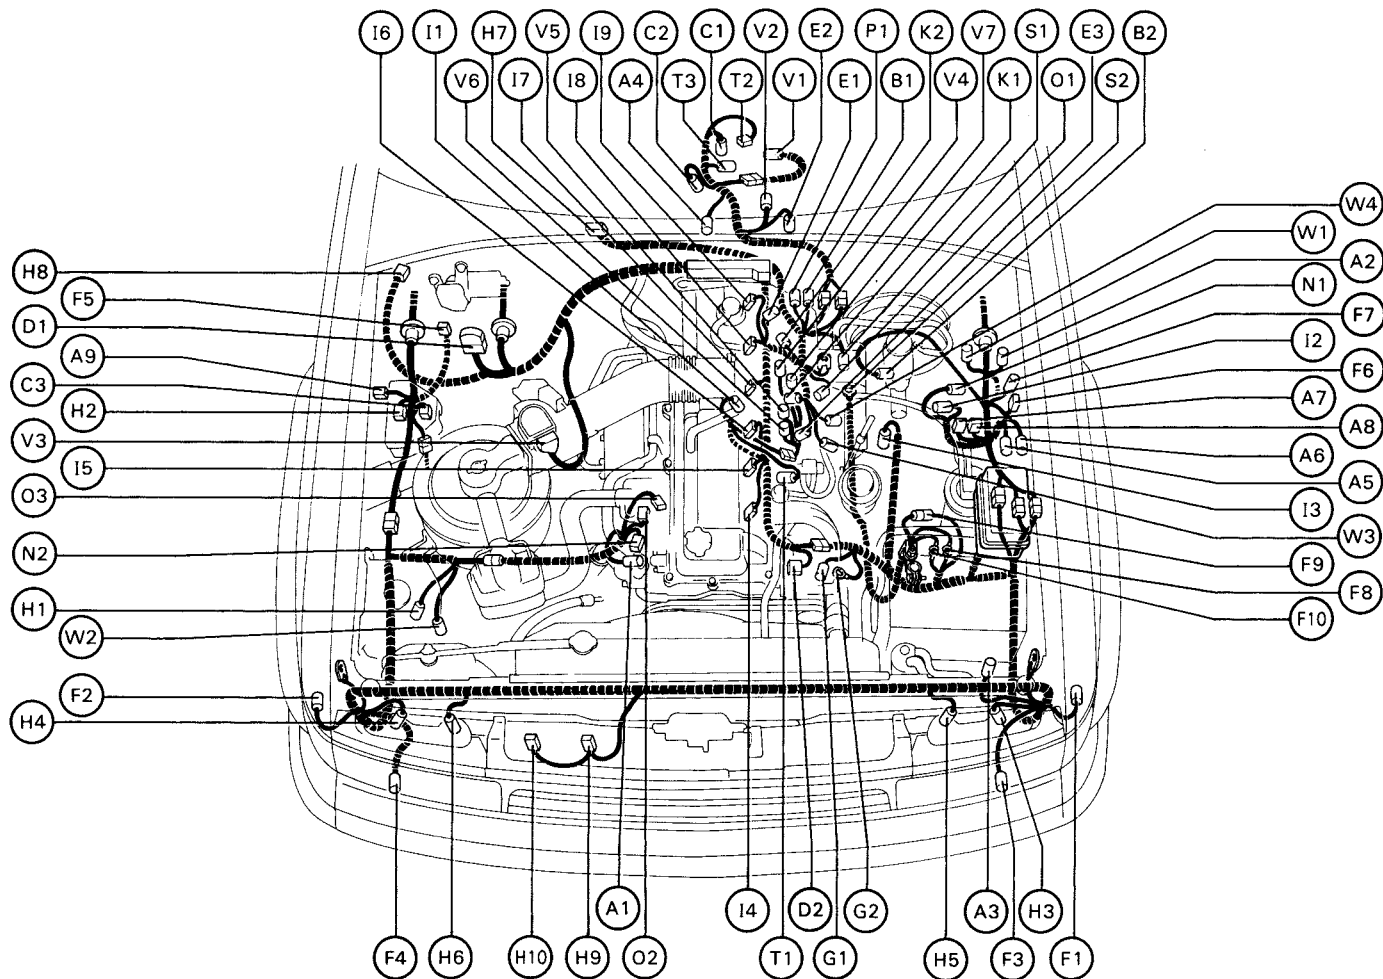


- A 1 A/C Magnetic Clutch
- A 2 A/C Magnetic Valve
- A 3 A/C Pressure SW
- A 4 A/T Fluid Temp. Sensor
- A 5 ABS Actuator
- A 6 ABS Actuator
- A 7 ABS Relay
- A 8 ABS Relay
- A 9 Auto Antenna Control Motor
- B 1 Back-Up Light and A/T Indicator SW
- B 2 Brake Fluid Level SW
- C 1 Center Diff. Lock Control Motor
- C 2 Center Diff. Lock Indicator SW
- C 3 Cruise Control Actuator
- D 1 Data Link Connector 1 (Check Connector)
- D 2 Distributor
- E 1 EGR Gas Temp. Sensor (for California) or Short Pin (Ex. California)
- E 2 Electronic Controlled Transmission Solenoid
- E 3 Engine Coolant Temp. Sensor (EFI Water Temp. Sensor)
- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Turn Signal Light LH
- F 4 Front Turn Signal Light RH
- F 5 Front Wiper Control Motor

- F 6 Fuel Pump Relay
- F 7 Fuel Pump Resistor
- F 8 Fusible Link (AM1)
- F 9 Fusible Link (AM2)
- F 10 Fusible Link (Main)
- G 1 Generator (Alternator)
- G 2 Generator (Alternator)
- H 1 Headlight Cleaner Motor
- H 2 Headlight Cleaner Relay
- H 3 Headlight No. 1 LH
- H 4 Headlight No. 1 RH
- H 5 Headlight No. 2 LH
- H 6 Headlight No. 2 RH
- H 7 Heated Oxygen Sensor Left (Oxygen Sensor Left)
- H 8 Heated Oxygen Sensor Right (Oxygen Sensor Right)
- H 9 Horn LH
- H 10 Horn RH
- I 1 Idle Air Control Valve (ISC Valve)
- I 2 Igniter
- I 3 Ignition Coil
- I 4 Injector No. 1
- I 5 Injector No. 2
- I 6 Injector No. 3
- I 7 Injector No. 4
- I 8 Injector No. 5
- I 9 Injector No. 6
- K 1 Knock Sensor Front
- K 2 Knock Sensor Rear
- N 1 Noise Filter (for Ignition System)

- N 2 Noise Filter (for Oil Pressure Sender Gauge)
- O 1 Oil Level Sensor
- O 2 Oil Pressure Sender Gauge
- O 3 Oil Pressure Sender Gauge
- P 1 Park/Neutral Position SW (Neutral Start SW)
- S 1 Starter
- S 2 Starter
- T 1 Throttle Position Sensor
- T 2 Transfer L4 Position SW
- T 3 Transfer Neutral Position SW
- V 1 Vehicle Speed Sensor (for Combination Meter) (Speed Sensor (for Combination Meter))
- V 2 Vehicle Speed Sensor (for Electronic Controlled Transmission) (Speed Sensor (for Electronic Controlled Transmission))
- V 3 Volume Air Flow (Air Flow Meter)
- V 4 VSV (for EGR)
- V 5 VSV (for EVAP)
- V 6 VSV (for Fuel Pressure Control)
- V 7 VSV (for PAIR)
- W 1 Washer Change Valve
- W 2 Washer Motor
- W 3 Water Temp. Sender
- W 4 Water Temp. SW (for A/C)

Position of Parts in Instrument Panel

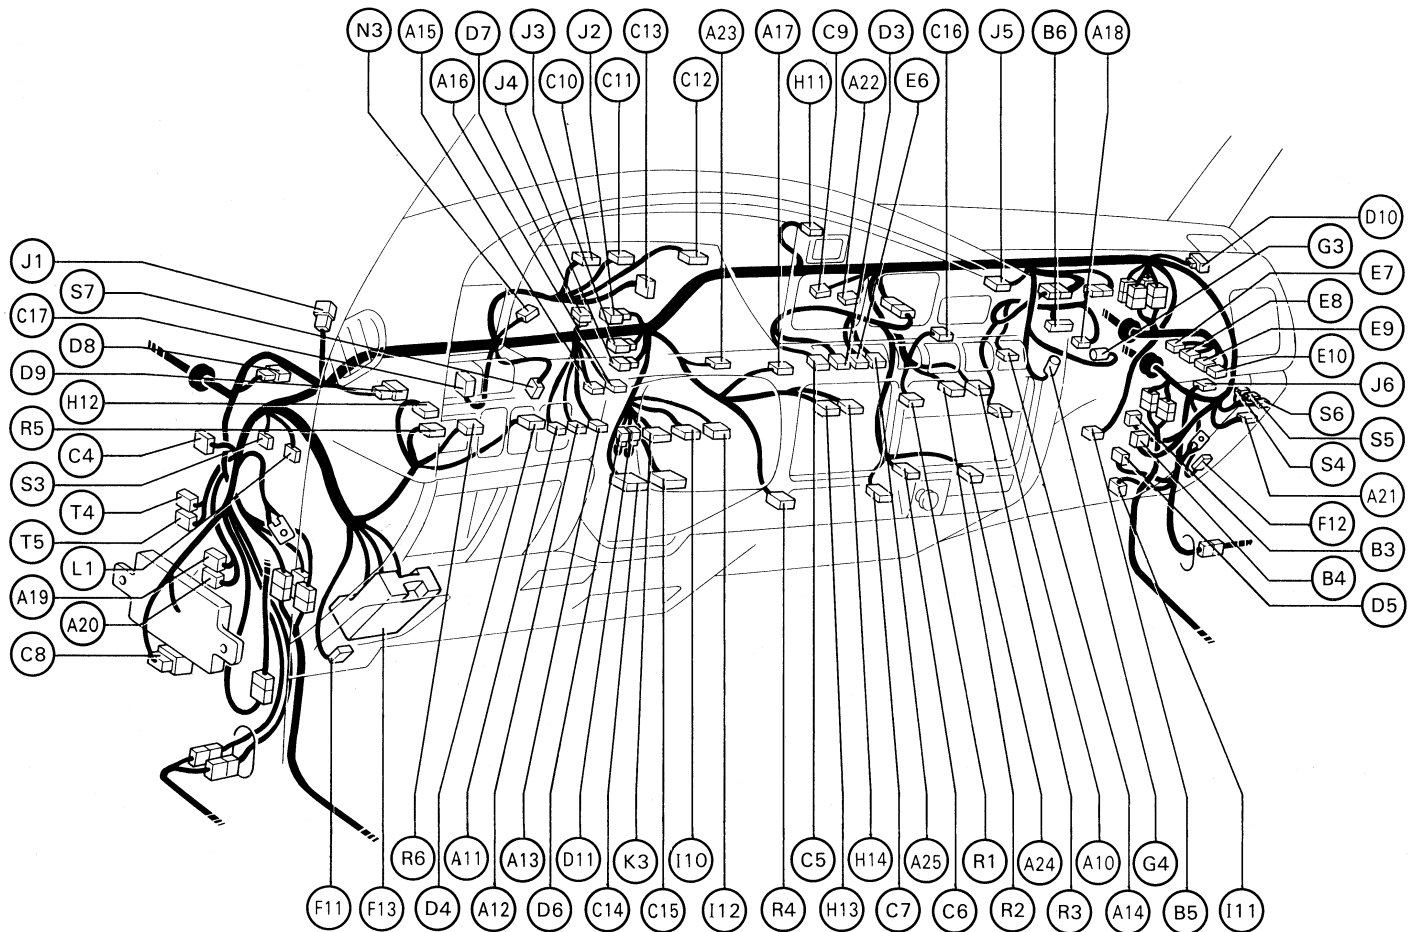


- A 10 A/C Amplifier
- A 11 A/C Connector (Not for Use in North America)
- A 12 A/C Connector (Not for Use in North America)
- A 13 A/C Connector (Not for Use in North America)
- A 14 A/C Cut Relay (for Water Temp.)
- A 15 A/C Short Connector
- A 16 A/C Short Connector
- A 17 A/C System Amplifier
- A 18 A/C Thermistor
- A 19 ABS ECU
- A 20 ABS ECU
- A 21 Air Inlet Servo Motor
- A 22 Air Mix Control Servo Motor
- A 23 Air Vent Mode Control Servo Motor
- A 24 Ashtray Illumination
- A 25 Auto Antenna Control SW
- B 3 Blower Motor (for A/C)
- B 4 Blower Motor (for Heater)
- B 5 Blower Resistor
- B 6 Blower Speed Control Relay
- C 4 Center Diff. Lock Control Relay
- C 5 Center Diff. Lock Control SW (w/o ABS) or Short Pin (w/ABS)
- C 6 Cigarette Lighter
- C 7 Cigarette Lighter Illumination
- C 8 Circuit Opening Relay
- C 9 Clock
- C 10 Combination Meter
- C 11 Combination Meter
- C 12 Combination Meter

- C 13 Combination Meter (for A/T Indicator)
- C 14 Combination SW
- C 15 Combination SW
- C 16 Cooling Fan (for Radio and Tape Player)
- C 17 Cruise Control ECU
- D 3 Defogger SW
- D 4 Diff. Lock Control SW
- D 5 Diff. Lock ECU
- D 6 Diode (for Front Washer)
- D 7 Diode (for Headlight)
- D 8 Diode (for Interior Light)
- D 9 Diode (for Interior Light)
- D 10 Diode (for Neutral Indicator)
- D 11 Diode (for Rear Washer)
- E 6 Electronic Controlled Transmission Pattern Select SW
- E 7 Engine Control Module (Engine ECU)
- E 8 Engine Control Module (Engine ECU)
- E 9 Engine Control Module (Engine ECU)
- E 10 Engine Control Module (Engine ECU)
- F 11 Front Speaker LH
- F 12 Front Speaker RH
- F 13 Fuse Block
- G 3 Glove Box Light
- G 4 Glove Box Light SW
- H 11 Hazard SW
- H 12 Headlight Cleaner SW
- H 13 Heater Control SW and A/C SW

- H 14 Heater Control SW and A/C SW
- I 10 Ignition Key Cylinder Light
- I 11 Ignition Key Cylinder Light Relay
- I 12 Ignition SW and Unlock Warning SW
- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector
- K 3 Key Interlock Solenoid
- L 1 Light Retainer Relay
- N 3 Noise Filter (for Stop Light)
- R 1 Radio and Player
- R 2 Radio and Player
- R 3 Radio and Player
- R 4 Rear Heater SW
- R 5 Remote Control Mirror SW
- R 6 Rheostat
- S 3 Seat Belt Warning Relay
- S 4 Stereo Component Amplifier
- S 5 Stereo Component Amplifier
- S 6 Stereo Component Amplifier
- S 7 Stop Light SW
- T 4 Transmission Control Module (Electronic Controlled Transmission ECU)
- T 5 Transmission Control Module (Electronic Controlled Transmission ECU)


ELECTRICAL WIRING ROUTING

Position of Parts in Body

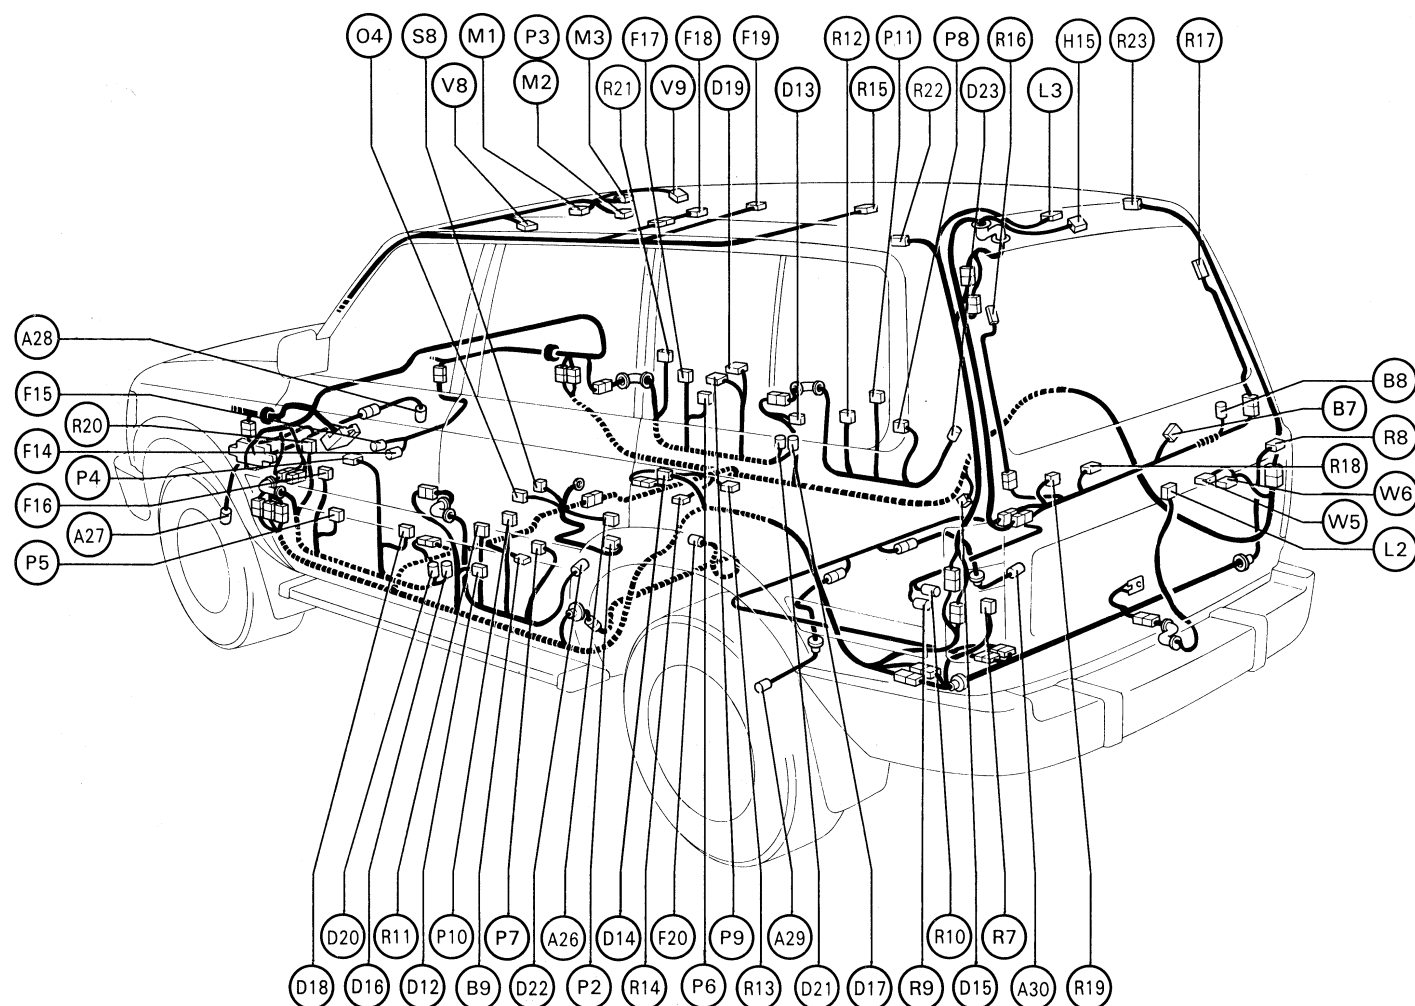

A 26	ABS Deceleration Sensor	F 18	Front Interior Light (w/ Moon Roof)	R 7	Rear Combination Light LH
A 27	ABS Speed Sensor Front LH	F 19	Front Interior Light (w/o Moon Roof)	R 8	Rear Combination Light RH
A 28	ABS Speed Sensor Front RH	F 20	Fuel Sender and Pump	R 9	Rear Diff. Lock Control Motor
A 29	ABS Speed Sensor Rear LH	H 15	High Mount Stop	R 10	Rear Diff. Lock Position SW
A 30	ABS Speed Sensor Rear RH	L 2	License Plate Light	R 11	Rear Door Speakers LH
B 7	Back Door Courtesy SW	L 3	Luggage Compartment Light	R 12	Rear Door Speakers RH
B 8	Back Door Lock Control Motor	M 1	Moon Roof Control Relay	R 13	Rear Heater
B 9	Buckle SW (w/o Power Seat)	M 2	Moon Roof Control SW and Personal Light	R 14	Rear Heater Relay
D 12	Door Courtesy SW Front LH	M 3	Moon Roof Limit SW and Motor	R 15	Rear Interior Light
D 13	Door Courtesy SW Front RH	O 4	O/D Main SW	R 16	Rear Window Defogger (+)
D 14	Door Courtesy SW Rear LH	P 2	Parking Brake SW	R 17	Rear Window Defogger (-)
D 15	Door Courtesy SW Rear RH	P 3	Personal Light (w/o Moon Roof)	R 18	Rear Wiper Control Motor
D 16	Door Key Lock and Unlock SW LH	P 4	Power Window Master SW	R 19	Rear Wiper Control Relay
D 17	Door Key Lock and Unlock SW RH	P 5	Power Window Motor Front LH	R 20	Remote Control Mirror LH
D 18	Door Lock Control Relay	P 6	Power Window Motor Front RH	R 22	Remote Control Mirror RH
D 19	Door Lock Control SW RH	P 7	Power Window Motor Rear LH	R 23	Roof Speaker LH
D 20	Door Lock Motor Front LH	P 8	Power Window Motor Rear RH	R 24	Roof Speaker RH
D 21	Door Lock Motor Front RH	P 9	Power Window SW Front RH	S 8	Shift Lock ECU
D 22	Door Lock Motor Rear LH	P 10	Power Window SW Rear LH	V 8	Vanity Light LH
D 23	Door Lock Motor Rear RH	P 11	Power Window SW Rear RH	V 9	Vanity Light RH
F 14	Front Diff. Lock Control Motor			W 5	Woofer Speaker
F 15	Front Diff. Lock Position SW			W 6	Woofer Speaker Amplifier
F 16	Front Door Speaker LH				
F 17	Front Door Speaker RH				

Position of Parts in Seat

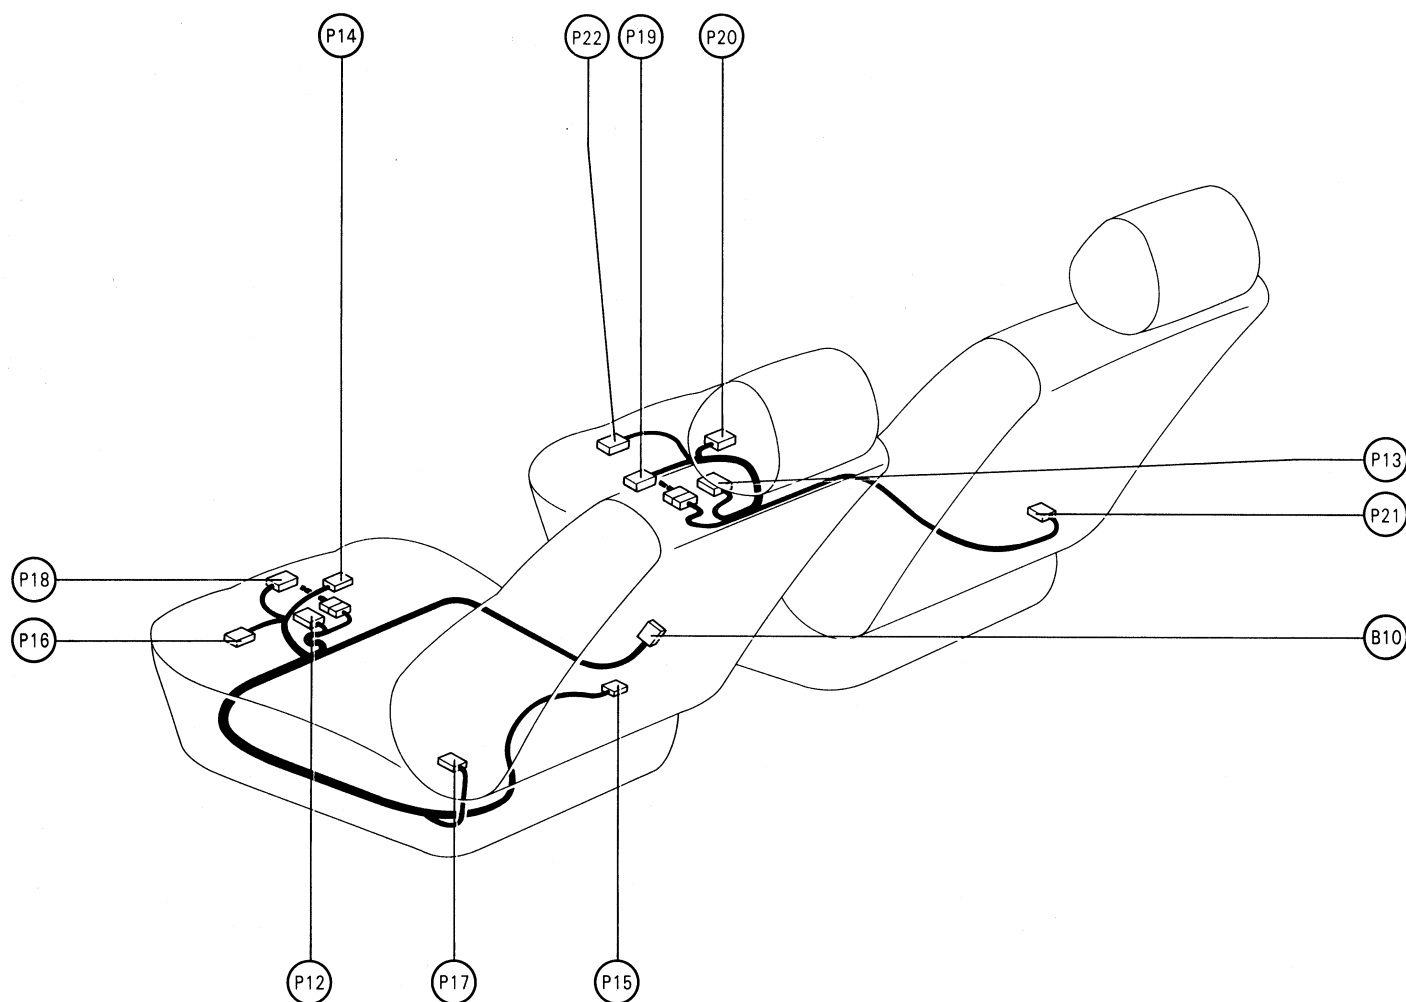

B 10 Buckle SW LH (w/ Power Seat)

- P 12 Power Seat Control SW (for Driver's Seat)
- P 13 Power Seat Control SW (for Passenger's Seat)
- P 14 Power Seat Motor (for Driver's Seat Front Vertical Control)
- P 15 Power Seat Motor (for Driver's Seat Lumbar Support Control)
- P 16 Power Seat Motor (for Driver's Seat Rear Vertical Control)

- P 17 Power Seat Motor (for Driver's Seat Rear Reclining Control)
- P 18 Power Seat Motor (for Driver's Seat Slide Control)
- P 19 Power Seat Motor (for Passenger's Seat Front Vertical Control)
- P 20 Power Seat Motor (for Passenger's Seat Rear Vertical Control)
- P 21 Power Seat Motor (for Passenger's Seat Reclining Control)
- P 22 Power Seat Motor (for Passenger's Seat Slide Control)