
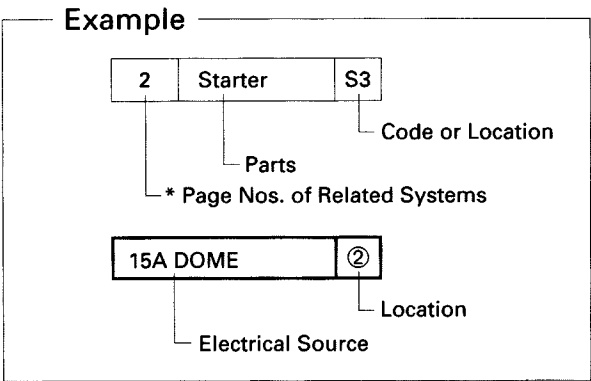


POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.


The next page and following pages show the parts to which each electrical source outputs current.

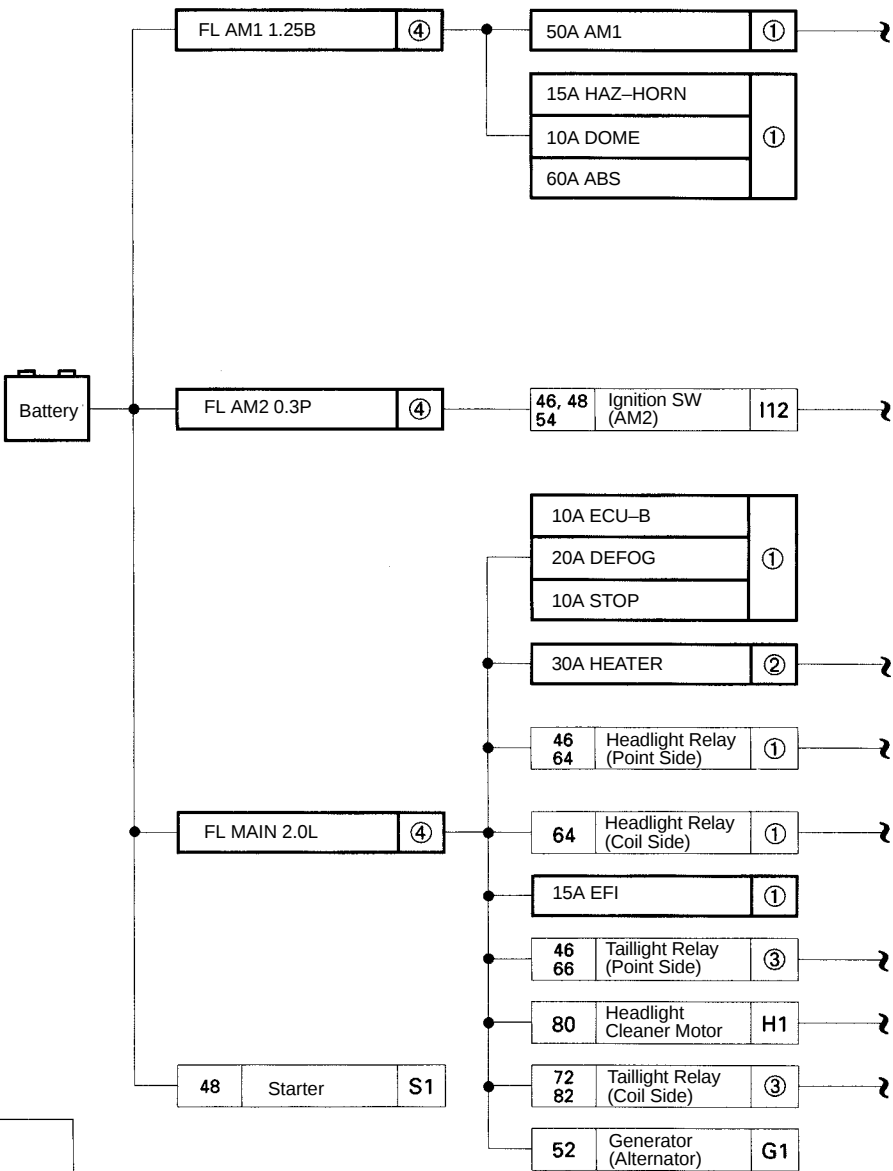

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page18)

(2) : Fuse Block (F13 See on page20)

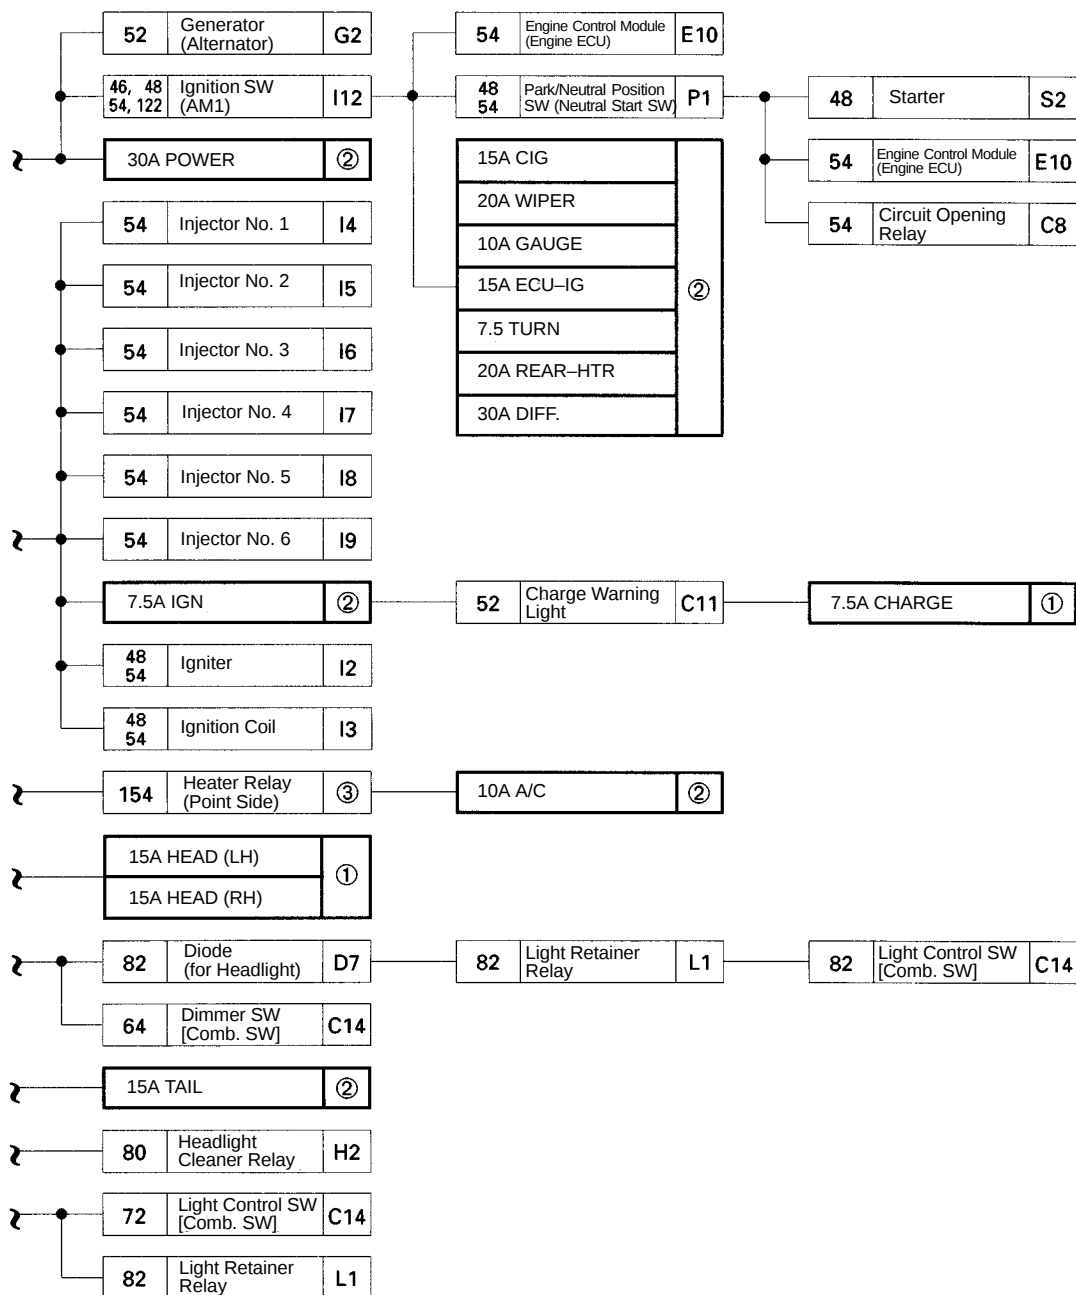

(3) : R/B No. 1 (See on page 20)

(4) : Fusible Link (F8, F9, F10
See on page 22)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		154	154	113	113	109	154	113	154	154	72	72 109	113	70 122 136	146	154	154	154	154	76	132
											A/C Pressure SW	A/T Fluid Temp. Sensor	ABS Actuator	ABS Relay	Auto Antenna Control Motor	A/C Amplifier	ABS ECU	Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Ashtray Illumination	Auto Antenna Control SW	ABS Deceleration Sensor	Back-Up Light and A/T Indicator SW	Brake Fluid Level SW	Blower Motor (for A/C)	Blower Motor (for Heater)	Blower Resistor	Blower Speed Control Relay	Back Door Courtesy SW	Buckle SW (w/o Power Seat)
			A3	A4	A5	A7	A8	A9	A10	A19	A20	A21	A23	A24	A25	A26	B1	B2	B3	B4	B5	B6	B7	B9						
①	7.5A	CHARGE																												
	15A	EFI																												
	15A	HEAD (LH)																												
	15A	HEAD (RH)																												
	15A	HAZ-HORN																												
	10A	DOVE																												
②	60A	ABS			●		●					●																	●	
	15A	CIG						●							●															
	15A	TAIL													●				●											
	10A	STOP										●						●												
	20A	DEFOG											●																	
	20A	WIPER																												
	10A	GAUGE	●	●	●		●		●		●	●			●		●						●			●				●
	7.5A	TURN																												
	15A	ECU-IG										●			●															
	20A	REAR-HTR																												
	7.5A	IGN																												
	10A	A/C							●																					
	30A	DIFF.																												
	30A	POWER																												
	30A	HEATER																	●		●		●		●					
	10A	ECU-B										●																		

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)

② : Fuse Block (See page 20)

POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		142	118	54 113 118 122	72 130	138	138	88	82	76	76 104	136	88	76 104 132	76 82 104	76	76	104	122	54 118	66	66	78
									C16	C17	D1	D3	D4	D5	D6	D7	D8	D9	D10	D11	D12	D13	D14	D15	D18	E6	E7 E9 E10	F1	F2	F3
①	7.5A	CHARGE																												
	15A	EFI									●																●			
	15A	HEAD (LH)																												
	15A	HEAD (RH)																												
	15A	HAZ-HORN																												
	10A	DOME														●	●				●	●	●	●					●	
	60A	ABS																												
②	15A	CIG																												
	15A	TAIL										●																●	●	
	10A	STOP								●																	●			
	20A	DEFOG																												
	20A	WIPER													●	●				●										
	10A	GAUGE	●	●	●	●												●							●					
	7.5A	TURN																												●
	15A	ECU-IG								●																				
	20A	REAR-HTR																												
	7.5A	IGN																								●				
	10A	A/C																												
	30A	DIFF.											●	●																
	30A	POWER																						●						
	30A	HEATER																												
	10A	ECU-B								●																				

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18)

(2) : Fuse Block (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		91	91	91	146	146	122	146	76	100 104	100	100	100	100	100	100	100	100	100	100	110	110	110	110	110	110			
			Parts																													
			Code or Location																													
			CB or Fuse		M1	M2	M3	O1	O2	O4	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15	P16	P17						
①	7.5A	CHARGE																														
	15A	EFI																														
	15A	HEAD (LH)																														
	15A	HEAD (RH)																														
	15A	HAZ-HORN																														
	10A	DOME	●	●						●																						
	60A	ABS																														
②	15A	CIG																														
	15A	TAIL																														
	10A	STOP																														
	20A	DEFOG																														
	20A	WIPER																														
	10A	GAUGE				●	●	●	●																							
	7.5A	TURN																														
	15A	ECU-IG																														
	20A	REAR-HTR																														
	7.5A	IGN																														
	10A	A/C																														
	30A	DIFF.																														
	30A	POWER	●		●						●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●		
	30A	HEATER																														
	10A	ECU-B																														

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)

② : Fuse Block (See page 20)

[illegible]

POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page18)

(2) : Fuse Block (See page 20)