


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

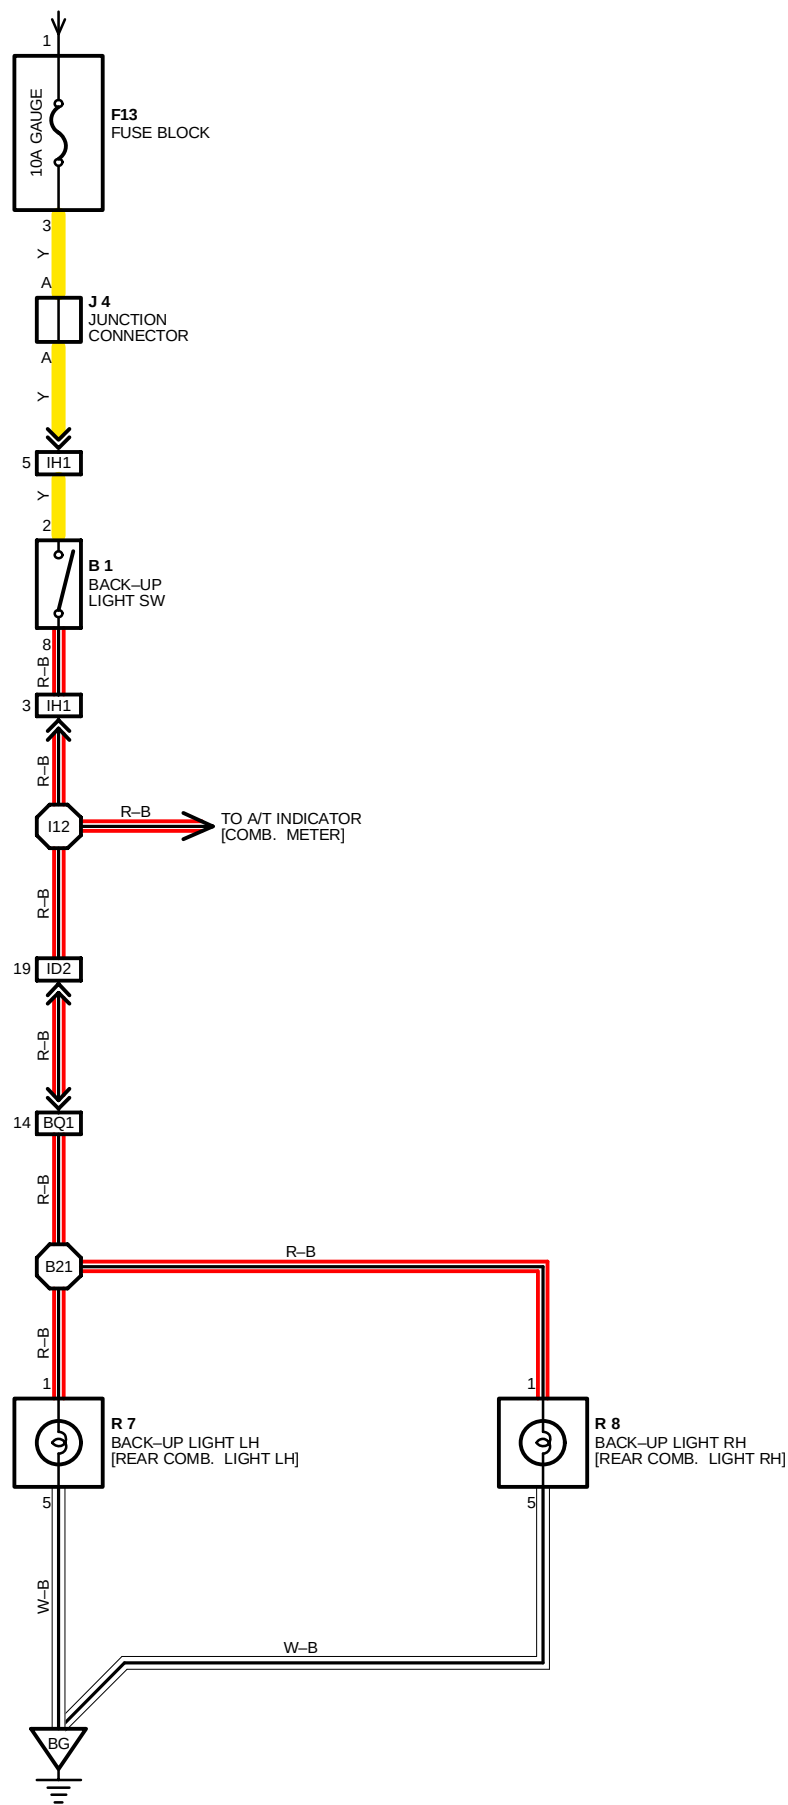

SERVICE HINTS

B 1 BACK-UP LIGHT SW

2-8 : CLOSED WITH SHIFT LEVER IN **R** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	22	J 4	23	R 8	24
F13	23	R 7	24		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IH1	28	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BQ1	30	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	30	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I12	28	COWL WIRE	B21	32	FLOOR NO. 3 WIRE

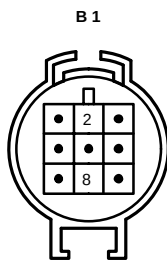

F13
(SEE PAGE 20)

