


CHARGING

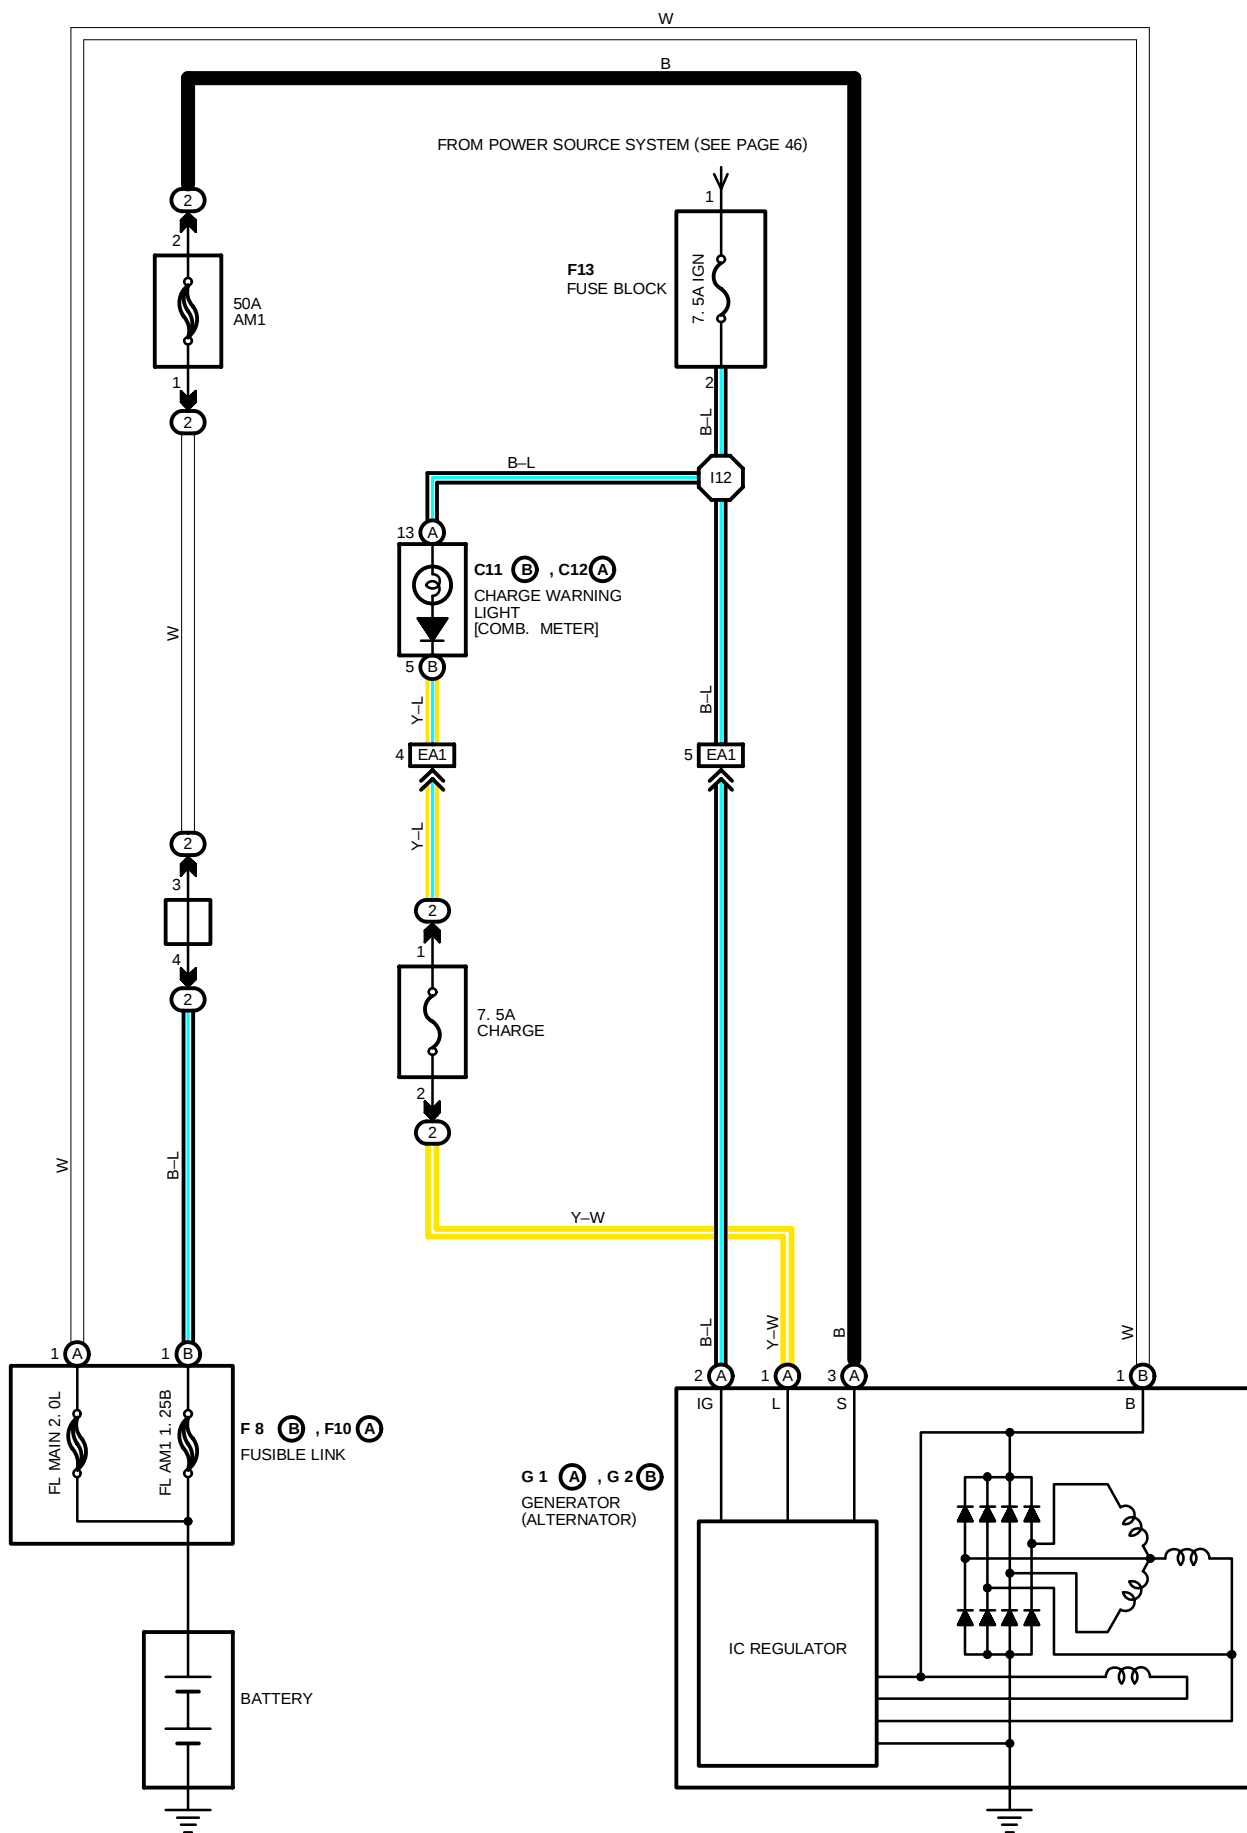

SERVICE HINTS

G 1(A) GENERATOR (ALTERNATOR)

- (A) 1-GROUND: **13.9–15.1 VOLTS** WITH ENGINE RUNNING AT **2000 RPM** AND **25°C (77°F)**
13.5–14.3 VOLTS WITH ENGINE RUNNING AT **2000 RPM** AND **115°C (239°F)**
 (A) 2-GROUND: **0–4 VOLTS** WITH IGNITION SW AT **ON** POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	B 23	F10	A 22	G 2	B 22
C12	A 23	F13	23		
F 8	B 22	G 1	A 22		

○ : RELAY BLOCKS




CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I12	28	COWL WIRE			

 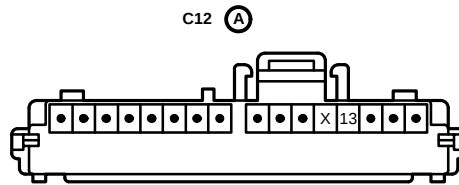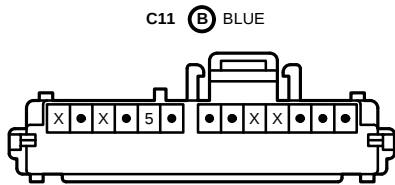

F13
(SEE PAGE 20)

