


CIGARETTE LIGHTER AND CLOCK

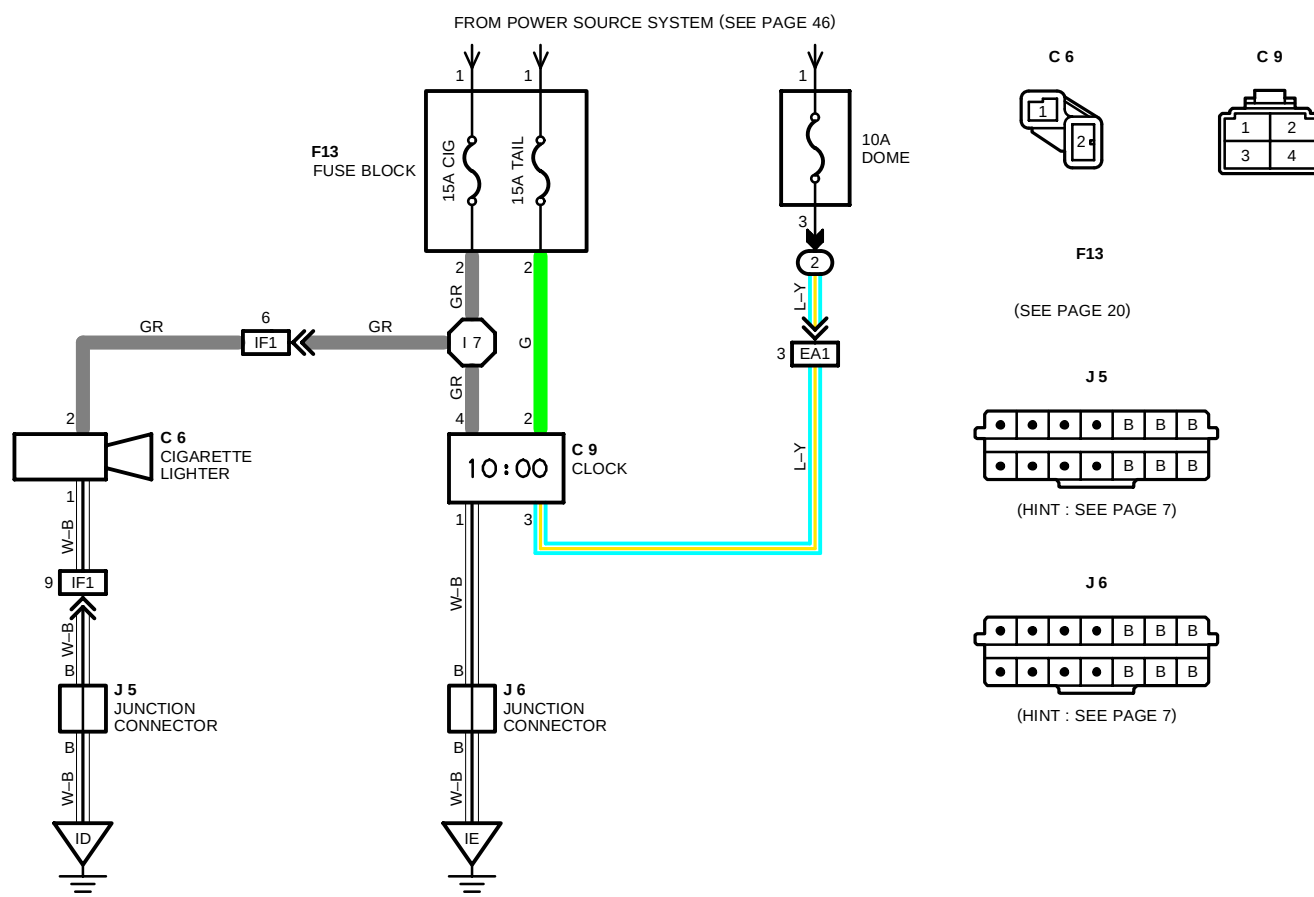

SERVICE HINTS

C 6 CIGARETTE LIGHTER

- 2-GROUND : APPROX. **12** VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
1-GROUND : ALWAYS CONTINUITY

C 9 CLOCK

- 3-GROUND : ALWAYS APPROX. **12 VOLTS** (POWER FOR CLOCK)
 4-GROUND : APPROX. **12 VOLTS** WITH IGNITION SW AT **ACC** OR **ON** POSITION (POWER FOR INDICATION)
 2-GROUND : APPROX. **12 VOLTS** WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
 1-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 6	23	F13	23	J 6	23
C 9	23	J 5	23		

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IF1	28	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	28	LEFT KICK PANEL
IE	28	RIGHT KICK PANEL

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
17	28	COWL WIRE			