


## HEADLIGHT CLEANER

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

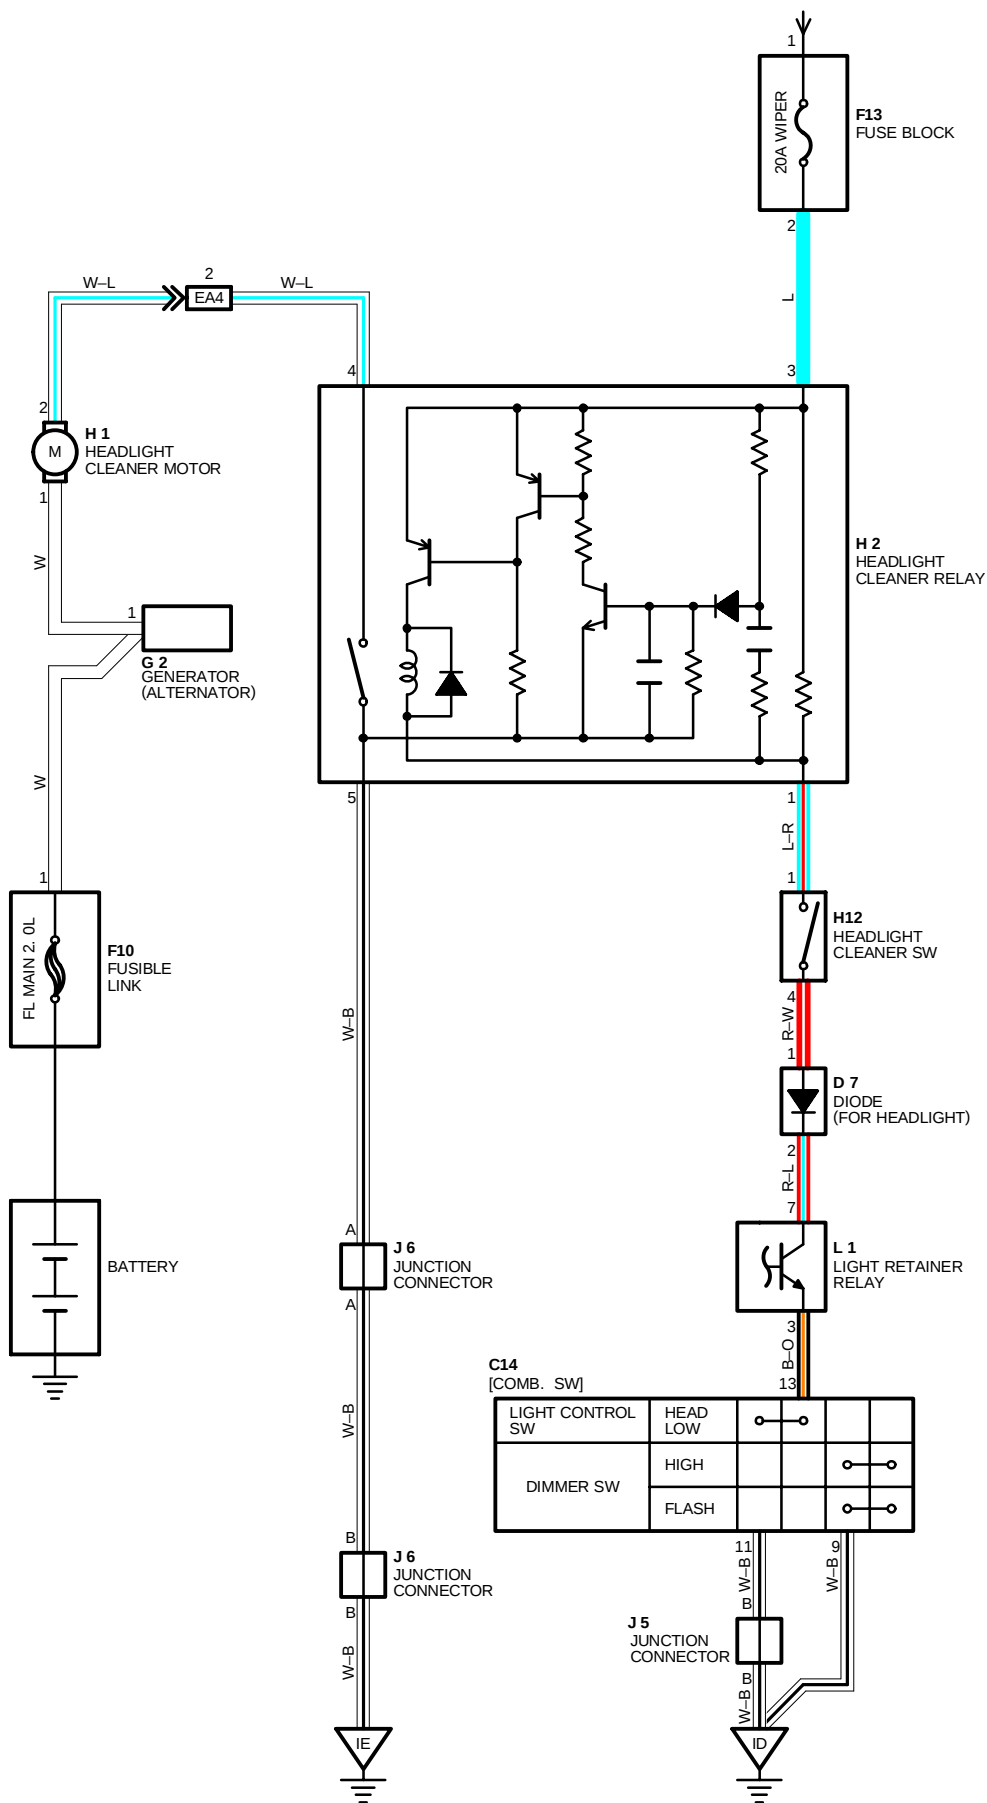

## SERVICE HINTS

### H 2 HEADLIGHT CLEANER RELAY

5-4: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION AND HEADLIGHT CLEANER SW ON

#### ○ : PARTS LOCATION

 


| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| C14  | 23       | H 1  | 22       | J 6  | 23       |
| D 7  | 23       | H 2  | 22       | L 1  | 23       |
| F10  | 22       | H12  | 23       |      |          |
| F13  | 23       | J 5  | 23       |      |          |

#### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|------------------------------------------------------------|
| EA4  | 26       | COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)         |

#### ▽ : GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| ID   | 28       | LEFT KICK PANEL        |
| IE   | 28       | RIGHT KICK PANEL       |

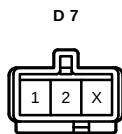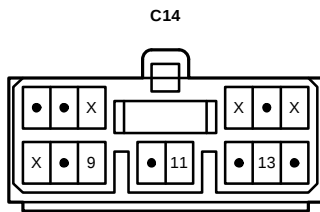

F13  
(SEE PAGE 20)

