


INTERIOR LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

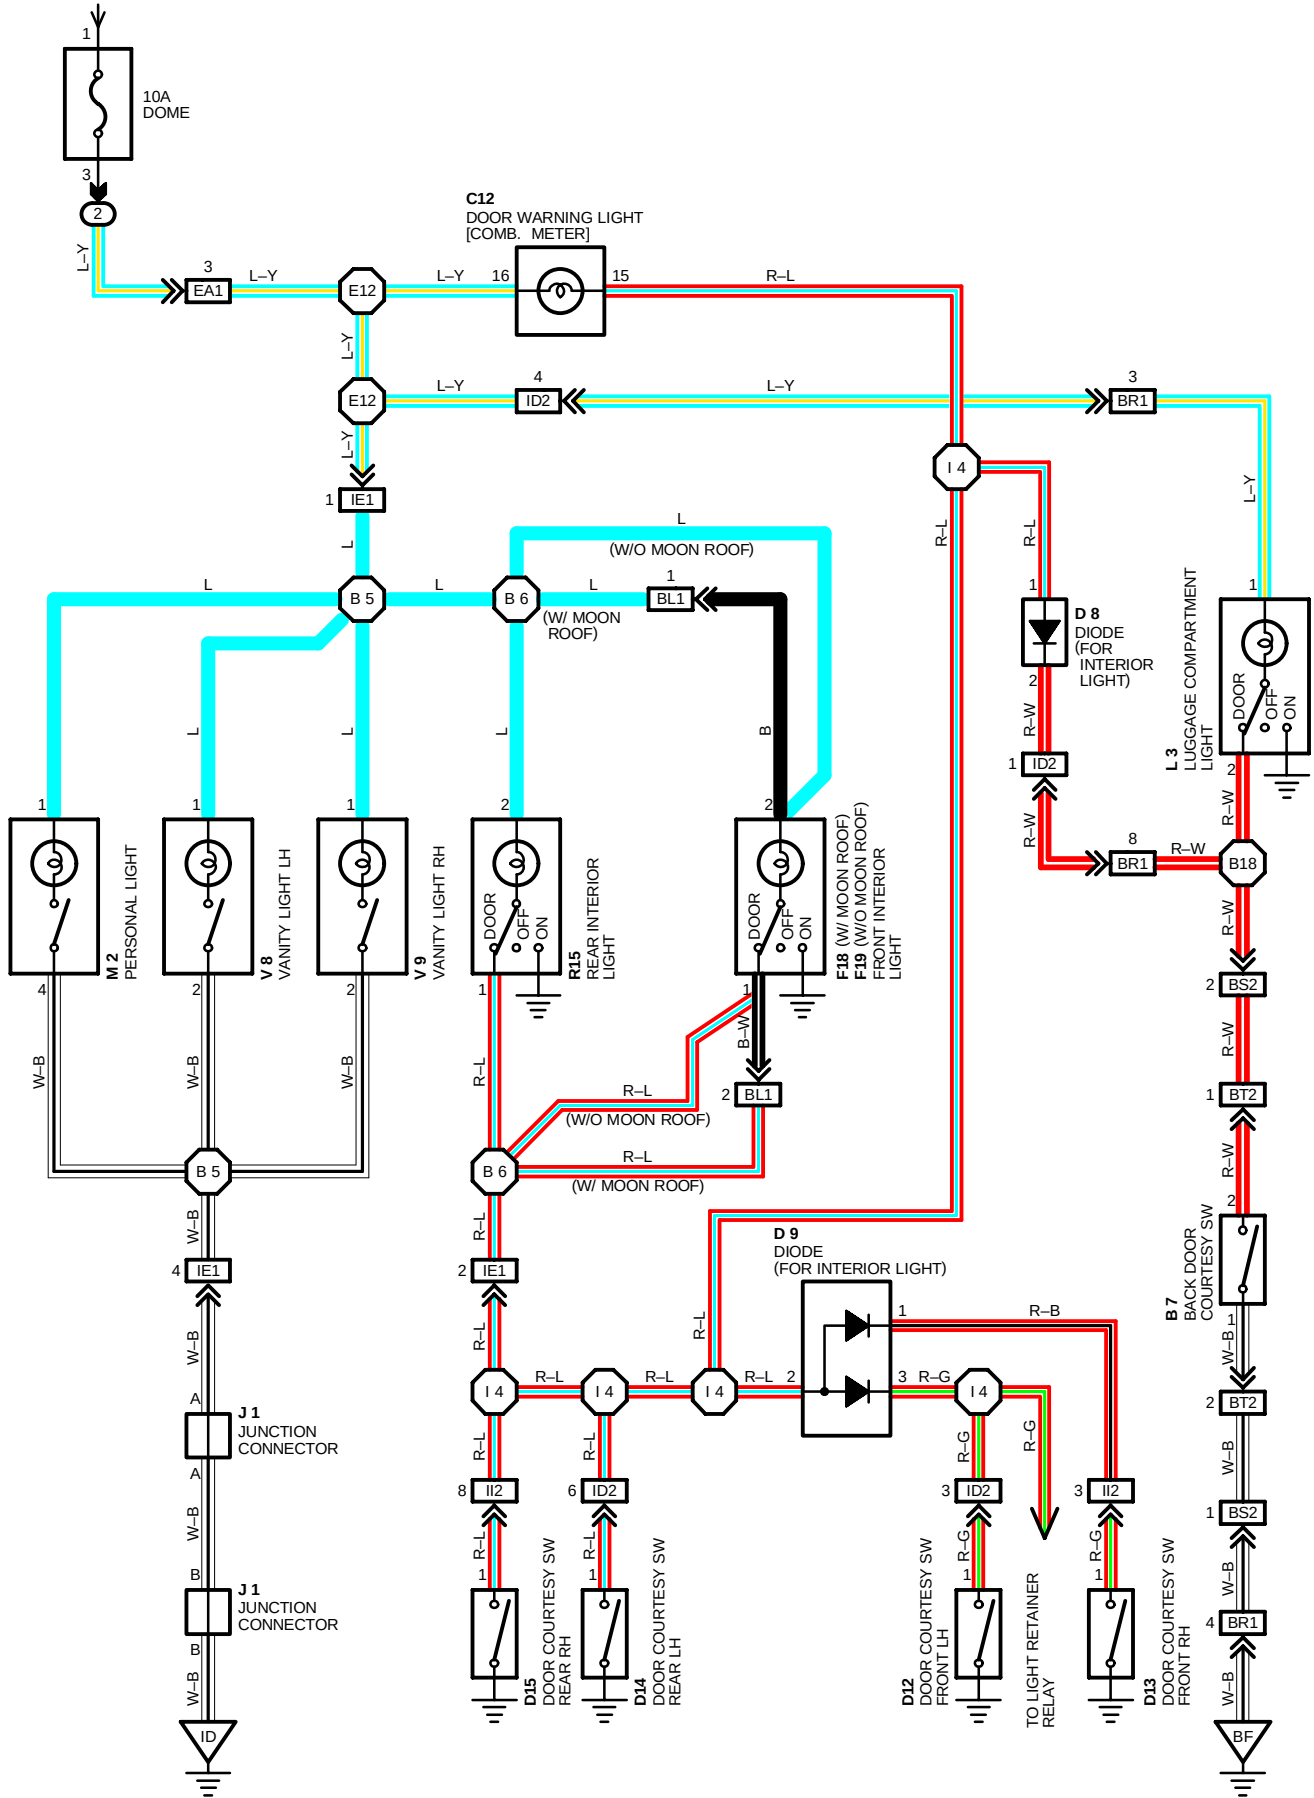

SERVICE HINTS

F18, F19 FRONT INTERIOR LIGHT

2-GROUND : APPROX. 12 VOLTS WITH INTERIOR LIGHT SW AT **ON** OR **OFF** POSITION

2-1 : CLOSED WITH SW AT **DOOR** POSITION

D12, D13, D14, D15 DOOR COURTESY SW

1-GROUND : CLOSED WITH DOOR OPEN

B 7 BACK DOOR COURTESY SW

1-GROUND : CLOSED WITH BACK DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 7	24	D14	24	M 2	24
C12	23	D15	24	R15	24
D 8	23	F18	24	V 8	24
D 9	23	F19	24	V 9	24
D12	24	J 1	23		
D13	24	L 3	24		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IE1	28	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
II2	28	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BL1	30	ROOF WIRE AND ROOF NO. 3 WIRE (ROOF LEFT)
BR1	30	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR2		
BS2	30	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BT2	30	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	28	LEFT KICK PANEL
BF	30	UNDER THE CENTER CONSOLE BOX


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E12	26	COWL WIRE	B 6	32	ROOF WIRE
I 4	28		B18	32	LUGGAGE ROOM WIRE
B 5	32	ROOF WIRE			

B 7



C12

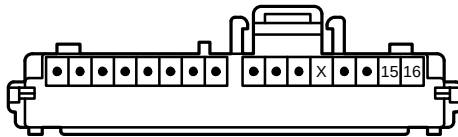

D 8 GRAY



D 9 WHITE



 
D12, D13 WHITE




D14, D15 BLUE



F18, F19, L 3, R15



J 1

 

(HINT : SEE PAGE 7)

M 2



V 8, V 9 BLUE

