


POWER SOURCE

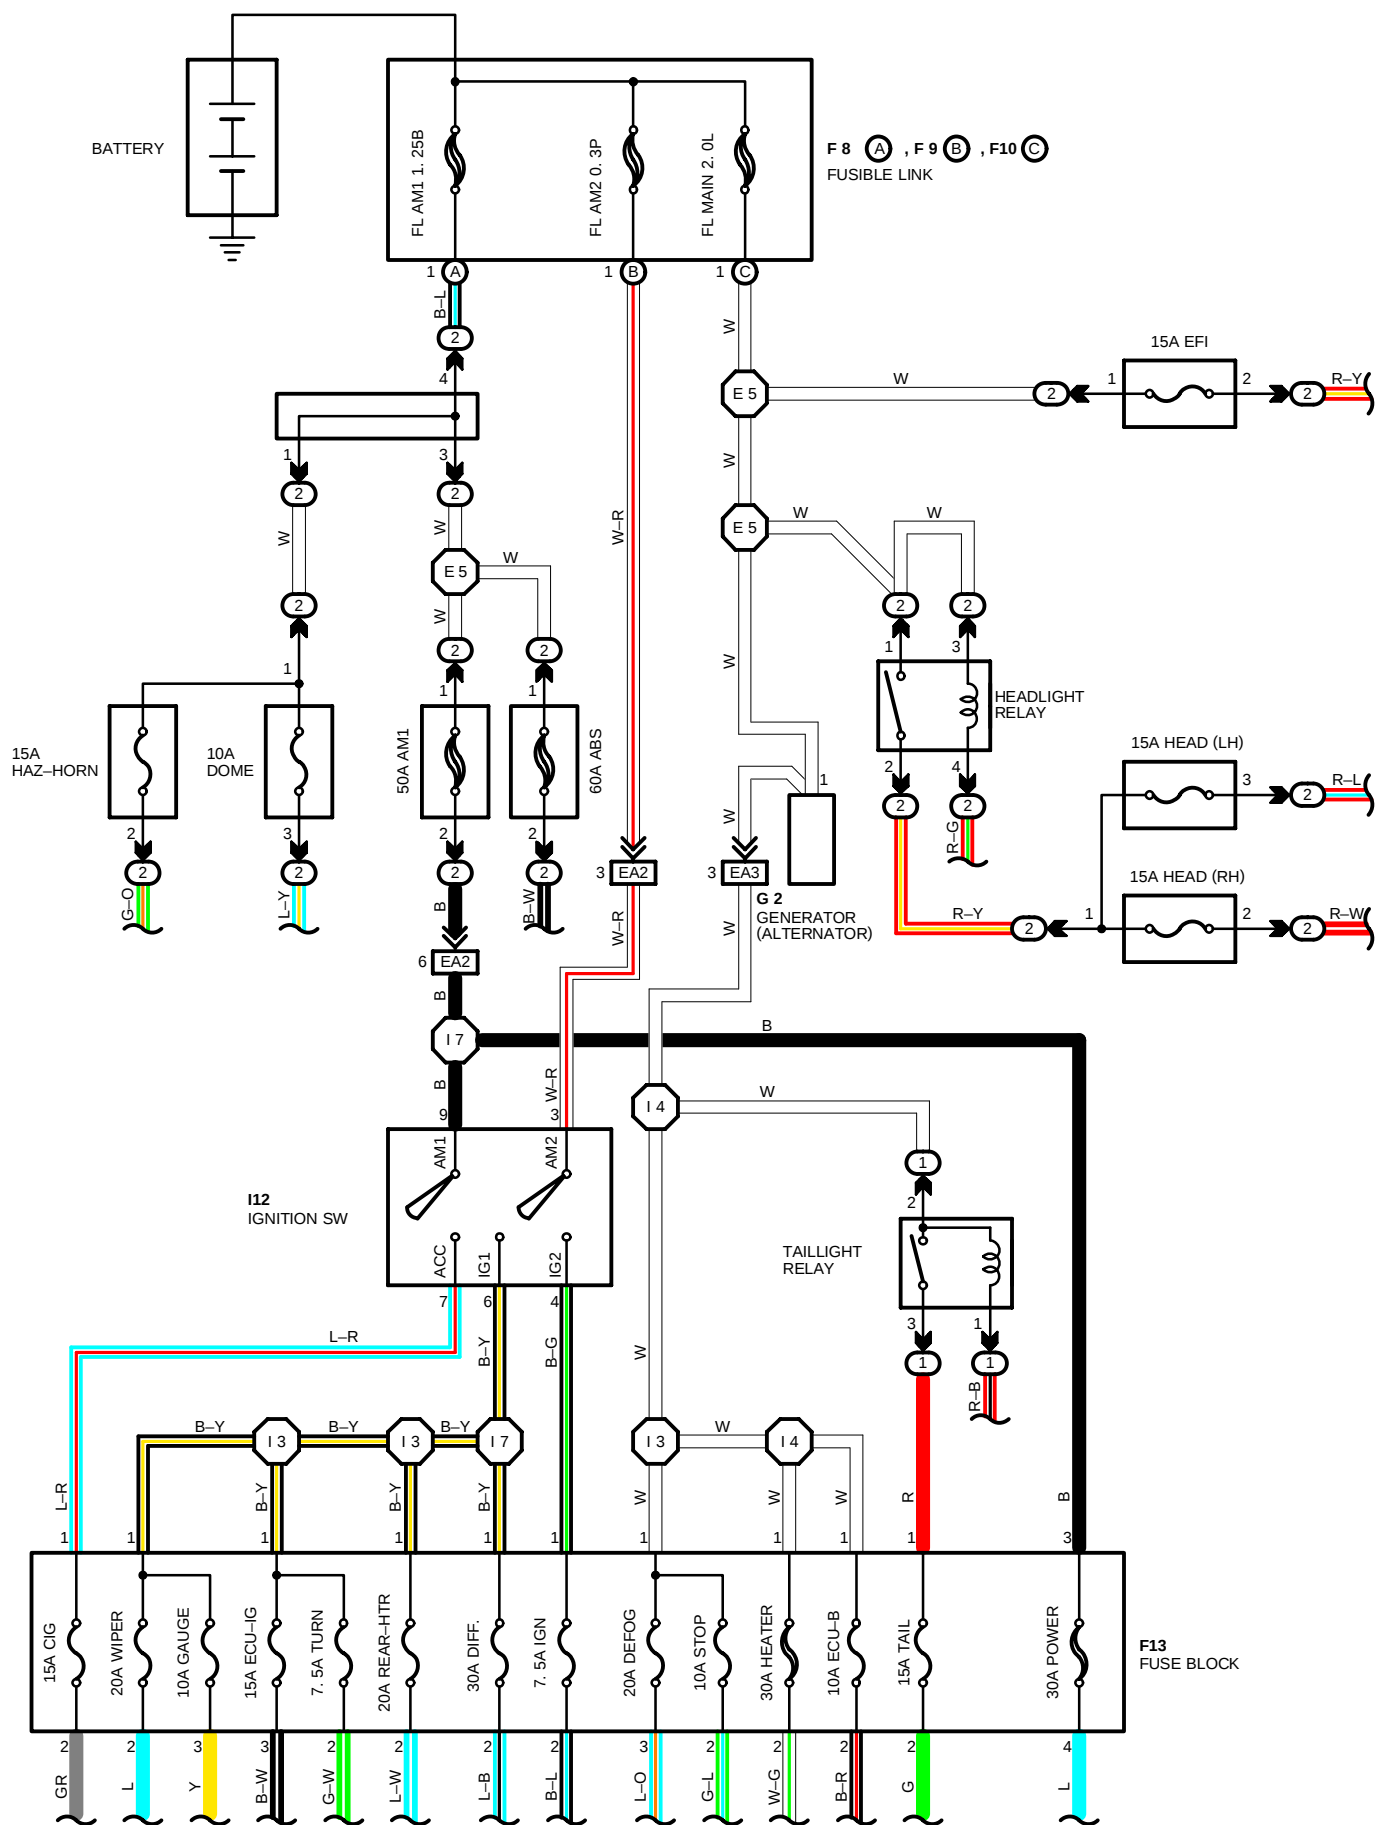

SERVICE HINTS

HEADLIGHT RELAY

(2) 1- (2) 2: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

I12 IGNITION SW

9-7 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION

9-6 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

3-4: CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

TAILLIGHT RELAY

(1) 2- (1) 3: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
F 8	A	22	F10	C	22	G 2		22
F 9	B	22	F13		23	I12		23

□ : RELAY BLOCKS


CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 5	26	ENGINE ROOM MAIN WIRE	I 4	28	COWL WIRE
I 3	28	COWL WIRE	I 7		

 

F13
(SEE PAGE 20)

