


REMOTE CONTROL MIRROR

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

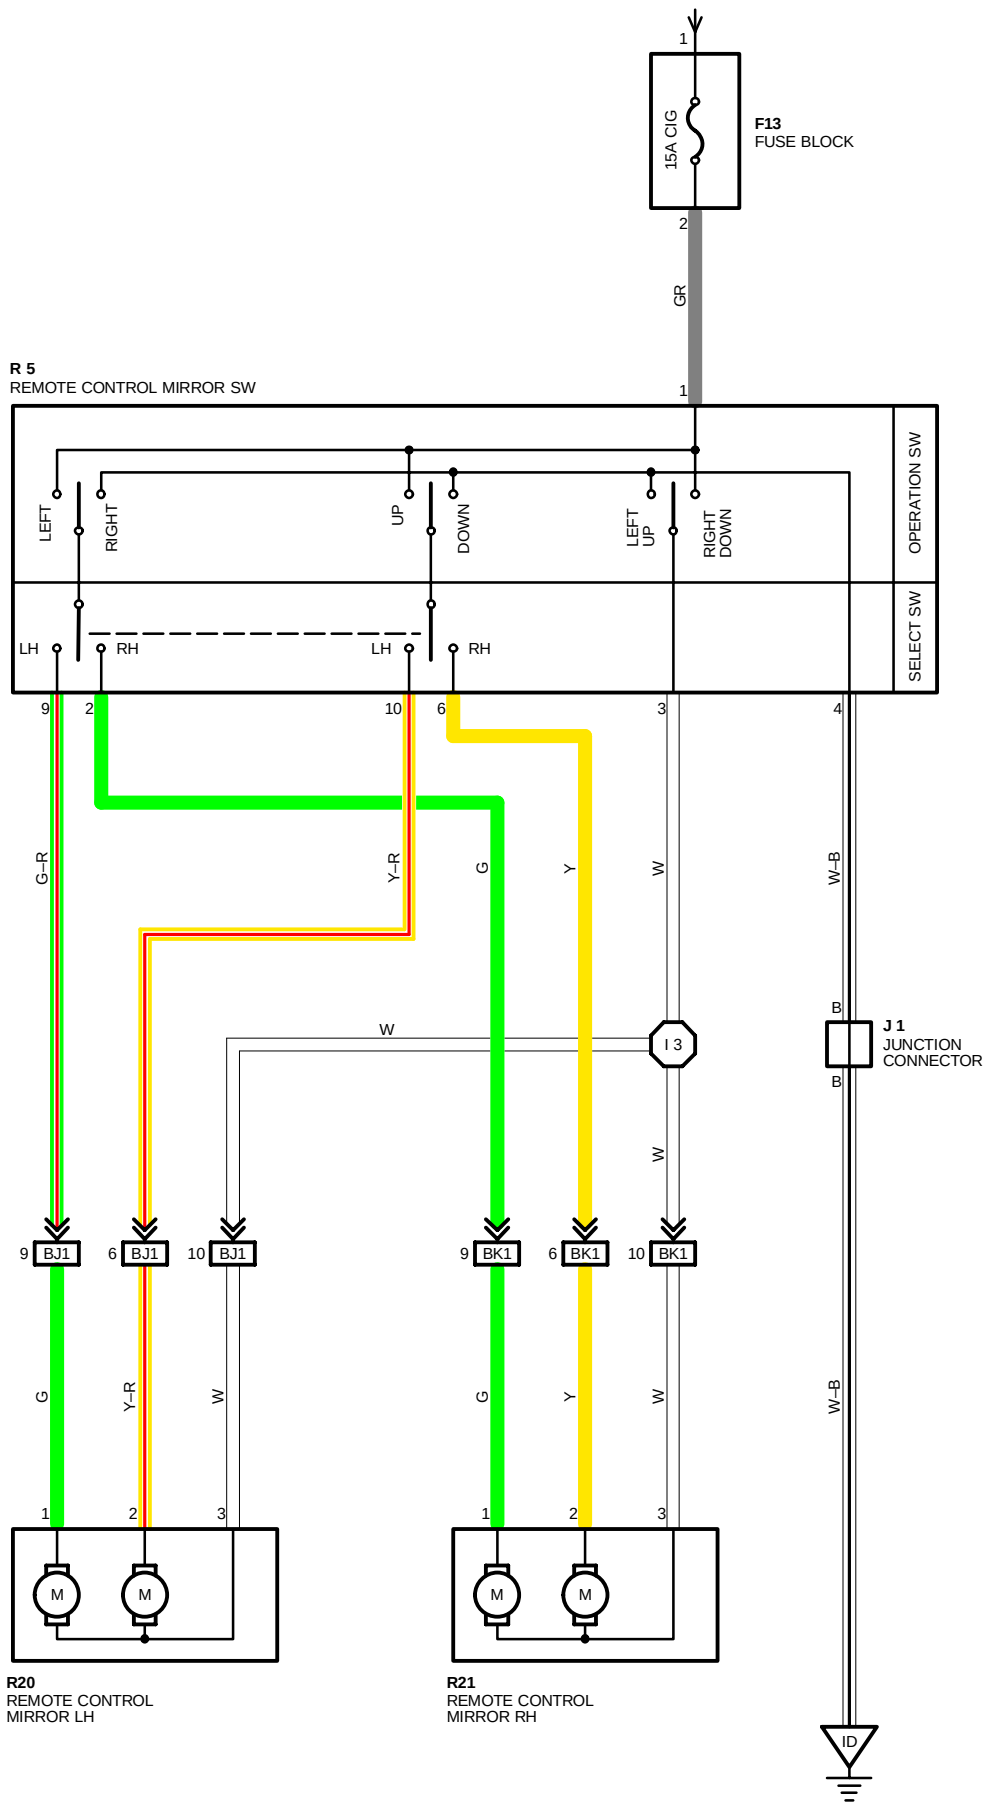

SERVICE HINTS

R 5 REMOTE CONTROL MIRROR SW

- 1-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 3-4 : CONTINUITY WITH OPERATION SW AT **UP** OR **LEFT** POSITION
- 1-3 : CONTINUITY WITH OPERATION SW AT **DOWN** OR **RIGHT** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F13	23	R 5	23	R21	24
J 1	23	R20	24		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BJ1	30	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	30	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	28	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	28	COWL WIRE			

F13
(SEE PAGE 20)

