



STARTING AND IGNITION

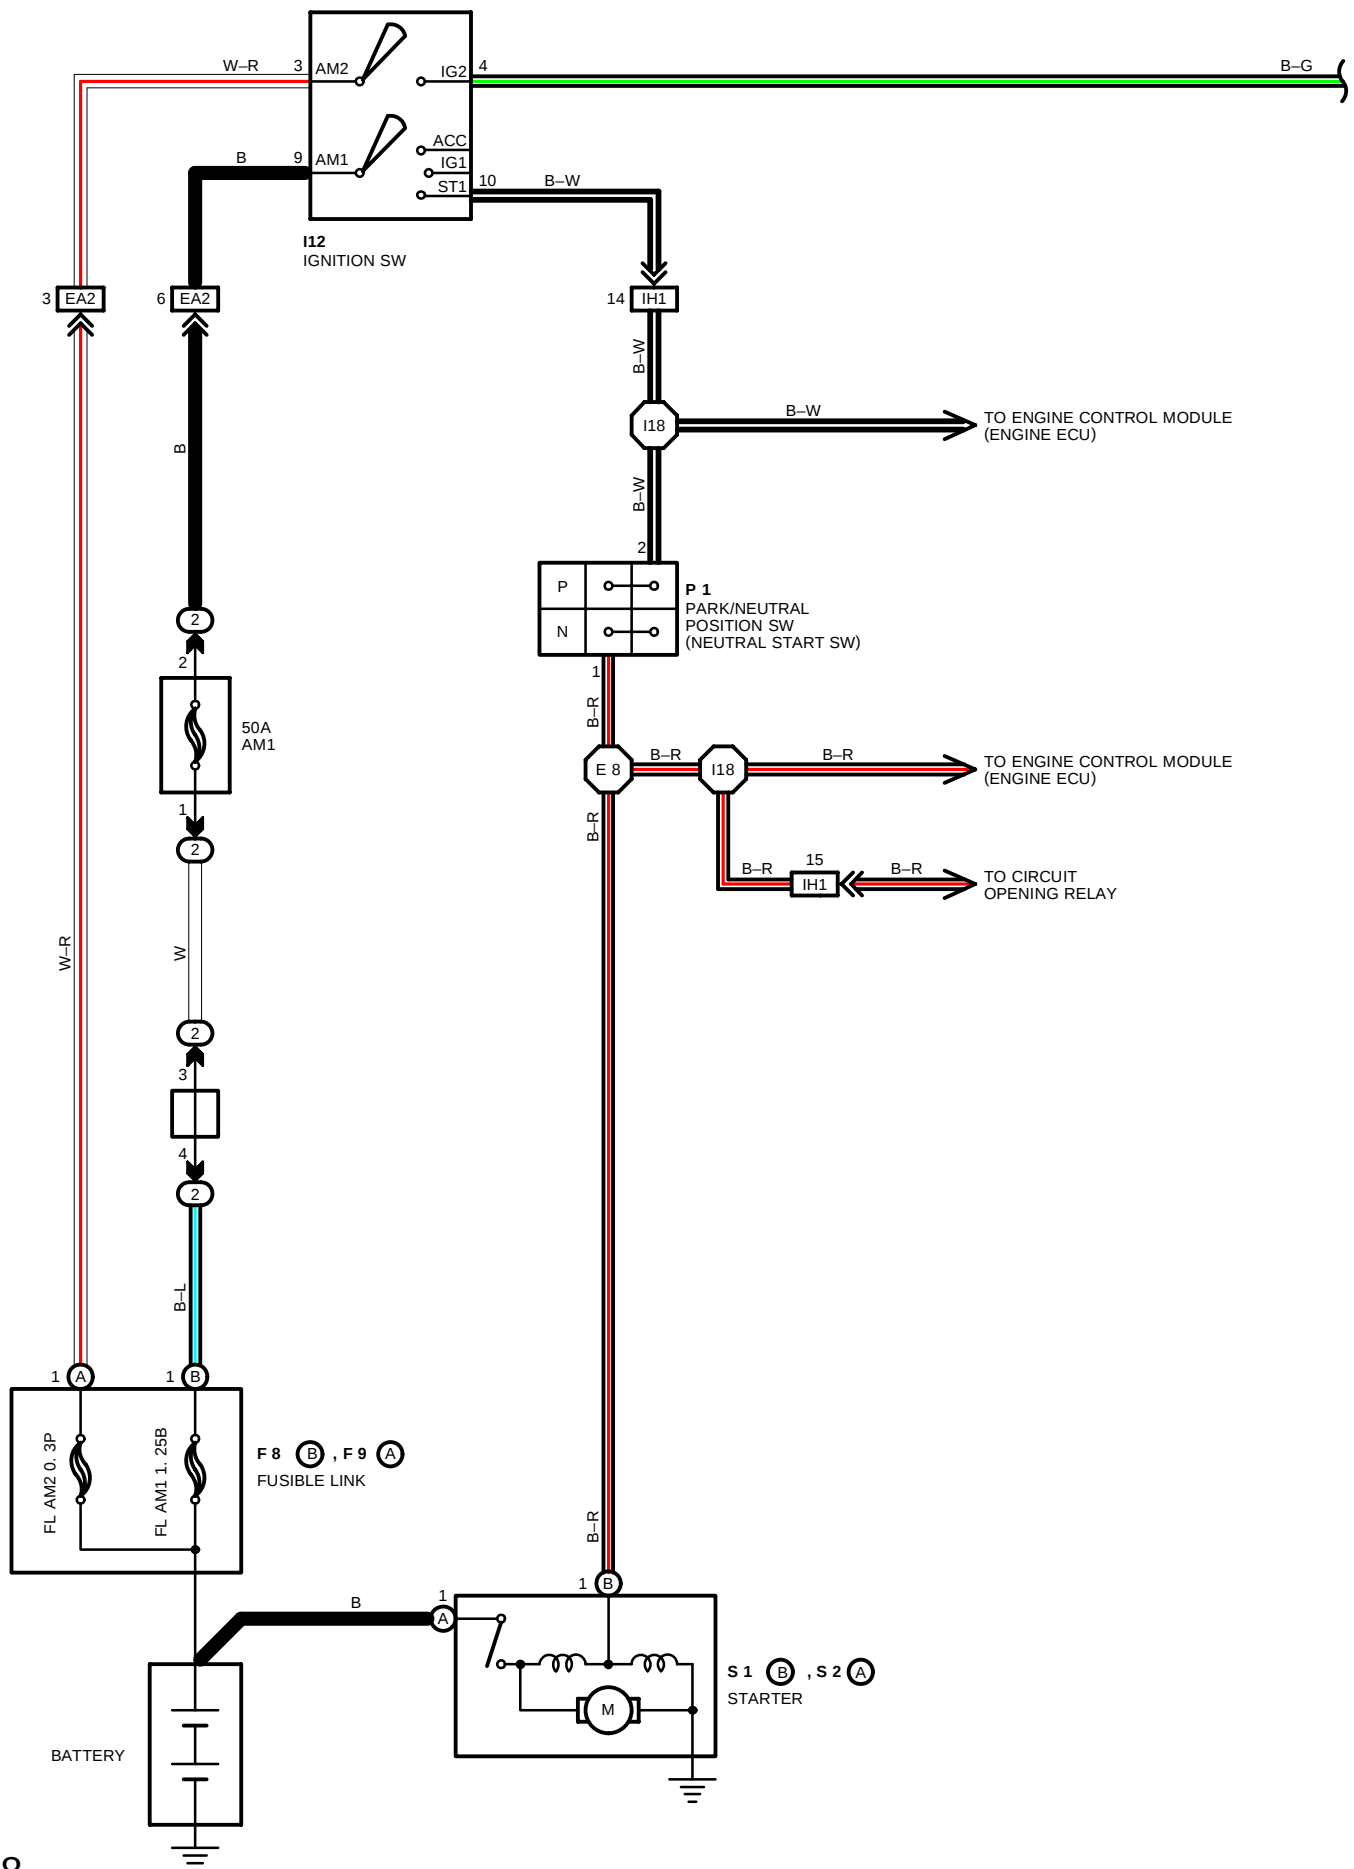

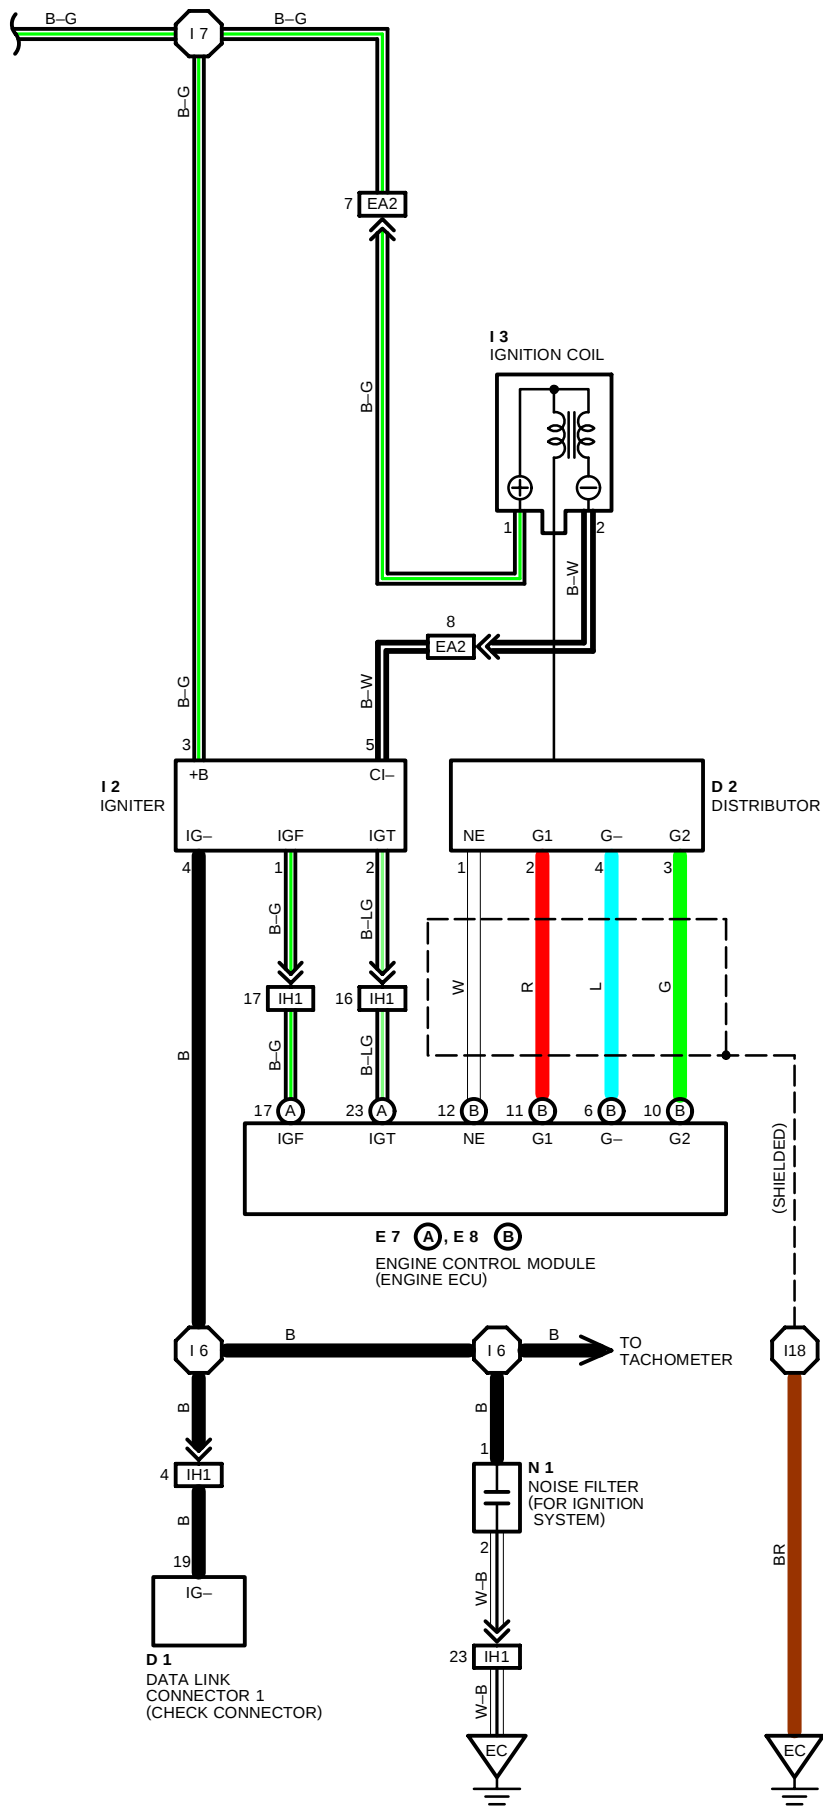

STARTING AND IGNITION

SERVICE HINTS

I12 IGNITION SW

9-10 : CLOSED WITH IGNITION SW AT **ST** POSITION

3-4 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

STARTER

POINTS CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT **ST** POSITION

P 1 PARK/NEUTRAL POSITION SW (NEUTRAL START SW)

1-2 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 1	22	F 9	A	P 1	22
D 2	22	I 2	22	S 1	B
E 7	A	I 3	22	S 2	A
E 8	B	I12	23		
F 8	B	N 1	22		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IH1	28	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	26	AIR INTAKE CHAMBER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 8	26	ENGINE WIRE	I 7	28	COWL WIRE
E11	26	COWL WIRE	I18	28	ENGINE WIRE
I 6	28				

