


FROM POWER SOURCE SYSTEM (SEE PAGE 46)

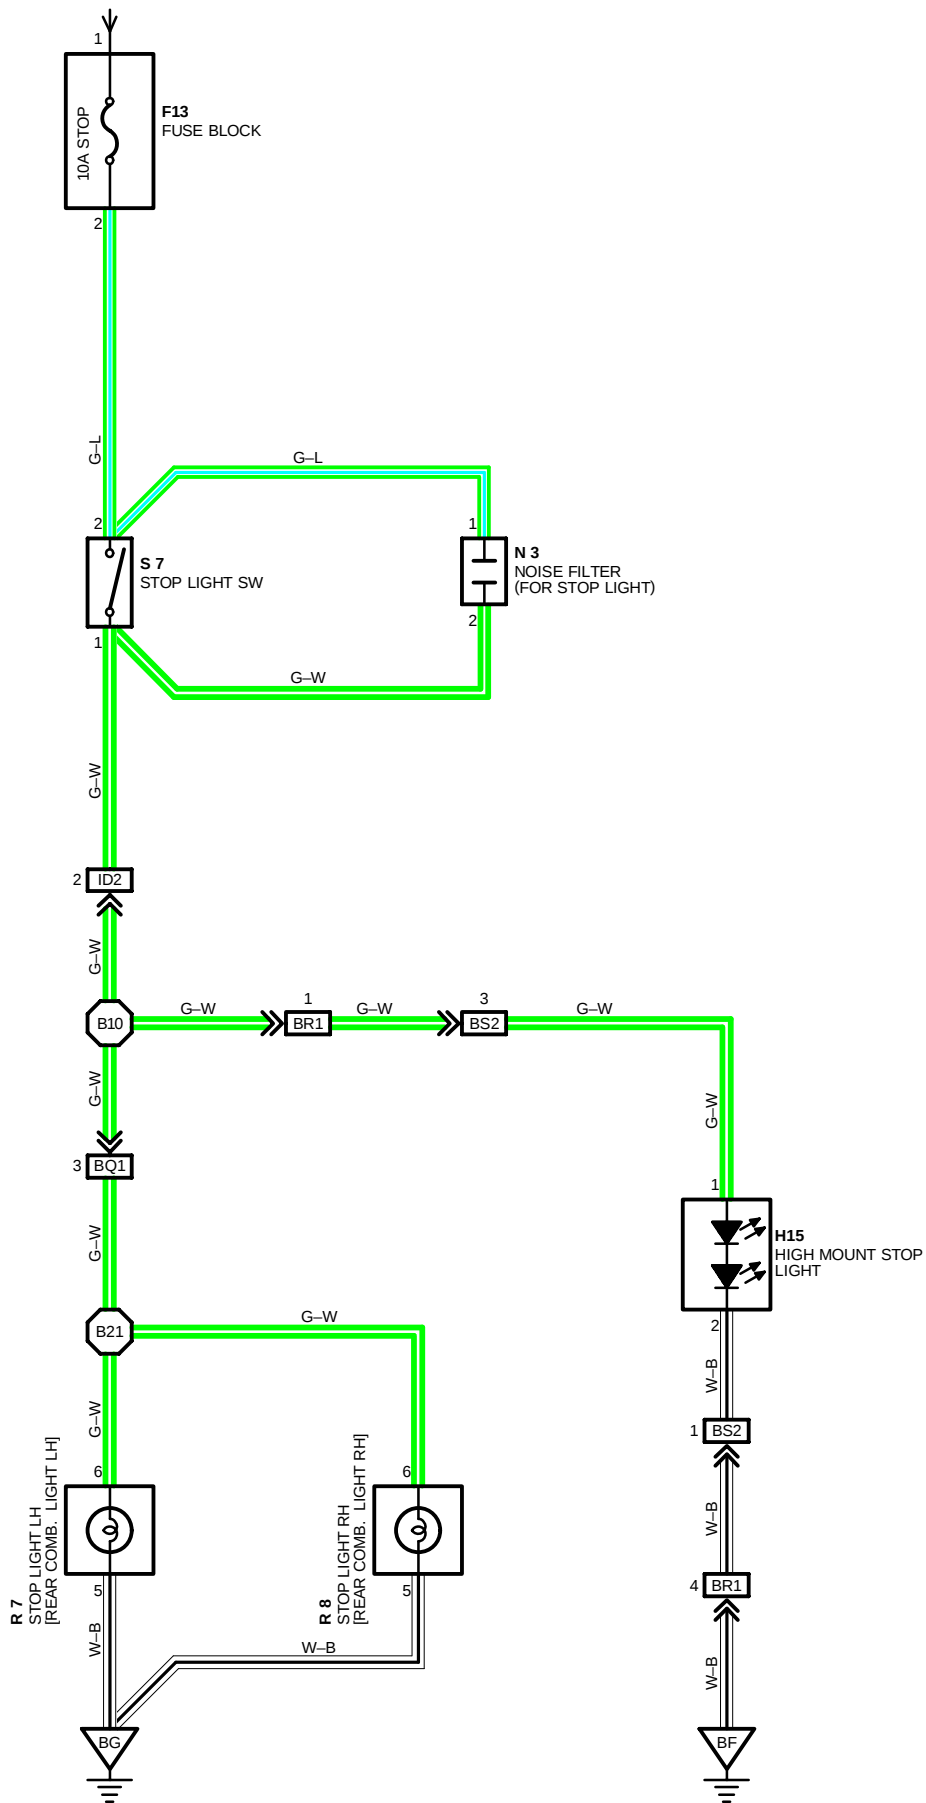

SERVICE HINTS

S 7 STOP LIGHT SW

1-2: CLOSED WITH BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F13	23	N 3	23	R 8	24
H15	24	R 7	24	S 7	24

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BQ1	30	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR1	30	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS2	30	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	30	LOWER BACK PANEL CENTER
BF	30	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B10	32	FLOOR NO. 1 WIRE	B21	32	FLOOR NO. 3 WIRE

F13
(SEE PAGE 20)

