


BACK-UP LIGHT SWITCH PARTS LOCATION

REQJY-01

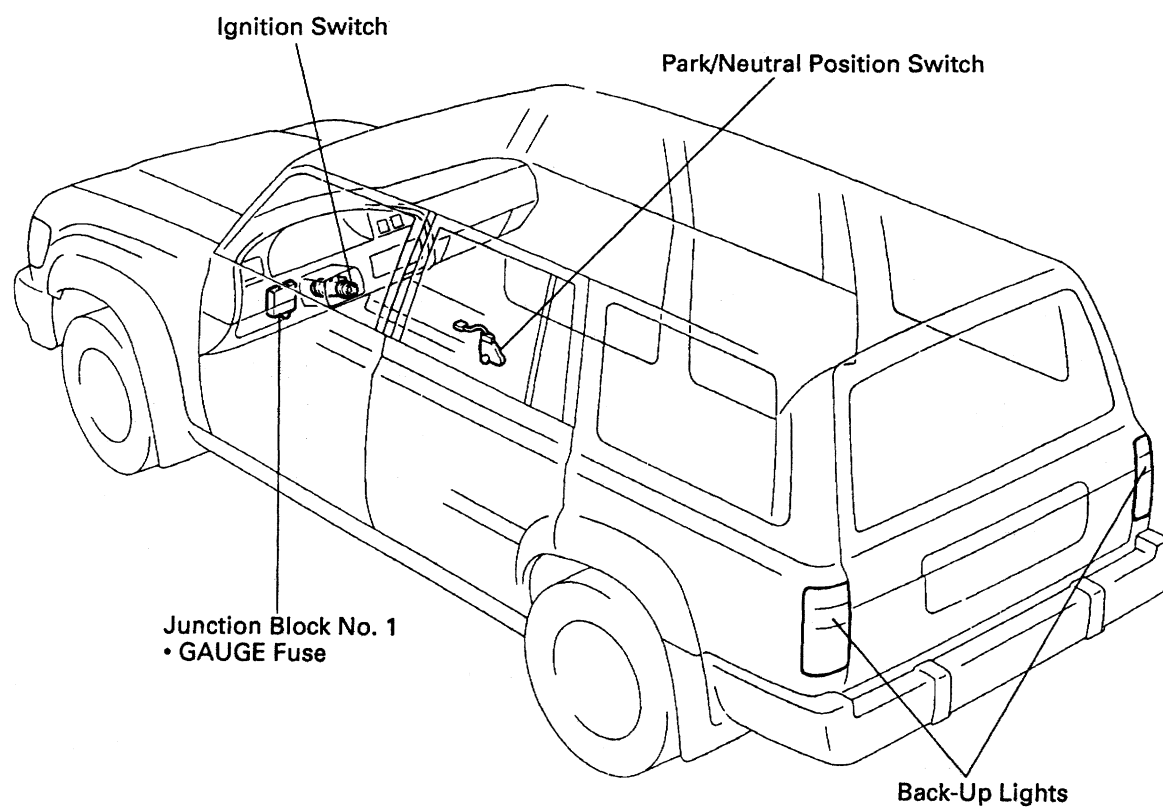

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name (See page)
Back-up light does not light up.	1. GAUGE Fuse (BE-4) 2. Ignition Switch (BE-13) 3. Park/Neutral Position Switch (AT-41) 4. Wire Harness 5. Bulb
Back-up light remains always on.	1. Wire Harness
Only one light does not light up.	1. Wire Harness 2. Bulb

PARK/NEUTRAL POSITION SWITCH INSPECTION

INSPECT PARK/NEUTRAL POSITION SWITCH

See page [AT-41](#)