



IGNITION SWITCH PARTS LOCATION

BE01MF-01

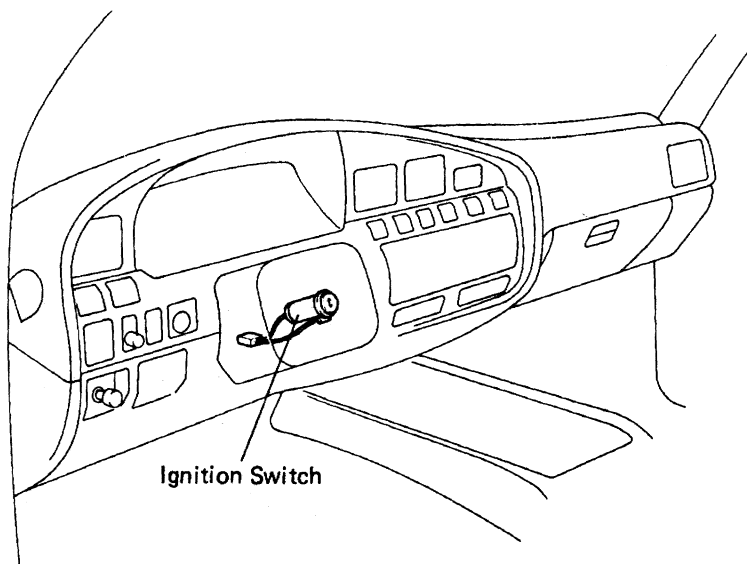

BE5075

Z06864

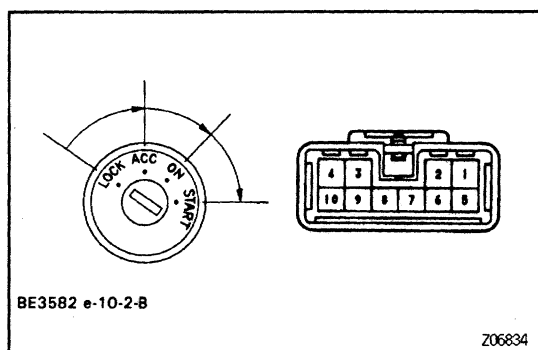

BE3582 e-10-2-B

Z06834

IGNITION SWITCH INSPECTION


BE01MF-01

INSPECT IGNITION SWITCH

Continuity

Switch position	Tester connection to terminal number	Specified value
LOCK	—	No continuity
ACC	7-9	Continuity
ON	3-4 6-7-9	Continuity
START	2-3-4 6-9-10	Continuity

If continuity is not as specified, replace the switch.

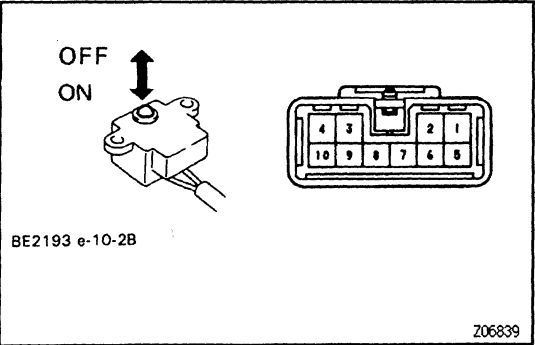

KEY CONFINE PREVENTION SYSTEM INSPECTION

INSPECT KEY UNLOCK WARNING SWITCH

Continuity

Condition	Tester connection to terminal number	Specified value
Switch OFF (Key removed)	—	No continuity
Switch ON (Key set)	1 - 5	Continuity

If continuity is not as specified, replace the switch.

DOOR COURTESY SWITCH INSPECTION

INSPECT DOOR COURTESY SWITCH

See page [BE-28](#).

SEAT BELT WARNING RELAY INSPECTION

INSPECT SEAT BELT WARNING RELAY

See page [BE-55](#).