


POWER MIRROR CONTROL SYSTEM PARTS LOCATION

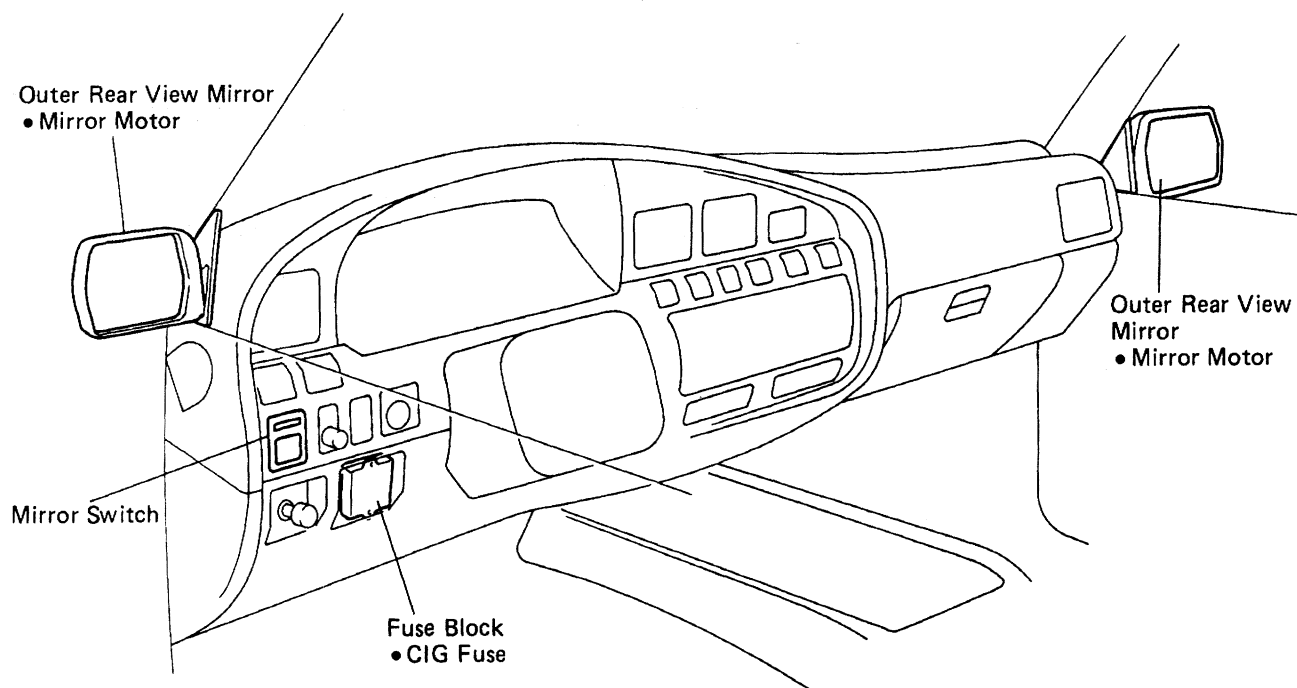


BE5095

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name	(See page)
Remote Control Mirror does not operate.	1. CIG Fuse	(BE-4)
	2. Mirror Switch	(BE-85)
	3. Mirror Motor	(BE-86)
	4. Wire Harness	(BE-86)

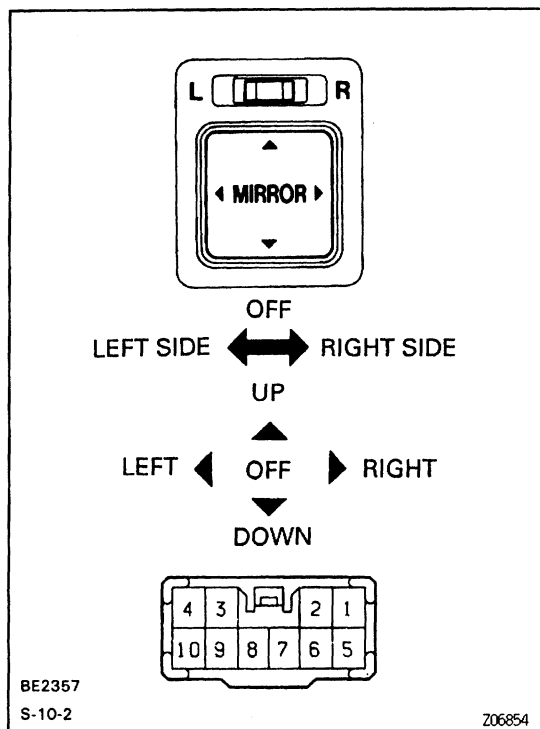

MIRROR SWITCH INSPECTION

INSPECT MIRROR SWITCH

Continuity

LEFT SIDE

Switch position	Tester connection to terminal number	Specified value
OFF	—	No continuity
UP	1 - 10 3-4	Continuity
DOWN	1 - 3 4- 10	Continuity
LEFT	1-9 3-4	Continuity
RIGHT	1 -3 4-9	Continuity


OFF

Switch position	Tester connection to terminal number	Specified value
OFF	—	No continuity
UP	3-4	Continuity
DOWN	1-3	Continuity
LEFT	3-4	Continuity
RIGHT	1-3	Continuity

RIGHT SIDE

Switch position	Tester connection to terminal number	Specified value
OFF	—	No continuity
UP	1 - 6 3-4	Continuity
DOWN	1 - 3 4-6	Continuity
LEFT	1-2 3-4	Continuity
RIGHT	1 - 3 2-4	Continuity

If continuity is not as specified, replace the switch.

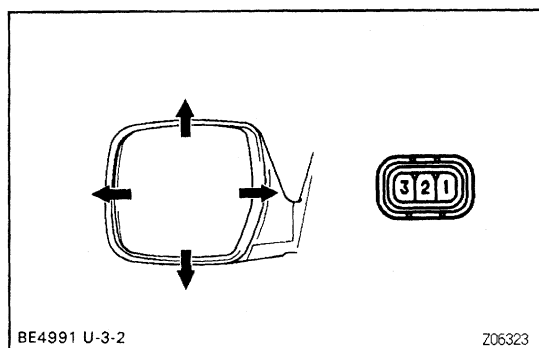

BE4991 U-3-2

Z06323

MIRROR MOTOR INSPECTION

BEOKP-01

INSPECT MIRROR MOTOR

Connect the positive (+) lead from the battery to terminal in column "A" and the negative (-) lead to terminal in column "B", check that the mirror operates in column "C".

Switch position	Tester connection to terminal number	Specified value
A (+)	B (-)	C (Operation)
2	3	Mirror turns upward
3	2	Mirror turns downward
1	3	Mirror turns to left side
3	1	Mirror turns to right side

If operation is not as specified, replace the mirror assembly.