

PREPARATION

RECOMMENDED TOOLS

BE01H3-02

	09082-00050 TOYOTA Electrical Tester set	
---	--	--

EQUIPMENT

BE01H6-01

Voltmeter	
Ammeter	
Ohmmeter	
Test lead	
Bulb (3.4 W)	Engine coolant temperature sender gauge, Engine oil level warning switch
Oil bath	Engine oil level warning switch
Thermometer	Fuel sender gauge, Seat belt warning relay
Bulb (21 W)	Turn signal flasher relay
Dry cell battery	Fuel sender gauge
Clip remover	For removing cowl louver
Torquerench	
Masking tape	Rear window defogger wire
Tim foil	Rear window defogger wire

SSM (SPECIAL SERVICE MATERIALS)

BE01H9-01

Part Name	Part No.	Use etc.
Adhesive 1324, Three bond 1324 or equivalent	08833-00070	Power seat housing set nut; Power seat slide and vertical motor set screw
Adhesive 1344, Three bond 1344, Loctite 242 or equivalent	08833-00080	Low oil pressure warning switch; Engine coolant temperature sender gauge
Dupont paste No. 4817	—	Rear window defogger wire