


STOP LIGHT SYSTEM PARTS LOCATION


B50K5-01

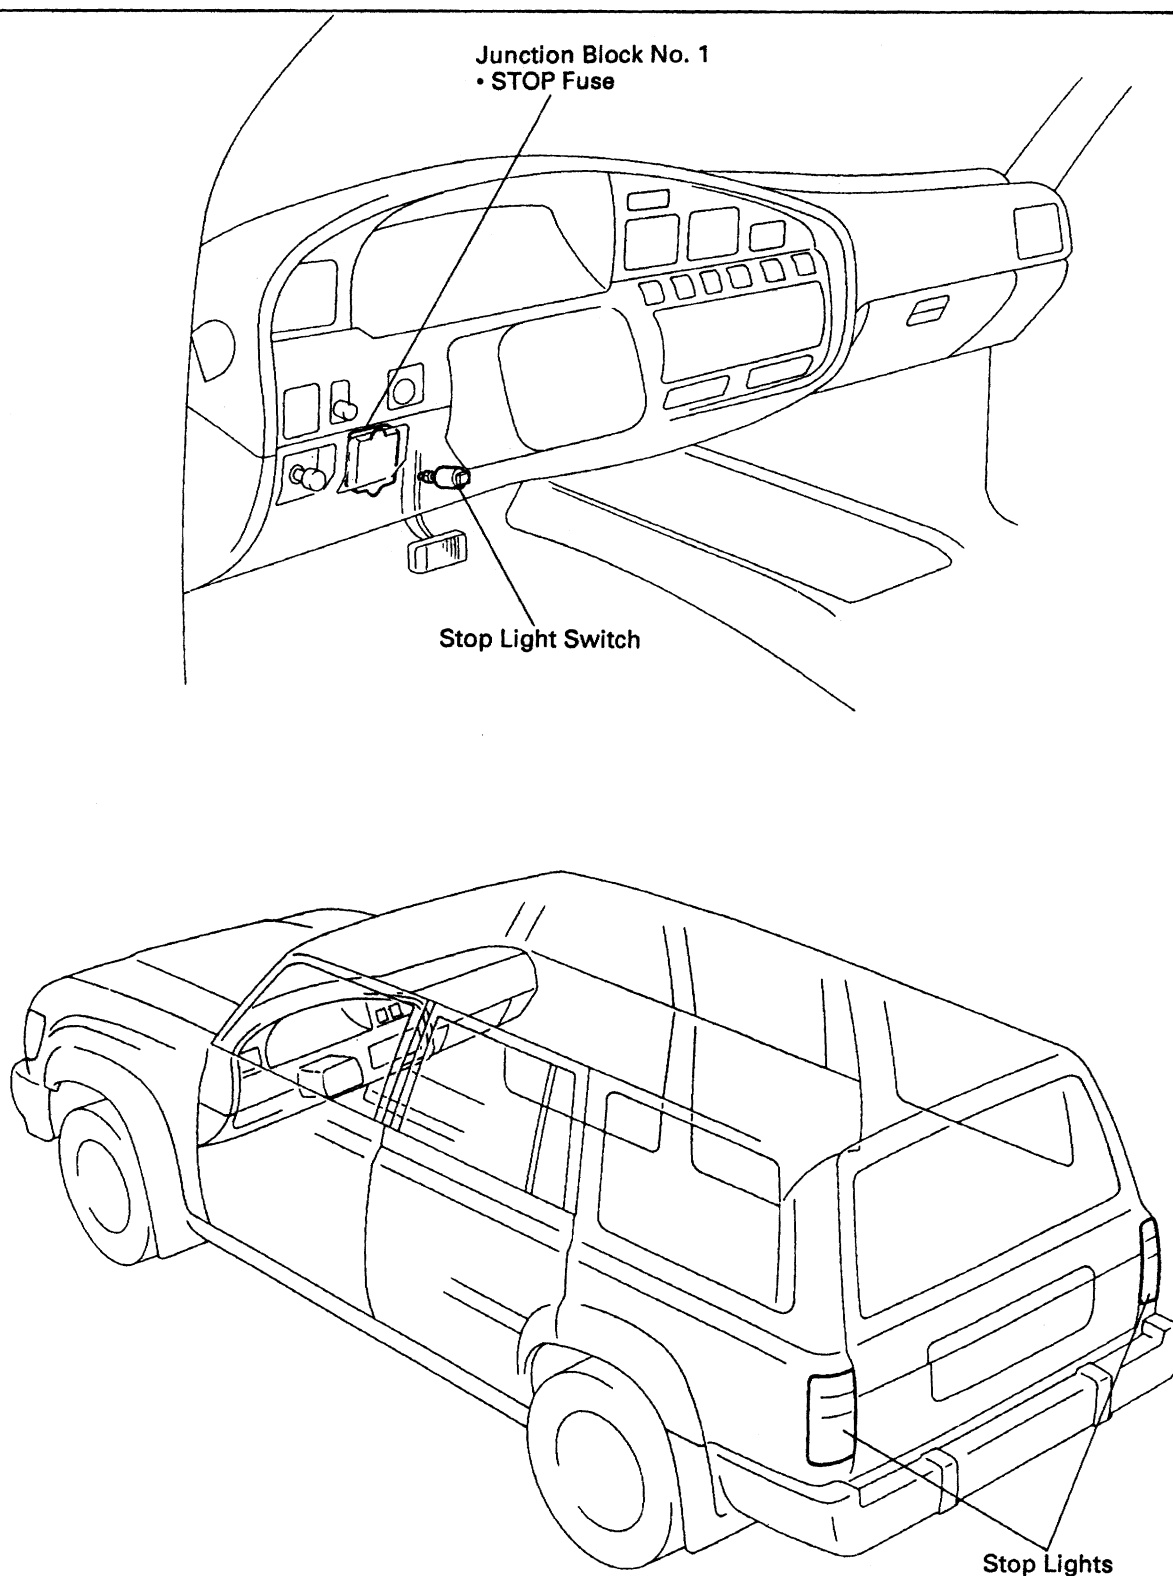

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely cause of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name (See page)
Stop light does not light up.	1. STOP Fuse (BE-4) 2. Stop Light Switch (BE-33) 3. Wire Harness 4. Bulb
Stop light remains always on.	1. Stop Light Switch (BE-33) 2. Wire Harness
Only one light does not light.	1. Wire Harness 2. Bulb

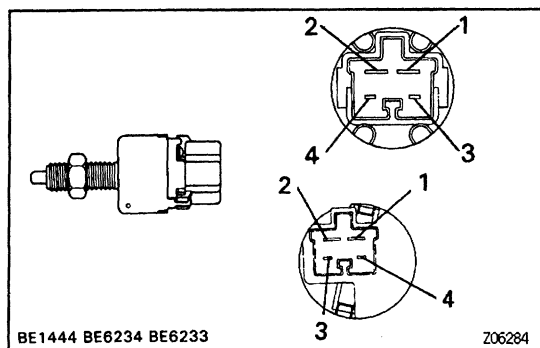

STOP LIGHT SWITCH INSPECTION

INSPECT STOP LIGHT SWITCH

Continuity

Switch position	Tester connection to terminal number	Specified value
Switch pin free	1 -2	Continuity
Switch pin pushed in	—	No continuity

If continuity is not as specified, replace the switch.