


TURN SIGNAL AND HAZARD WARNING SYSTEM

PARTS LOCATION

86GJA-03

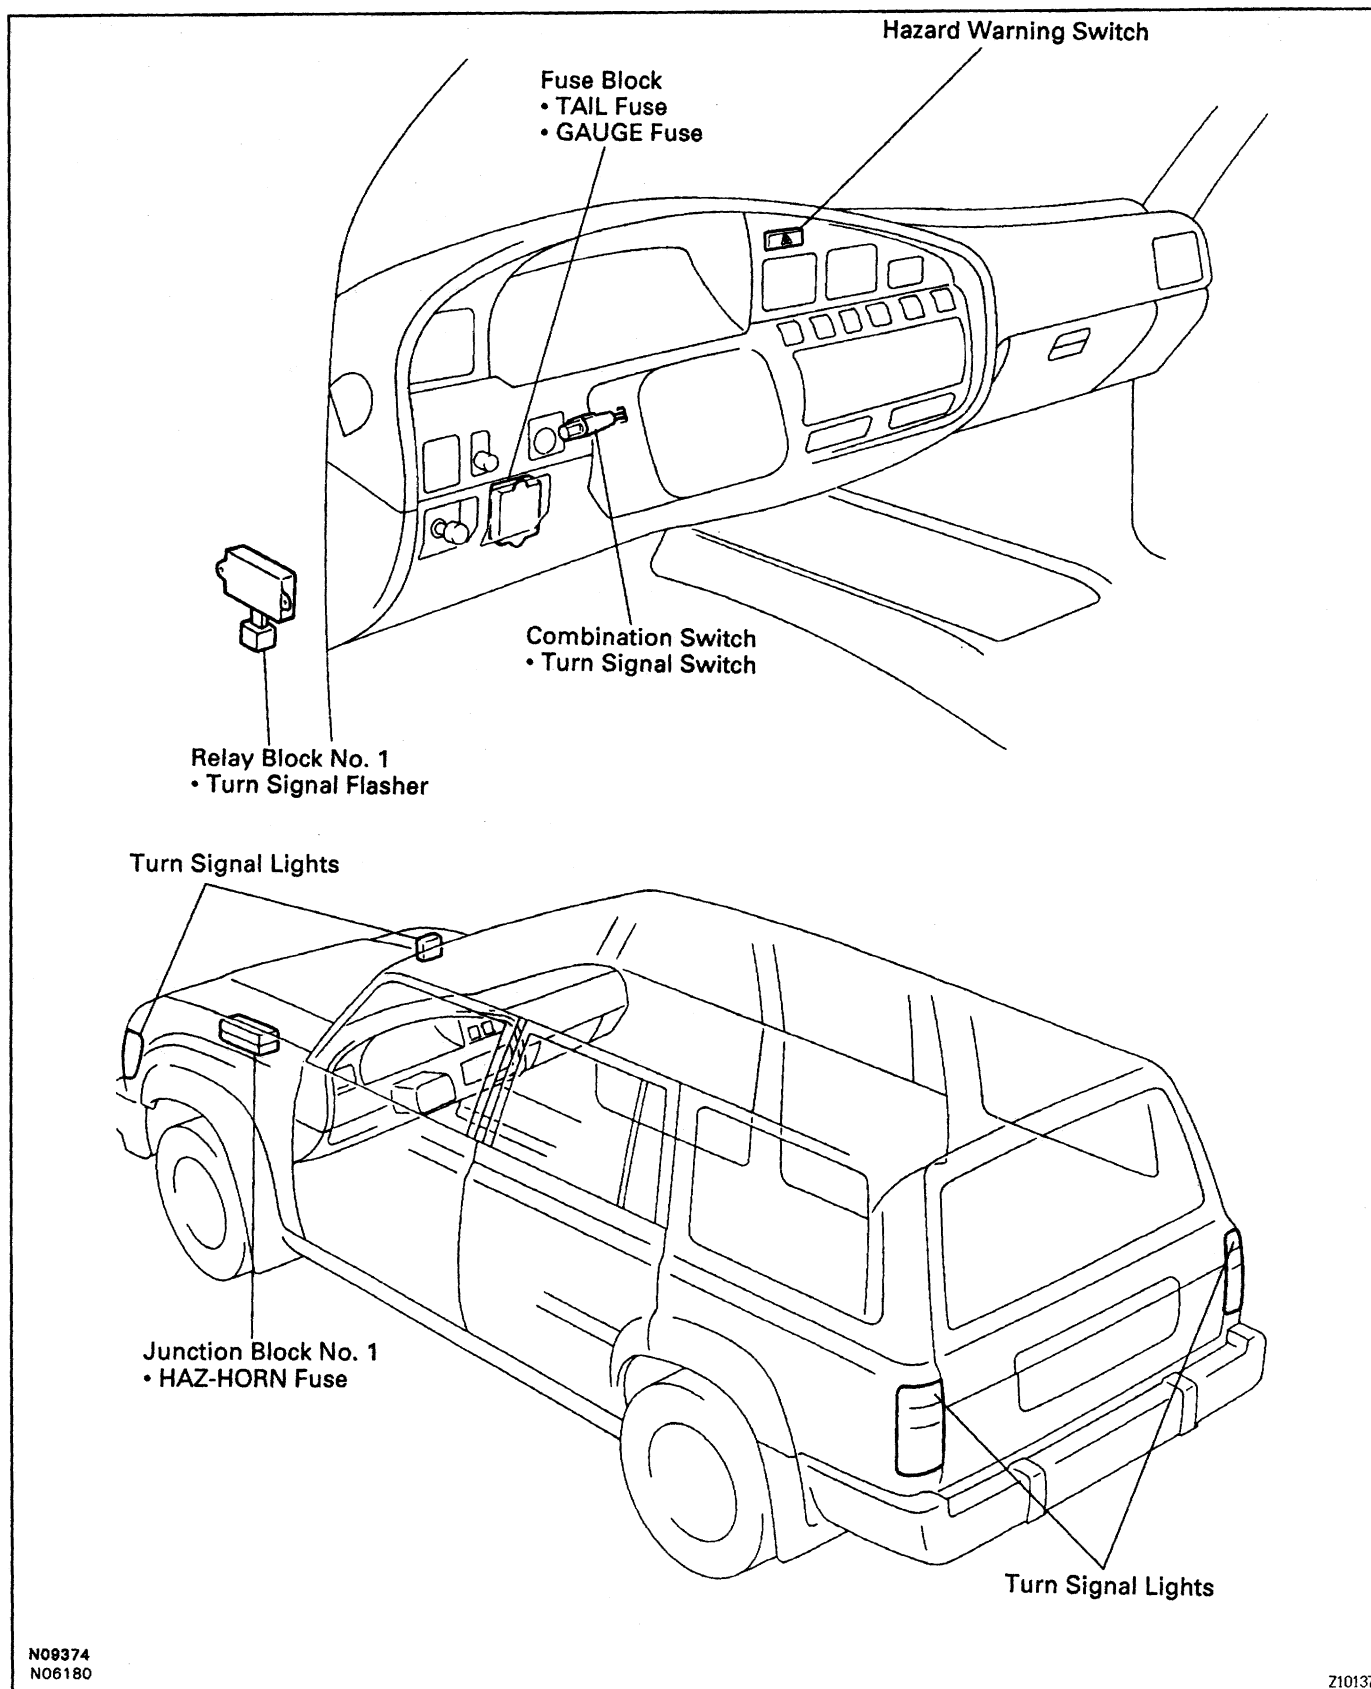

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name	(See page)
"Hazard" and "Turn" do not light up.	1. Hazard Warning Switch 2. Turn Signal Flasher 3. Wire Harness	(BE-21) (BE-2s)
No of blinks for Hazard. (Turn is normal.)	1. Bulb 2. Turn Signal Flasher 3. Wire Harness	(BE-26)
Hazard warning light does not light up. (Turn is normal.)	1. HAZ-HORN Fuse 2. Wire Harness	(BE-4)
Hazard warning light on one side only does not light up.	1. Hazard Warning Switch 2. Wire Harness	(BE-26)
Turn signal on one side only does not light up.	1. Turn Signal Switch 2. Wire Harness	(BE-21)
Only one bulb does not light up for hazard turn.	1. Bulb 2. Wire Harness	
*1 Turn signal does not light up.	1. Ignition Switch 2. TURN Fuse 3. Turn Signal Switch 4. Wire Harness	(BE-13) (BE-4) (BE-21)
*2 Turn signal does not light up.	1. TURN Fuse 2. Turn Signal Switch 3. Wire Harness	(BE-4) (BE-21)

* 1 Combination Meter, Wiper and Washer do not operate.


* 2 Combination Meter, Wiper and Washer are normal.

REQJE-01

TURN SIGNAL SWITCH INSPECTION

INSPECT TURN SIGNAL SWITCH

See headlight and taillight system on page [BE-21](#).

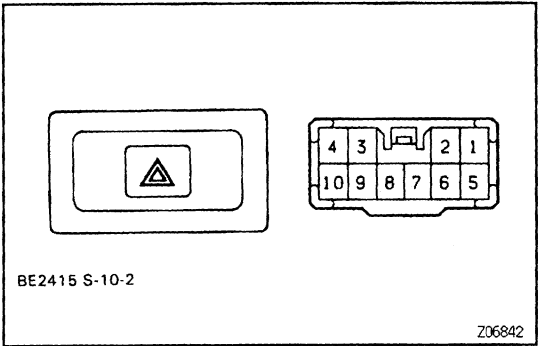


HAZARD WARNING SWITCH INSPECTION

INSPECT HAZARD WARNING SWITCH

Continuity

Condition	Tester connection to terminal number	Specified value
Switch OFF	7 – 10	Continuity
Switch ON	7 – 8 4 – 5 – 6 – 9	Continuity
Illumination circuit	2 – 3	Continuity

If continuity is not as specified, replace the switch.

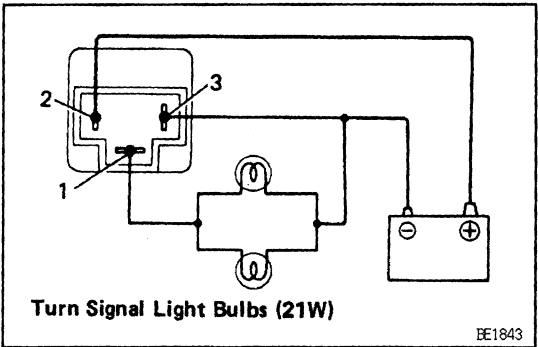

TURN SIGNAL FLASHER INSPECTION

INSPECT TURN SIGNAL FLASHER

Operation

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3.
- (b) Connect the 2 turn signal light bulbs parallel to each other to terminals 1 and 3, check that the bulbs flash.
HINT: The turn signal lights should flash 60 to 120 times per minute.

If one of the front or rear turn signal lights has an open circuit, the number of flash rata will be more than 140 per minute.

If operation is not as specified, replace the flasher.