



BACK DOOR COMPONENTS

BO0HQ-01

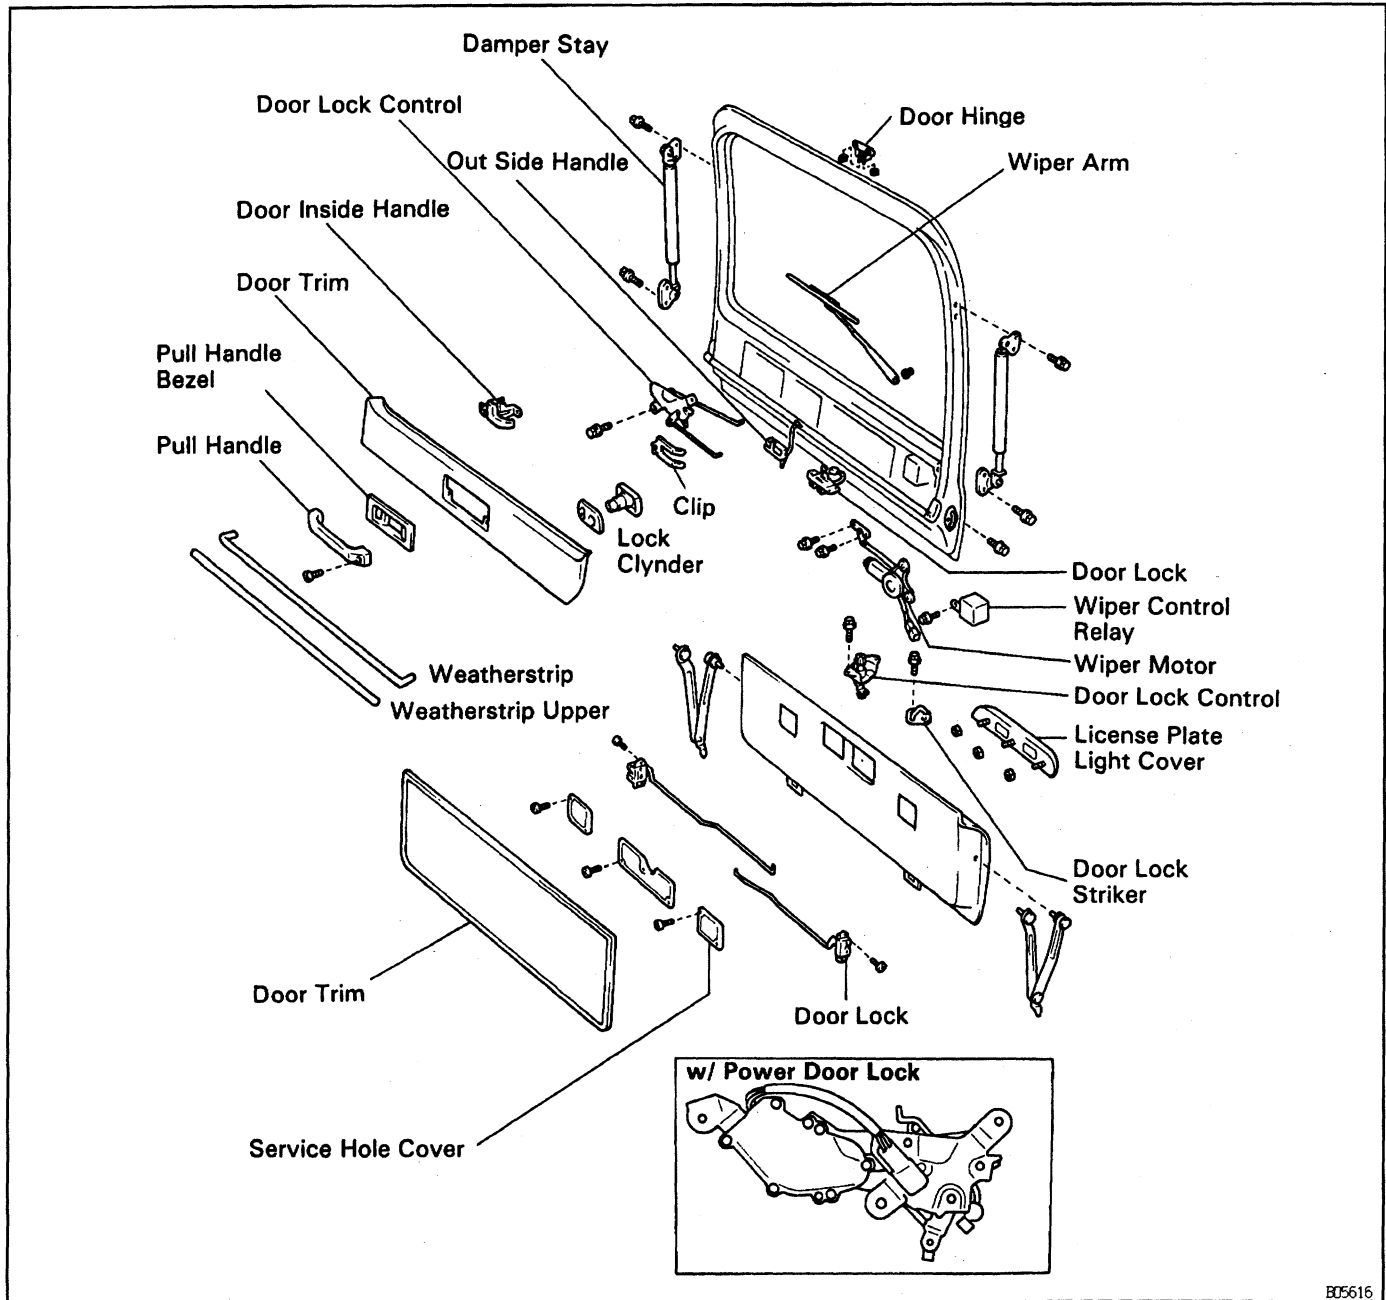

BO5616

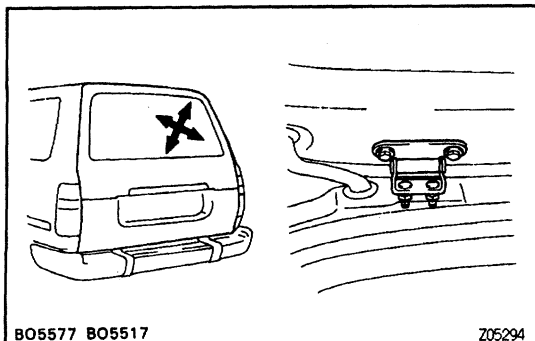

BO5577 BO5517


Z05294

UPPER BACK DOOR ADJUSTMENT

BO0HQ-02


1. ADJUST DOOR IN FORWARD /REARWARD AND LEFT /RIGHT DIRECTIONS

Adjust the door by loosening the door side hinge bolts.

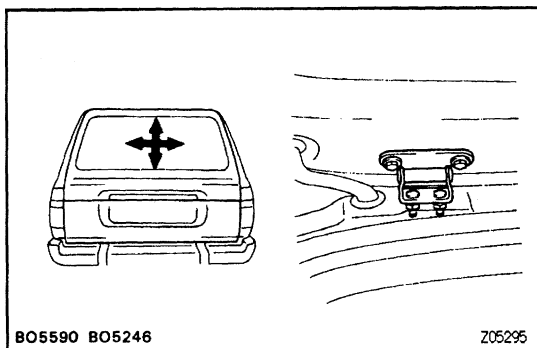


2. ADJUST DOOR IN LEFT /RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.

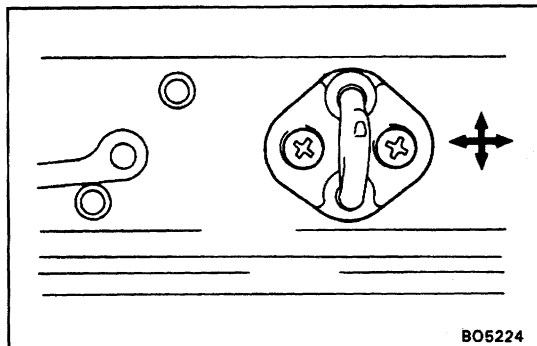

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkage are adjusted correctly.
- Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer. Tighten the striker mounting screw again.

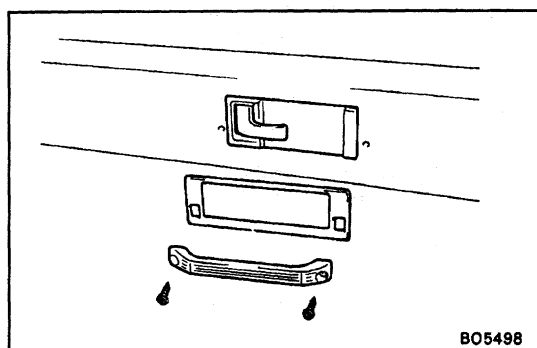


UPPER BACK DOOR DISASSEMBLY

BO0TX-02


1. REMOVE PULL HANDLE AND PULL HANDLE BEZEL

Remove 2 screws and pull handle, then remove the bezel.

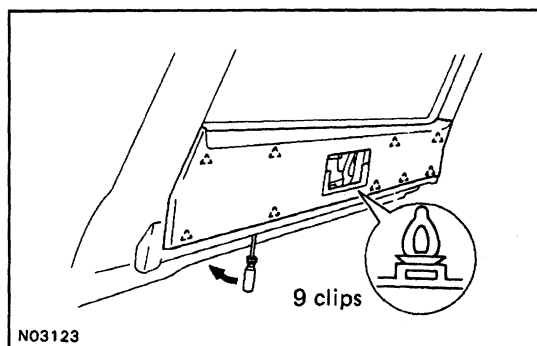

2. REMOVE DOOR TRIM


- Insert a screwdriver, between the retainers and the door trim to pry it loose.
HINT: Tape the screwdriver tip before use.
- Remove the door trim.

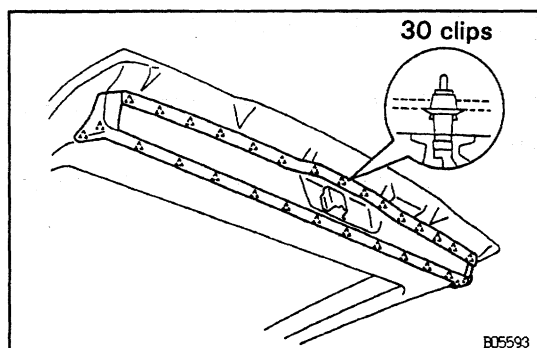

3. REMOVE DOOR WEATHERSTRIP AND WEATHER-STRIP UPPER


While pulling the weatherstrips by hand, remove the clips using the clip remover.

NOTICE: Do not pull strongly on the weatherstrips as it may tear.

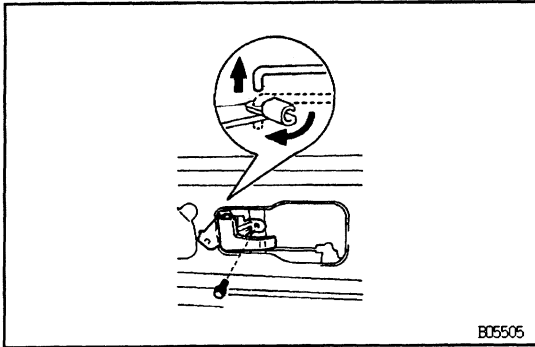

4. REMOVE DOOR INSIDE HANDLE

Remove the bolt and the handle, then disconnect the link.

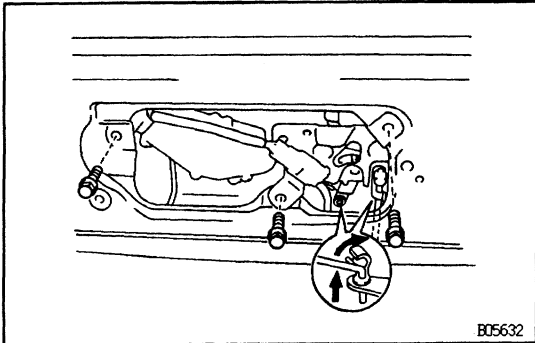


5. REMOVE DOOR LOCK CONTROL

(w/o Power Door Lock)

Remove 2 bolts and the lock control, then disconnect 2 links.


(w/ Power Door Lock)

Remove 3 bolts and the lock control, then disconnect 2 links and the connector.

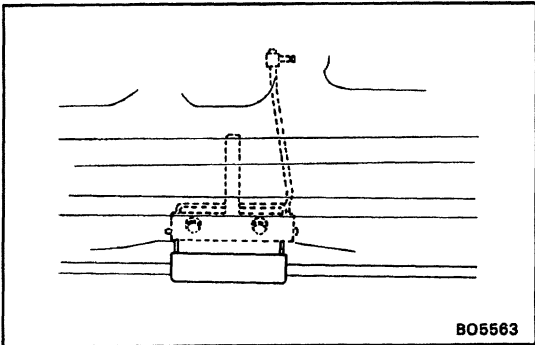

6. REMOVE OUTSIDE HANDLE


Remove 2 bolts and the outside handle.

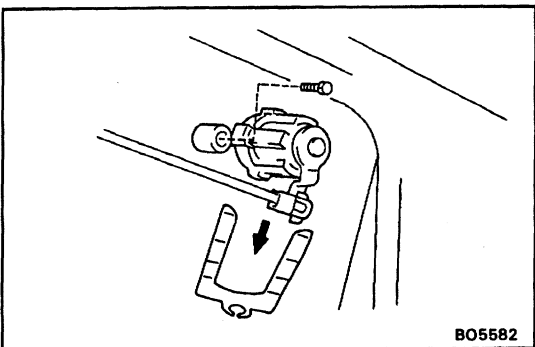

7. REMOVE DOOR LOCK CYLINDER

(a) Disconnect the link from the cylinder.

(b) Remove retainer from the cylinder.

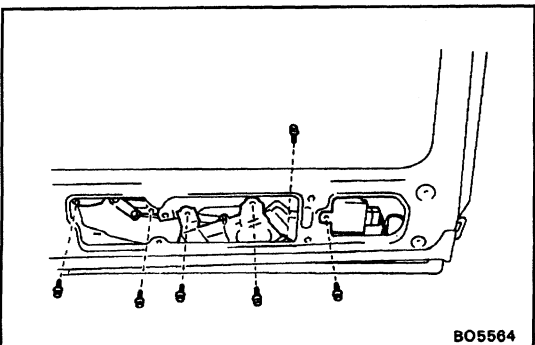

8. (w/ Rear Wiper)


REMOVE WIPER ARM, MOTOR AND REAR WIPER CONTROL RELAY

(a) Open the cap.

(b) Remove the nut and the wiper arm.


(c) Remove 5 bolts and the motor, then disconnect the connector.

(d) Remove the bolts and the rear wiper control relay, then disconnect the connector.

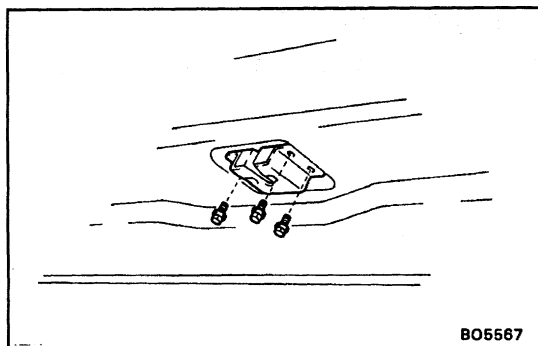

9. REMOVE DOOR LOCK

Remove 3 bolts and the door lock, then disconnect the connector.

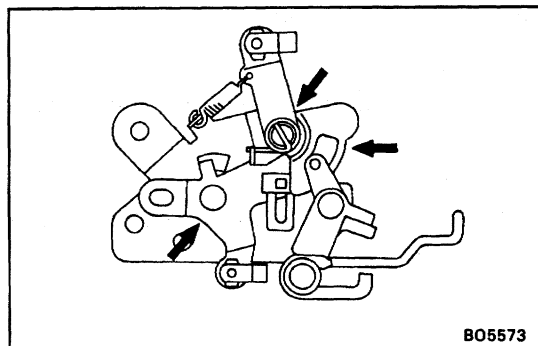


UPPER BACK DOOR ASSEMBLY

BODY-02


1. APPLY MP GREASE TO LOCK CONTROL

Apply MP grease to the sliding surface of the lock control.

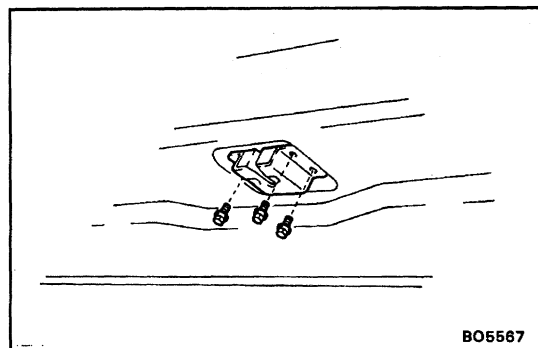

2. INSTALL DOOR LOCK


Install the door lock with 3 bolts, then connect the connector.

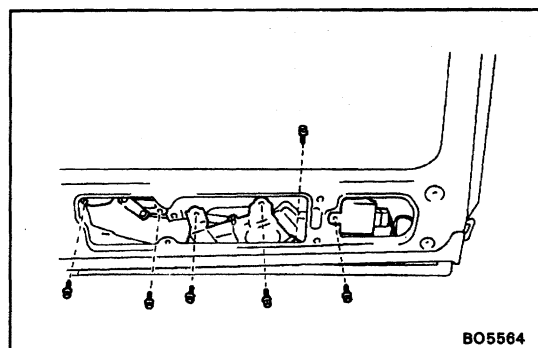

3. (w/ Rear Wiper)


INSTALL WIPER ARM, MOTOR AND REAR WIPER CONTROL RELAY

- Connect the connector, then install the rear wiper control relay with the bolt.
- Connect the connector.
- Install the motor with 5 bolts.
- Install the wiper arm with the nut.

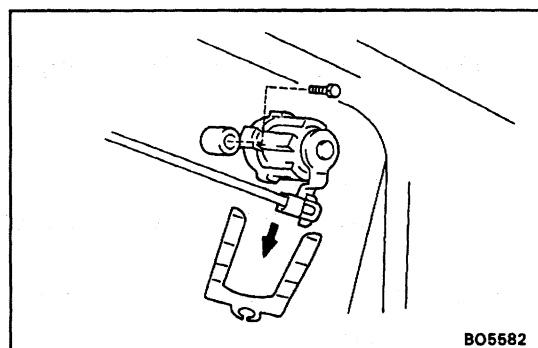


4. INSTALL DOOR LOCK CYLINDER

- Install the cylinder with retainer.
- Connect the link to the cylinder.

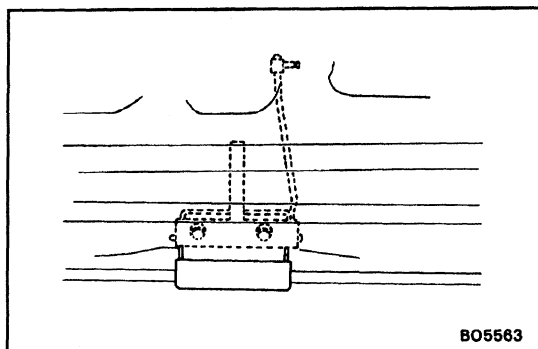

5. INSTALL OUTSIDE HANDLE

Install the outside handle and the handle with 2 bolts.

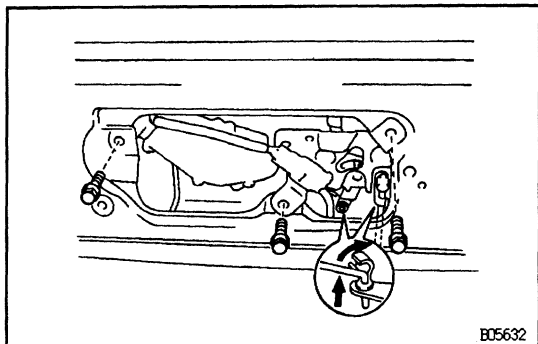


6. INSTALL DOOR LOCK CONTROL

(w/ Power Door Lock)

Install the lock control with 2 bolts, then connect 2 links.

(w/o Power Door Lock)


Install the lock control with 3 bolts, then connect 2 links and the connector.

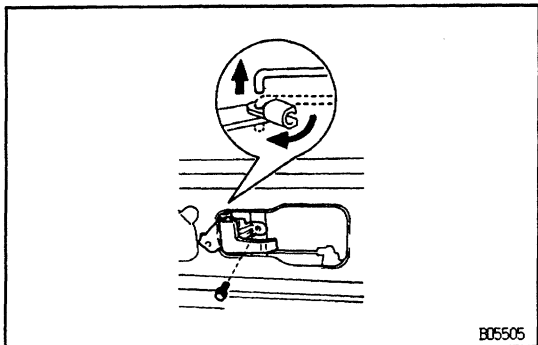

7. INSTALL DOOR INSIDE HANDLE


(a) Connect the link.

(b) Install the handle with the bolt.

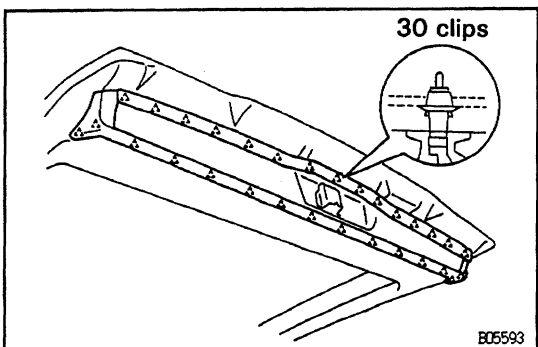


8. INSTALL DOOR WEATHERSTRIP AND WEATHER-STRIP UPPER

Install the weatherstrips with clips to the door-.

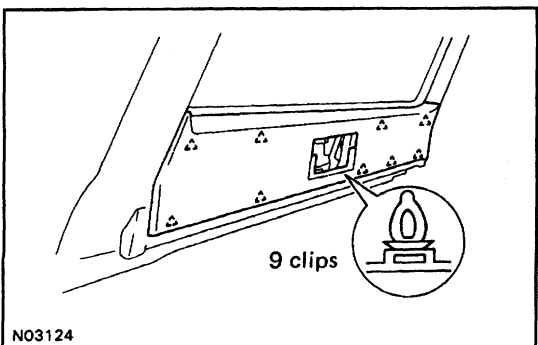

9. INSTALL DOOR TRIM


Install the door trim with retainers to the door panel by tapping.

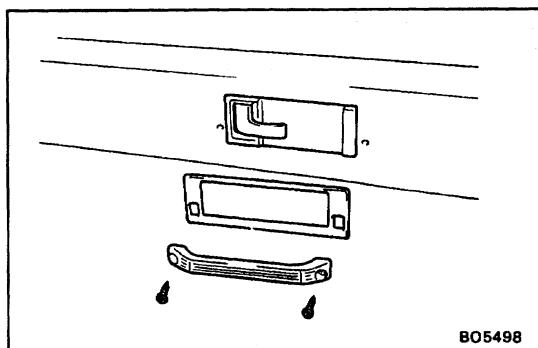

B05498

10. INSTALL PULL HANDLE AND PULL HANDLE BEZEL

Install the bezel and the pull handle with 2 screws.

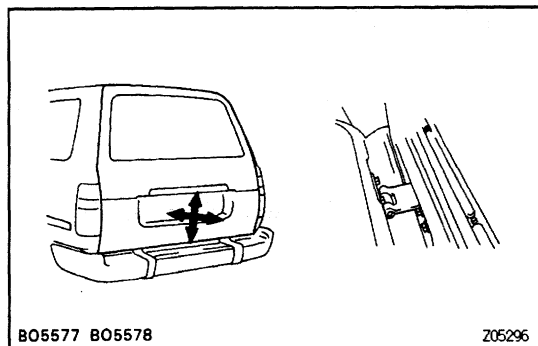


B05577 B05578

Z05296

LOWER BACK DOOR ADJUSTMENT

1. ADJUST DOOR IN FORWARD /REARWARD AND LEFT /RIGHT DIRECTIONS

Adjust the door by loosening the door side hinge bolts.

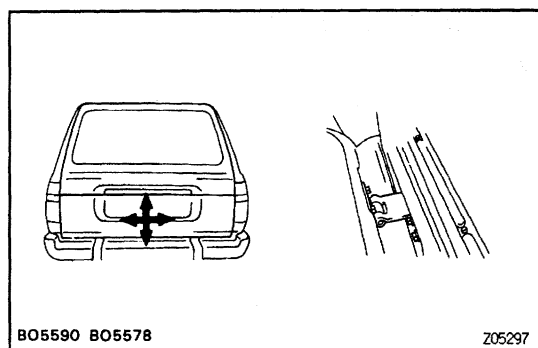


B05590 B05578

Z05297

2. ADJUST DOOR IN LEFT /RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.

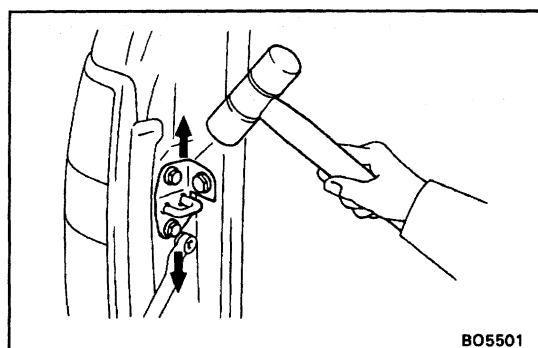


B05501

3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer.

(c) Tighten the striker mounting screws again.

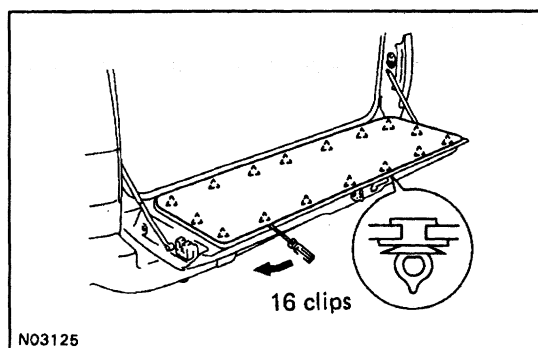

N03125

16 clips

LOWER BACK DOOR DISASSEMBLY

1. REMOVE DOOR TRIM


(a) Insert a screwdriver, between the retainers and the door trim to pry it loose.

HINT: Tape the screwdriver tip before use.

(b) Remove the door trim.


2. REMOVE SERVICE HOLE COVER

10072-01

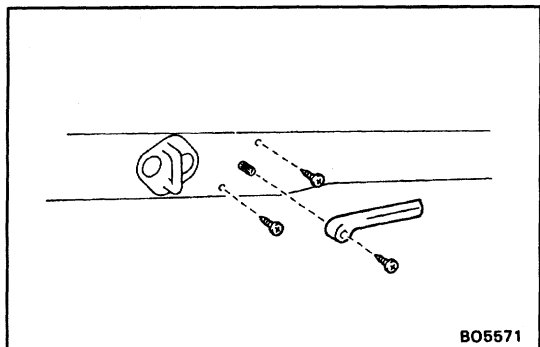


3. REMOVE DOOR LOCK CONTROL

- (a) Disconnect 2 links from the door lock control.
- (b) Remove the screw and the inside handle.
- (c) Remove 2 screws, bush and the door lock control.

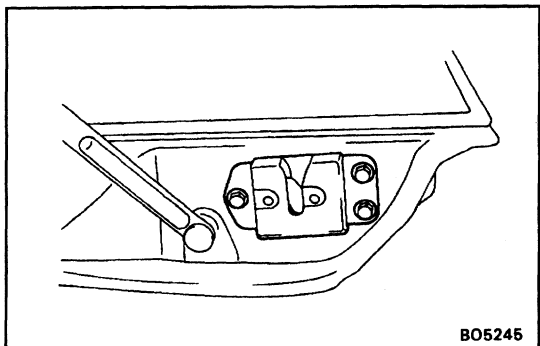


4. REMOVE DOOR LOCK

Remove 3 bolts and the door lock.

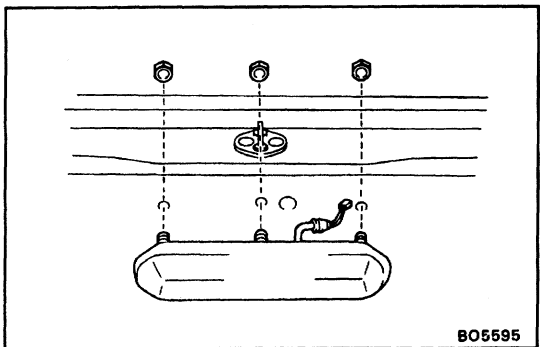

5. REMOVE LICENSE PLATE LIGHT COVER

Remove 3 nuts and the light cover, then disconnect the connector.

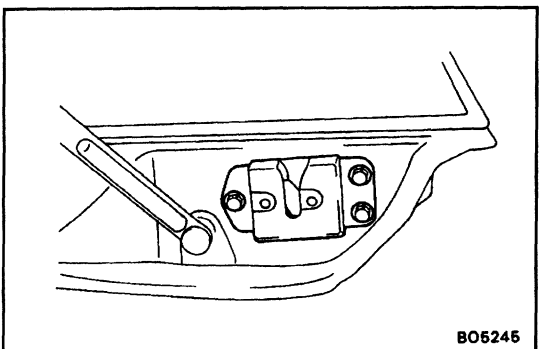

LOWER BACK DOOR ASSEMBLY


BO0U0-02

1. INSTALL LICENSE PLATE LIGHT COVER

Connect the connector and install the light cover with 3 nuts.

2. INSTALL DOOR LOCK


Install the door lock with 3 bolts.

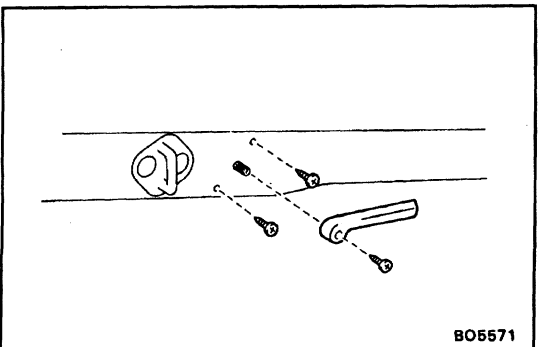

3. INSTALL DOOR LOCK CONTROL


- (a) Install the door lock control with 2 screws.
- (b) Install the bush and the inside handle with the screw.
- (c) Connect 2 links to the door lock control.

4. INSTALL SERVICE HOLE COVER

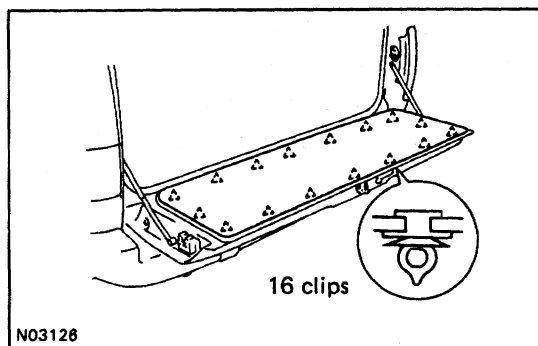

5. INSTALL DOOR TRIM

Install the door trim with clips to the inside door panel by tapping.

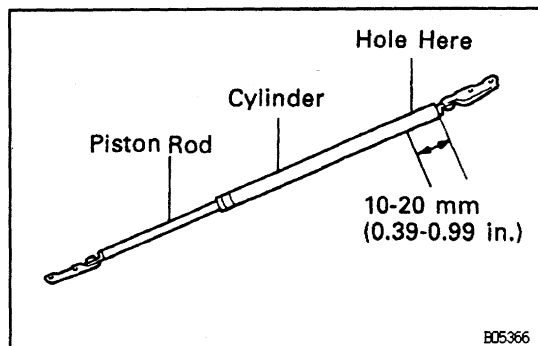


BACK DOOR DAMPER STAY

B0008-01

NOTICE: Handling the damper.

- Do not disassemble the damper because the cylinder is filled with pressurized gas.
- If the damper is to be replaced, drill a 2.0 – 3.0 mm (0.079 – 0.118 in.) hole in the bottom of the removed damper cylinder to completely release the high-pressure gas before disposing of it.
- When drilling, chips may fly out so work carefully.
- The gas is colorless, odorless and non-toxic.
- When working, handle the damper carefully. Never score or scratch the exposed part of the piston rod, and never allow paint or oil to get on it.
- Do not turn the piston rod and cylinder with the damper fully extended.

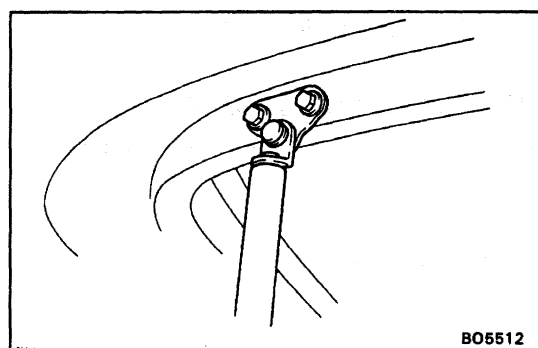

DAMPER STAY REMOVAL

B00U1-02

REMOVE DAMPER STAY

- Remove 2 bolt and the damper stay upper end from back door.
- Remove 2 bolts and the damper stay lower end from body.

DAMPER STAY INSTALLATION

B00U2-02

INSTALL DAMPER STAY

- Install damper stay upper end to back door with 2 bolts.
- Install damper stay lower end to body with 2 bolts.